



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Adams

Parts Manual

550

Motor Grader

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
ADAMS OR IT'S SUCCESSORS. ADAMS AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

AD-P-550 GRDR

ADAMS MOTOR GRADER NO. 550

HOW TO USE THIS PARTS LIST


First refer to the illustration below to obtain the reference number of the main assembly on which the part wanted is used; then refer to the reference number in the index on following page, which will give you the page number on which the main assembly is illustrated. After locating the illustration of the assembly, identify the part wanted; then refer to the reference number of the part in the description following the illustration to obtain part number, description and quantity used. An alphabetical index to the description pages follows the index to assembly illustrations for your further guidance in locating parts wanted.

The reference numbers shown on the illustrations are merely to assist in locating the parts in the list and should never be used for ordering parts; always use the part number which is shown in the list following each illustration.

WHEN ORDERING PARTS: Show part number, complete description, also model number and Adams serial number of grader on which parts will be used; when parts are for the engine the engine serial number must also be shown.

Standard hardware items (such as bolts, nuts, washers, cap screws, etc.) do not have part numbers but are either shown in the illustration and description by reference number or are indented in the description under the parts with which they are used. When ordering standard hardware items give complete description and specifications as shown in the list. All bolts (both standard and special bolts with part numbers) are furnished with nut and all drilled bolts are furnished with nut and cotter pin.

The engine used in the Adams Motor Grader No. 550 is a modification of an International Harvester Company Model UD-16 Unit.

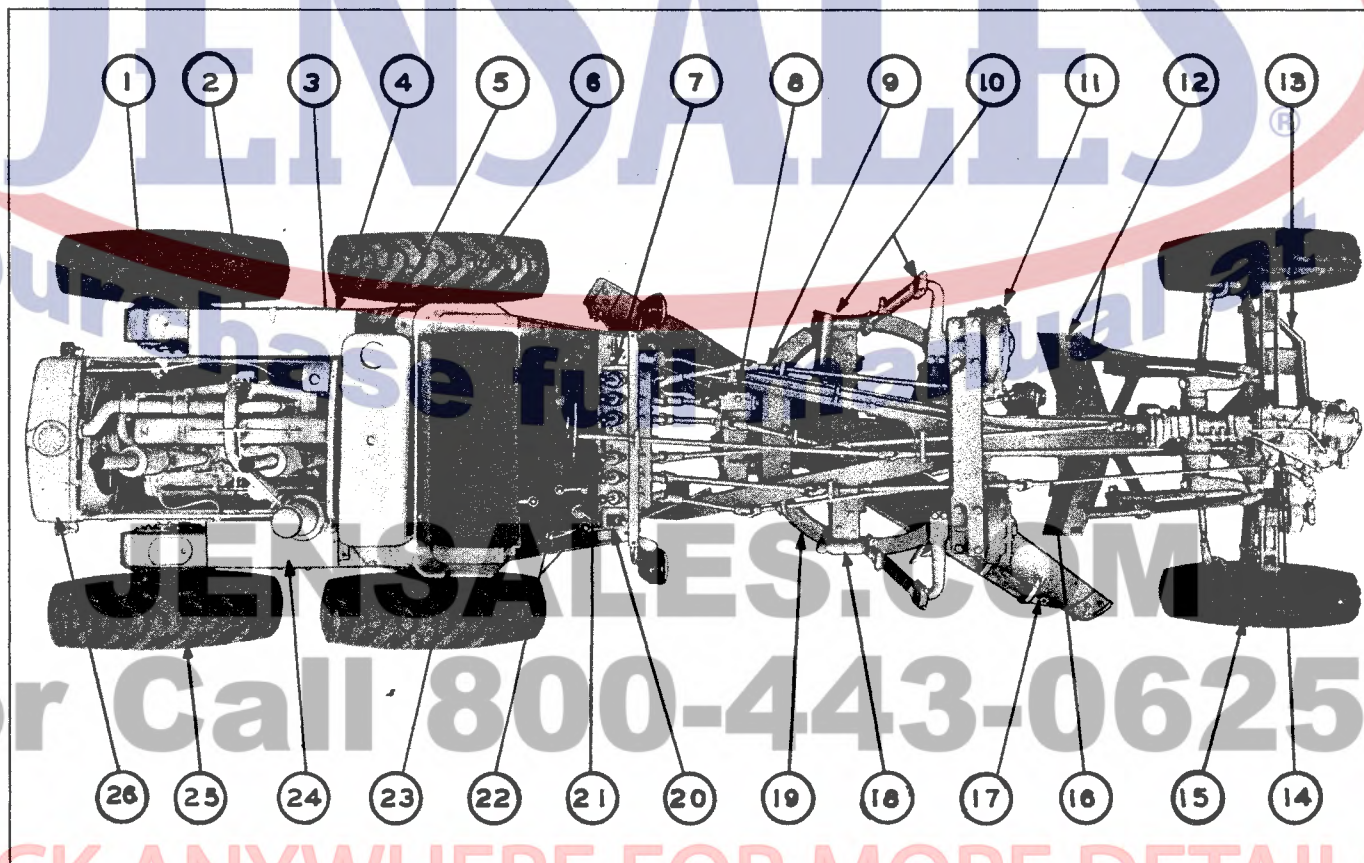

REFERENCE CHART IDENTIFYING MAIN ASSEMBLIES

To locate the part wanted, first locate the main assembly in which part is used in above illustration. Then refer to index on page 2, which will give you the page number on which parts of the assembly are illustrated.

ALWAYS GIVE MODEL AND SERIAL NUMBER

INDEX TO ASSEMBLY ILLUSTRATIONS IN FOLLOWING PAGES

(Reference numbers below correspond to those in illustration on page 1)

REF. NO.	DESCRIPTION ASSEMBLY	PAGE NO.
1	Tandem, R.H. and L.H.	46
2	Transmission and Final Drive	56
	Rear Axle Carrier	55
3	Transfer Drive	60
	Clutch, Clutch Brake and Controls	64
4	Tools	106
5	Fuel Tank and Connections	82
	Gasoline Tank, Strainer, Pipe and Connections	162
6	Brake Shoes, Backing Plate Assembly and Wheel Cylinder	48
7	Power Control Box, Drive and Propeller Drive Shaft	42
8	Lateral Shift Mechanism and Control	38
9	Main Frame	8
10	Blade Lift and Lateral Shift Links	37
11	Blade Lift Mechanism, R.H. and L.H. and Controls	34
12	Scarifier	84
	Scarifier Lift Mechanism and Control	86
13	Leaning Wheel Front Axle	10
	Leaning Wheel Housing	14
14	Power Steering Assembly and Manual Steering	15A, 16, 20, 22, 24
15	Front Wheels	13
16	Front Leaning Wheel Control	12
17	Moldboard and Extensions	26, 29
	Blades and Boots, R.H. and L.H. - Extension Blades	26, 29
18	Drawbar	26
	Circle Reverse and Transfer Housing Assembly and Controls	30
19	Circle	26
20	Hand Brake, Throttle and Cocking Lever Controls	70
21	Foot Brake Control and Master Brake Cylinder	52
22	Gear Shift Control and Overdrive Control	68
23	Roadster Cab and Platform	74
	Cab Enclosure	80
	Cab Top	78
24	Starting and Lighting	96, 100
	Generator (Standard and Special)	96, 99, 100
	Horn	96, 100
	Lights, Head - Tail	96
	Solenoid	96, 100
	Starting Motor	96, 100
	Voltage Regulator	96, 100
	Windshield Wiper	103
25	Rear Wheels	13, 46
26	Engine	108-165
	Air Cleaner, Air Pre-Cleaner and Connections	160
	Carburetor	140
	Crankcase and Related Parts	124
	Crankcase Oil Pan and Lubricating Oil Pump	118
	Crankshaft and Related Parts	120
	Cylinder Heads and Related Parts	114-117
	Fuel Filter	143
	Hood, Hood Side Doors, Panel, Etc.,	164
	Hour Meter	104
	Lubricating Oil Filter	122
	Magneto	136
	Magneto Drive and Bracket	135
	Manifolds, Intake and Exhaust Pipes, Injection Pump Breather and Mufflers	132
	Oil Gage Line Assembly, Oil Pressure and Heat Indicators	70
	Pump, Injection	144-158
	Radiator and Connections	108
	Spark Plugs and Cables	130
	Starting Mechanism	128
	Water Pump, Fan, Thermostat and Water Outlet Header	112

ALWAYS GIVE MODEL AND SERIAL NUMBER

ALPHABETICAL INDEX

DESCRIPTION	PAGE NO.
Air Cleaner and Connections	160,161
Air Pre-Cleaner Assembly	160
Axle Carrier Assembly, Rear	55
Axle, Front	10-12
Axle, Rear	55
Blade Lift Links	37
Blade Lift Mechanism and Controls, R.H. and L.H.	34-36
Blades and Boots, R.H. and L.H. (Moldboard)	26-28
Blades and Moldboard Extensions	29
Brake, Hand	70-73
Brake and Master Cylinder, Foot	52-54
Brake Control, Foot	52-54
Brake Control, Hand	70-73
Brake Mechanism, Clutch	64-66
Brake Shoe Assembly	48-50
Brake Wheel Cylinder	48-50
Cab, Roadster	74-76
Cab Doors	80-82
Cab Enclosure	80-82
Cab Top	78,79
Cables, Spark Plug	130,131
Camshaft and Related Parts	124-127
Carburetor	140-142
Carrier Assembly, Rear Axle	55
Choke Control	140-142
Circle	26-28
Circle Reverse Control	30-32
Circle Reverse and Transfer Housing Assemblies	30-32
Cleaner and Connections, Air	160,161
Clutch and Controls	64-66
Clutch Brake Mechanism	64-66
Connecting Rods	120-122
Controls:	
Blade Lift	34-36
Choke	140-142
Circle Reverse and Transfer	30-32
Clutch	64-66
Cocking Lever	70-73
Foot Brake	52-54
Gear Shift	68,69
Hand Brake	70-73
Lateral Shift	38-40
Leaning Wheel	12
Overdrive	68,69
Power Box	42-45
Scarifier Lift	86-88
Steering Power and Manual	15A-19
Throttle	70-73
Crank, Starting	120-122
Crankcase and Front Cover	124-127
Crankcase Oil Pan	118,119
Crankshaft and Related Parts	120-122
Cylinder, Brake, Wheel	48-50
Cylinder, Foot Brake Master	52-54
Cylinder Heads	114-117
Cylinder Sleeves	120-122
Decorations, Hood Side	164,165

(Continued)

ALWAYS GIVE MODEL AND SERIAL NUMBER

ALPHABETICAL INDEX (Continued)

DESCRIPTION	PAGE NO.
Distributor	136-139
Doors, Cab	80-82
Doors - Panel (Hood Side)	164,165
Drawbar	26-28
Drive and Bracket, Magneto	135
Drive Assembly, Final	56-59
Drive Assembly, Power Control Box	42-45
Drive Assembly, Pump (Power Steering)	22,23
Drive Assembly, Transfer	60-62
Drive Pulley, (Fan)	120-122
Drive Shaft Assembly, Power Control Box, Propeller	42-45
Electrical Equipment	96-102
Enclosure Cab	80-82
Engine	108-165
Engine Support, Front	124-127
Exhaust Pipe	132-134
Fan	112,113
Fan Drive Pulley	120-122
Filter Fuel	143
Filter, Lubricating Oil	122,123
Final Drive Assembly	56-59
Flywheel	120-122
Flywheel Housing	124-127
Foot Brake, Controls and Master Cylinder	52-54
Frame, Main	8,9
Front Axle	10-12
Front Engine Support - Front Cover (Crankcase)	124-127
Front Leaning Wheel Control	12
Front Leaning Wheel Housing Assembly	14,15
Front Wheel	13
Fuel Filter	143
Fuel Tank and Connections (Diesel)	82,83
Gage Line Assembly, (Oil)	70-73
Gasoline Tank, Strainer, Pipe and Connections	162,163
Gear Shift Control	68,69
Generator (12 volt - 17 amp) (Standard)	96-102
Generator (12 volt - 25 amp) (Special)	99
Glass for Cab Enclosure	80-82
Hand Brake and Control	70-73
Head Lights, R.H. and L.H.	96-98
Heat Indicator	70-73
Hood, Side Doors, Panel and Decorations	164,165
Horn	96-102
Hour Meter	104,105
Index, Numerical	166-174
Indicators - Heat and Oil Pressure	70-73
Injection Pump Breather	132-134
Lateral Shift Links	37
Lateral Shift Mechanism and Control	38-40
Leaning Wheel Control, Front	12
Leaning Wheel Housing Assembly, Front	14,15
Lift Links, Blade	37
Lift Mechanism and Controls, R.H. and L.H. Blade	34-36
Lift Mechanism and Control, Scarifier	86-88
Lighting and Starting Equipment	96-102
Lights, R.H. and L.H. Head - Tail	96-98
Lubricating Oil Filter	122,123

(Continued)

ALWAYS GIVE MODEL AND SERIAL NUMBER

ALPHABETICAL INDEX (Continued)

DESCRIPTION	PAGE NO.
Lubricating Oil Pump	118,119
Magneto	136-139
Magneto Drive and Bracket	135
Main Frame	8,9
Manifolds - Intake and Exhaust	132-134
Manual Steering Gear and Control	15A-15C
Master Cylinder, Foot Brake	52-54
Moldboard, Blades and Boots, R.H. and L.H.	26-28
Moldboard Extension	29
Motor, Starting	96-102
Motor Panel (Rear) and Lower Hood Sides	164,165
Motor Supports, Rear	67
Muffler	132,133
Numerical Index	166-174
Odometer	104,105
Oil Filter, Lubricating	122,123
Oil Gage Line Assembly and Pressure Indicator	70-73
Oil Pan, Crankcase	118,119
Oil Pump, Lubricating	118,119
Overdrive Control	68,69
Panel - Rear Motor	164,165
Pistons	120-122
Platform	74-76
Plugs - Cables, Spark	130,131
Power Control Box, Drive and Propeller Drive Shaft Assembly	42-45
Power Steering Gear and Control	16-19
Pre-Cleaner Assembly, Air	160
Propeller Drive Shaft Assembly, Power Control Box	42-45
Pulley, Drive (Fan)	120-122
Pump Assembly (Power Steering)	24,25
Pump Breather, Injection	132-134
Pump Drive Assembly (Power Steering)	22,23
Pump (IH)	144-160
Camshaft Unit	152,153
Control Lever	151
Distributor Valve Block	152,153
Fuel Pipes	158-160
Fuel Return Pipe	152,153
Governor Fork	156,157
Governor Fork Shaft	156,157
Governor Shaft	148-150
Governor Spring	146-148
High Pressure Pipes	152,153
Housing	156,157
Housing Cover	146-148
Injection Nozzles	158-160
Injection Pump Gear	158-160
Oil Filler	146-148
Plunger	148-150
Pump Flange	154,155
Pump Primary	144,145
Rack	154,155
Scavenging Valve	154,155
Torque Control	146-148
Pump, Lubricating Oil	118,119
Pump, Tire	92-94
Pump, Water	112,113
Radiator and Connections	108-110
Radiator Shutter	90,91

(Continued)

ALWAYS GIVE MODEL AND SERIAL NUMBER

ALPHABETICAL INDEX (Continued)

DESCRIPTION	PAGE NO.
Rear Axles and Axle Carrier Assembly	55
Rear Motor Panel	164,165
Rear Motor Supports	67
Rear Wheel	13,46,47
Rear Window Assembly	80-82
Regulator, Voltage	96-102
Reservoir Tank, Tubes, Fittings and Connections (Power Steering)	20,21
Reverse and Transfer Housing Assemblies and Controls, Circle	30-32
Roadster Cab	74-76
Rods, Connecting	120-122
Scarifier	84,85
Scarifier Lift Mechanism and Control	86-88
Shift Control, Gear	68,69
Shift Link, Lateral	37
Shift Mechanism and Control, Lateral	38-40
Shutter, Radiator	90,91
Side Doors and Decorations (Hood)	164,165
Sleeves, Cylinder	120-122
Solenoid	96-102
Spark Plugs and Cables	130,131
Starting Crank	120-122
Starting and Lighting Equipment	96-102
Starting Mechanism	128-130
Starting Motor	96-102
Starting Valves	114-117
Steering Gear and Control, Manual	15A-15C
Steering Gear and Control, Power	16-19
Strainer, Gasoline	162,163
Tail Lights	96-98
Tandem Assembly, R.H. and L.H.	46,47
Tank and Connections, Fuel	82,83
Thermostat	112,113
Throttle Control	70-73
Tire Pump	92-94
Tools	106,107
Transfer Drive Assembly	60-62
Transfer Housing Assembly and Control, Circle Reverse	30-32
Transmission	56-59
Valve Levers and Mechanism	114-117
Valves, Starting	114-117
Voltage Regulator	96-102
Water Outlet Header	112,113
Water Pump	112,113
Wheel, Control, Front Leaning	12
Wheel, Front	13
Wheel, Housing Assembly, Front Leaning	14,15
Wheel, Rear	13,46,47
Wheel Cylinder, Brake	48-50
Wheel Equipment	13,46,47
Window Assembly, Rear	80-82
Windshield Wiper	103

CLICK ANYWHERE FOR MORE DETAILS