



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Allis Chalmers

Operator's Manual

7580 Diesel

4 Wheel Drive

S/n 0-2001

JENSALES.COM

or Call 800-443-0625

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
ALLIS CHALMERS OR IT'S SUCCESSORS. ALLIS CHALMERS AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

AC-O-7580 ERLY

Operator's Manual

To Our Customer	1	Foot Throttle	48
User's Responsibility - Warranty	2	Steering Wheel Tilt Lever	48
Contents	3	Power Steering	48
Battery Adjustment Policy	4	Operator's Seat	49
Safety	5	Safety Belt	49
General Information	10	Range Transmission Shift Lever	50
Specifications	11	Position Control Lever	50
Lubrication and Service		PTO Clutch Lever	50
Time Interval Chart f/Service Items	18	Traction Booster Control Lever	51
Engine	18	Remote Cylinder Control Levers	51
Lubrication and Service Guide	19	Remote Cylinder Outlet Flow Control Adjustment	51
Diesel Fuel	20	Tractor Cab Controls	
Rules for Handling Fuels	20	Air Filter	52
Fuel Storage	21	Cab Pressure	52
Tractor Fuel Tank Filler Cap	21	Heater & Air Conditioner Option	52
Cooling System	22	Windshield Wiper Switch	53
Cooling System Conditioner	22	Rear View Mirror	53
Engine Oil	23	Fuel Tank	53
Engine Oil Filters	24	Operation	
Transmission & Drop Box Oil	25	Starting the Engine	56
Transmission & Drop Box Filter	27	Diesel Starting Fluid	56
Front Axle Housing Oil	28	Fast Warm-Up Period	56
Differential and Final Drive Oil	30	Stopping The Engine	56
Differential and Final Drive Oil Filters	31	Starting Ground Travel	56
Three-Point Hitch - Lube	33	Break-In Period	57
Steering & Pivot - Lube	33	Drawbar - Three-Point Hitch	58
Drive Shafts - Lube	34	Three-Point Hitch	59
Alternator	35	Sway Blocks	60
Batteries	37	Draft Arms	60
Servicing Air Cleaner Element	39	Lift Links	60
Inspecting The Cleaned Filter Element	39	Upper Link - Beaming Tube	60
Inspecting Air Induction System	39	Quick Hitch Coupler	61
Reinstalling The Filter Element	40	Modifying Implement Hitch	61
Safety Filter Element	40	Attaching Implement to Quick Hitch	63
Fuel Filter	40	Removing Implement From Quick Hitch	63
To Bleed The System	40	PTO Operation	63
Crankcase Breather Tube	41	Tires	64
The Turbocharger	41	Weighting the Tractor	65
Traction Booster Linkage	41	Adjustments	
Tractor Storage	41	Torsion Bar PreLoad Adjustment	68
Service Tips	42	Traction Booster Linkage Adjustment	68
Operating Controls and Instruments		Sensitivity Adjustment	69
Temperature & Fuel Gauge	44	Hand Lever Friction Adjustment	69
Generator Warning Light	44	Pressure Release Adjustment	69
Engine Oil Pressure Warning Light	45	Remote Flow Control Adjustment	70
Transmission Oil Temperature Warning Light	45	Valve Lash	71
Rear Housing Oil Temperature Warning Light	45	Fan Belt	71
Turn Signal Indicator	45	Wheel Treads (Power Shift)	72
Hydraulic Oil Filter Warning Light	45	Wheel Treads (Non-Power Shift)	72
Transmission Oil Pressure Warning Light	45	Rim & Wheel Combination	74
Transmission Oil Filter Warning Light	45	Wheel Bushing Torque	74
Operation Meter	45	Foot Clutch Safety Start Switch	75
Key Switch	45	Wiring Diagrams	76
Warning Light Check	46	Miscellaneous, Optional & Extra Equipment	81
Starting Switch	46	Liquid Ballast in Tractor Tires	82
Light Switch	46	Wheel Weights	83
Fuel Shut-Off	46	Wheel Guards	83
Throttle Lever	46	Roll Over Protective Cab w/Pressurizer	84
Flashing Warning Lights	46	Air Conditioner Option	85
Red Reflectors	47	8 Track Tape Player	87
Transmission Gear Shift Lever	48	Radio	87
Power Director HI & LO Shift Buttons	48	Cooling Cores	87
Clutch Pedal	48	Re-Installation of ROPS Cab	88
Brake Pedal	48		



THE ALLIS-CHALMERS NEW EQUIPMENT BATTERY SERVICE ADJUSTMENT POLICY

1. If within a period of 90 DAYS after day of sale to the original user, an Allis-Chalmers new equipment battery becomes unserviceable (not merely discharged) in normal use, due to defective material or workmanship, the Allis-Chalmers Corporation will replace it with an equivalent new Allis-Chalmers battery, without charge, to the original user.
2. If after the expiration of such 90 DAYS but before the expiration of 24 months from date of sale to the original user (each such month being designated herein as a unit of service) an Allis-Chalmers new equipment battery becomes unserviceable (not merely discharged) in normal use, due to defective material or workmanship, it will be replaced for the original user, in exchange for the unserviceable battery, with an equivalent new Allis-Chalmers battery at an adjusted price. This adjusted price shall be determined by applying to the then current retail price of the new battery, the percentage of the maximum (24) units of service which was received from the unserviceable battery.

LIMITATIONS

No-charge replacements or adjustments under this policy may be made by any authorized Allis-Chalmers Agricultural Equipment dealer.

This policy does not cover the following:

1. Unserviceability due to abuse or neglect, failure to maintain recommended electrolyte level, fire wreckage, explosion, freezing, the addition to the battery of any chemical or solution other than approved water or battery grade sulfuric acid of proper gravity, the use of a group size smaller than the group size of the original equipment battery, or continued operation of the battery in an undercharged condition (below half charge — 1.190 sp. gr.).
2. Breakage of containers, covers or posts.
3. The cost of transportation, service calls, recharges or the use of rental batteries.

Proof of date of purchase is required for all claims. This policy is void if the date coding on the battery is removed or destroyed.

AE 5-73

GENERAL INFORMATION

GENERAL INFORMATION

READ THIS MANUAL CAREFULLY EVEN IF YOU HAVE OWNED SIMILAR TRACTORS. THIS MANUAL SHOULD BE KEPT AS A HANDY REFERENCE FOR MAINTENANCE AND LUBRICATION.

Allis-Chalmers tractors are built rugged to give a long, trouble-free life in many different work applications. These tractors are tough, however, it should be remembered that neglected maintenance and abuse will shorten the service life of the tractor and incur more repair expense.

Allis-Chalmers warranty does not cover parts failure caused by abuse or failure of the owner to properly maintain his tractor.



FIGURE A L.H. SIDE

RIGHT AND LEFT

When reference is made concerning the right and left of the tractor this is determined when sitting in the Operator's seat and facing the front of the tractor.

ENGINE MODEL & SERIAL NUMBER LOCATION FIGURE A

The engine Model and Serial Number is stamped on a nameplate located on upper left hand side of cylinder block. Example: 3D-1001.

TRACTOR MODEL & SERIAL NUMBER LOCATION FIGURE B

The model and serial number of your tractor is located on the rear L.H. side of the front frame.

The tractor model and serial number are linked together as follows: Example - 7580-1001.

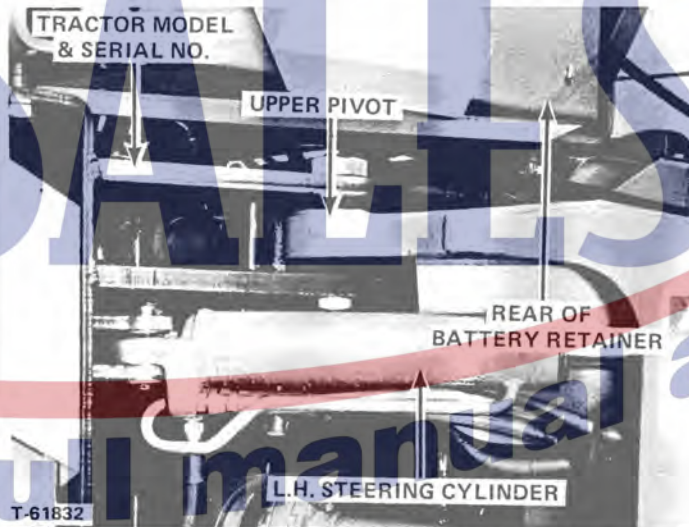


FIGURE B L.H. SIDE

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS