



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Operator's Manual

1060

Combine

Operator's Manual

purchase full manual at

JENSALES.COM

or Call 800-443-0625

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-O-1060COMB

TO THE PURCHASER

Your new machine is one of many quality products designed to provide economical and dependable performance for today's modern farming.

As with any other machine, it must have regular care to serve you best. It must be lubricated at specified intervals, adjusted occasionally and operated and maintained by a person completely familiar with the equipment. For these reasons, you are furnished with an operator's manual. Read it thoroughly and make it your guide.

As your Authorized CASE Dealer, we stock Genuine CASE parts, manufactured with the same precision and skill as the original equipment. Our factory trained staff knows the best and most recent methods of servicing CASE equipment and is ready and able to help you.

Should you require additional aid or information, please contact us.

MANUAL PREVIEW

Your Authorized Case Dealer
JENSALES®

To insure efficient and prompt service, please furnish us with the Model and Serial Number of your machine in all correspondence or contacts:

Fill in your Model and Serial Number for future reference.

purchase full manual at

JENSALES.COM

BLOCK MECHANICAL OR HYDRAULIC OPERATING COMPONENTS TO PREVENT ACCIDENTAL LOWERING; LOWER TO GROUND WHEN MAKING ADJUSTMENTS IN THOSE AREAS; AND ALWAYS LOWER TO GROUND WHEN EQUIPMENT IS IDLE.

or Call **800-443-0625**

The J. I. Case Company reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

CLICK ANYWHERE FOR MORE DETAILS

INTRODUCTION

CLICK ANYWHERE FOR MORE DETAILS



Figure 1. Model 1060 Self Propelled Combine

1060 OPERATORS MANUAL

The CASE Model 1060 Self-Propelled Combine is a self-contained unit, easily adaptable to various crops and field conditions. Used as a standard machine or with a full complement of attachments, this combine provides the necessary speed, power and serviceability; yet maintains low operating cost and trouble-free operation.

This manual is provided with the express purpose of acquainting you with your new combine. It is suggested that it be carefully studied and kept on hand for reference.

It is divided into the different sections of the combine to better explain the operation of each section alone and in conjunction with the other sections. Along with these, sections on specifications, preventive maintenance, safety and attachments are provided.

MANUAL PROCEDURE

References made to the 'right-hand' and 'left-hand' sides of the combine are so designated when facing the direction the machine will travel in the field.

Broken arrows (----->), used in some of the illustrations, designate a part or area of the machine NOT visibly shown in the illustrations.

CLICK ANYWHERE FOR MORE DETAILS

SERIAL NUMBERS

CLICK ANYWHERE FOR MORE DETAILS



Figure 2. Combine Serial Number Location



Figure 3. Header Serial Number Location



Figure 4. Chrysler Engine
Serial Number Location



Figure 5. CASE Engine
Serial Number Location

or Call 800-443-0625

ALWAYS GIVE SERIAL NUMBERS OF

HEADER, COMBINE, AND ENGINE WHEN CONTACTING

DEALER REGARDING PARTS AND/OR REPAIRS

CLICK ANYWHERE FOR MORE DETAILS

OVER ALL DIMENSIONS

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW



Figure 6. Front View of Model 1060 Combine

purchase full manual at

JENSALES.COM


or Call 800-443-0625



Figure 7. L. H. Side View of Model 1060 Combine

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

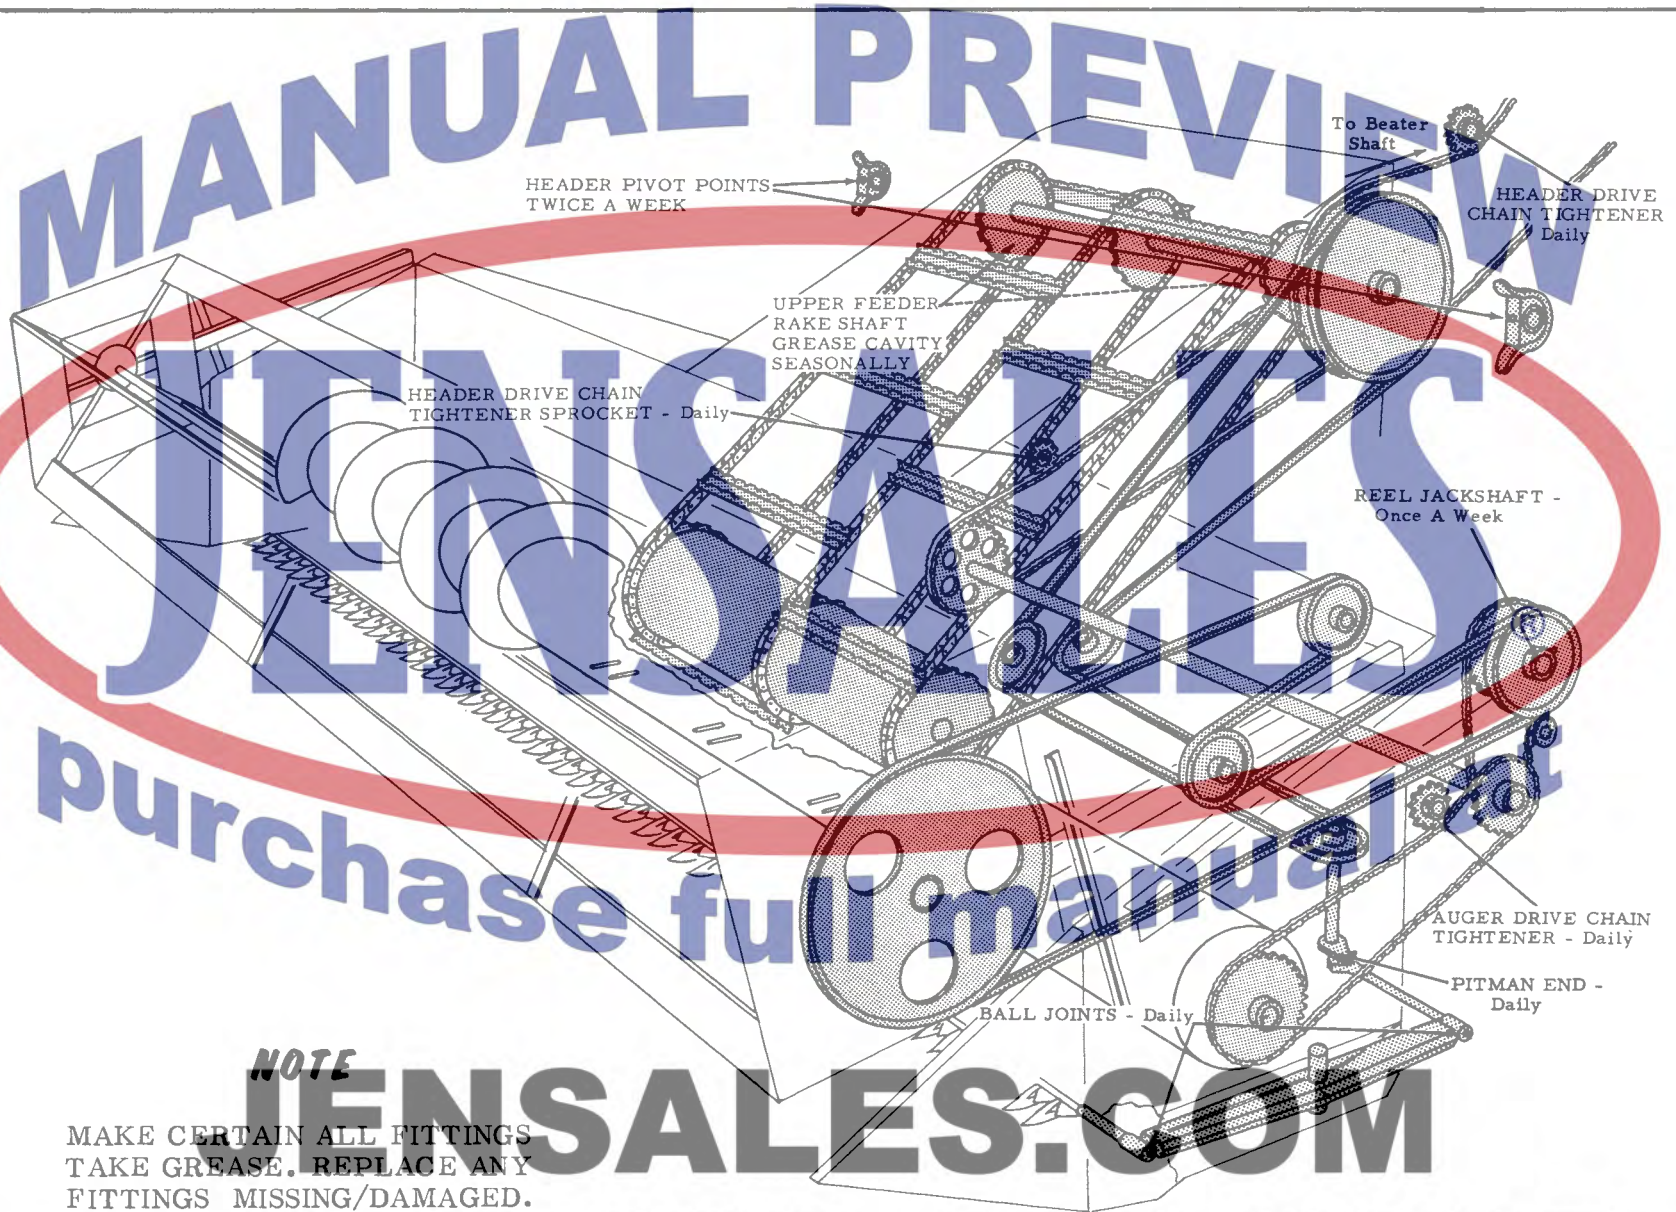

or Call 800-443-0625

Figure 8. Header Lubrication

CLICK ANYWHERE FOR MORE DETAILS