



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J. I. Case

Parts Manual

1175

Agri-King

Volume 1 of 2

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-P-1175

Parts Manual


CASE 1175 AGRI-KING TRACTOR

PARTS CATALOG NO. C1201

Hi-Liter 2000

CLICK ANYWHERE FOR MORE DETAILS

NOTE: This Parts Catalog replaces the previous issue No. B1201 which is obsolete and should be discarded.

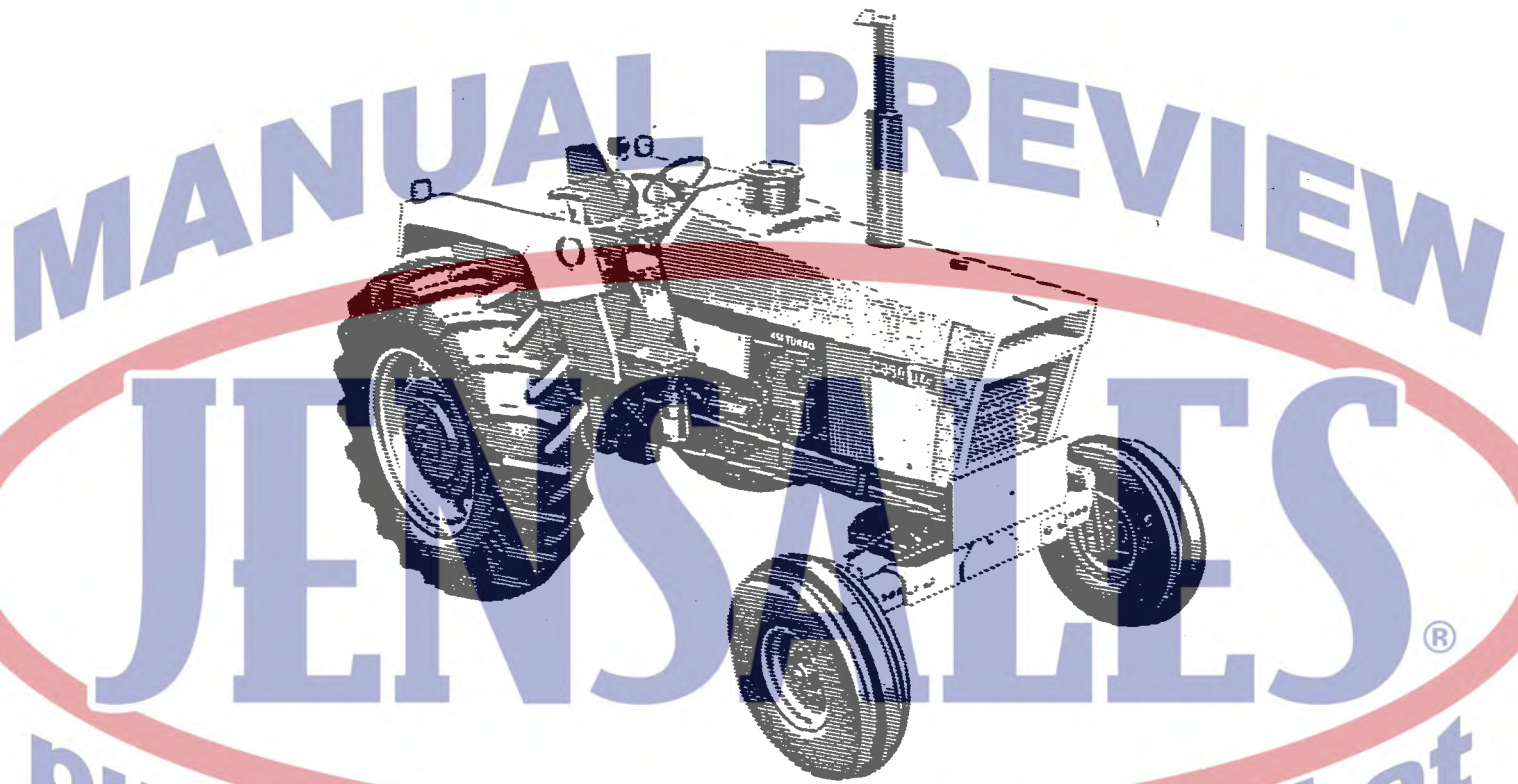

purchase full manual at

JENSALES.COM

or Call 800-724-3625



CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

ENGINE SECTION

AIR INTAKE AND EXHAUST SECTION

Air Cleaner	11,11B
Manifold	19
Muffler	19B
Pre-Cleaner	15,17
Pyrometer	61,61B

COLD WEATHER STARTING AIDS

Block Heater	27
Ether Starting Kit	13,13B
Manifold Heater	19

COOLING SECTION

Oil Cooler	7,7B
Radiator Baffles	5,5B
Radiator	5,5B
Water Manifold and Thermostat	9
Water Pump and Attaching Parts	9B

ENGINE SECTION

Camshaft	25B
Connecting Rods and Bearings	31
Crankshaft and Bearings	29
Cylinder Block	27,27B
Cylinder Head Cover	23
Cylinder Head	23
Engine Gasket Kits	35
Flywheel	29
Manifolds	19
Pistons and Rings	31
Rocker Shaft and Arms	25
Timing Gear Cover	49
Timing Gear	49
Turbo-Charger	21-21D
Valve Train	25

FUEL SECTION

Fuel Injection Filter System	47
Fuel Injection Pump	49-49F
Fuel Injection System	45
Fuel Injectors	49B
Fuel Lines	45
Fuel Tank	41,41B
Fuel Tank Supports and Covers	43
Throttle Linkage, Foot	39
Throttle Linkage, Hand	37

LUBRICATION SECTION

Oil Filter & Heater Exchanger	21F
Oil Pan	33
Oil Pump	33

Printed in U.S.A.

ALPHABETICAL INDEX

BASIC TRACTOR SECTION

AXLE SECTION

Front Axle	91-91D
Rear Axle	127,127B
Tie Rods	93-93B

BRAKE SECTION

Controls	131-131B
Differential	119-123
Hose and Liners	83-131
Hydraulic System	131B
Master Cylinder	131D
Parking Brake	123-125D
Power Brake Valve	133-135D
Power System	131
Slave Cylinder	131D

CAB SECTION

Acoustical Covers	265-267
Air Conditioner	321B-333
Air Filter	243
Blower	311-313
Compressors	335-337
Compressor Clutch	339
Compressor Drive	317
Compressor Mounting	319
Door	245-249
Electrical Wiring	297-309
Glass	343
Headliner	269-273
Idler Pulleys	321
Instrument Panel	301
Insulation	257-263B
Lights	309
Louvers	277
Mirrors	341
Plenum	
Air Conditioner	287-295
Blower	279-281
Heater	283-285
Protective Frame and Canopy	225-229
Radio	315-315B
Recirculation Grille	275
Rub Bar Kit	317
Sheet Metal	231-241
Windows	251-255
Windshield Wiper	309

DRAFT-O-MATIC SECTION
(SEE HYDRAULIC SECTION)

ALPHABETICAL INDEX

BASIC TRACTOR SECTION

DRAWBAR SECTION

Drawbar (With Hitch)	193
Drawbar (Without Hitch)	195

ELECTRICAL SECTION

Alternator	69-69D
Alternator Mounting	57B
Auxiliary Outlet	57D
Battery and Cables	59
Battery Box	59
Battery Supports	59
Block Heater	27
Electrical Equipment Mounting	57D
Electrical Wiring	53-55
Instrument Panel	203
Instruments	51,51B
Lamps and Lighting Equipment	
Cultivator Lamps	73
Flasher Equipment	73B-75
Head Lamps	71
Tail Lamp	71
Warning Lamp	75,75B
Light Switch	57D
Radio	75D
Solenoid	67
Starting Motor	63-65B
Starter Mounting	57
7 Point Auxiliary Connector	57D

HYDRAULIC SECTION

Auxiliary Valve	169-171F
Auxiliary Hydraulic Pump Kit	167D
Breakaway Couplings and Lines	185-187B
Draft-O-Matic	
Control Valve	173
Controls	155,157
Lower Sensing Linkage	179
Sensing Controls	157
Upper Sensing Linkage	177
Dual Pump	167
Dual Remote Valve	169-171F
Hydraulic System	159-161
Oil Cooler and Lines	7
Regulator Valve	165
Remote Controls	155B
Remote Cylinders	189-191
Rockshaft and Housing	175
Transmission Covers	163

ALPHABETICAL INDEX
BASIC TRACTOR SECTION

POWER TAKE-OFF SECTION

Brakes	147
Controls	143
Drive	147-149
Housing	143B-145B
Shaft	151,153

SHEET METAL SECTION

Battery Box	59
Battery Support	59
Console	213
Decal Panels	199
Decals	223-223D
Fenders	211-211B
Firewall	203
Grille	201
Handles	207-211
Hood	197
Hood Seals	203B
Implement Support	201
Instrument Panel	203
Louvers	199,199B
Platform	205
Seats	
Agri-King	219F-221F
Bucket	221H
Deluxe	215F-217B
Series 30	219-219D
Seat Conversion Attachment	215D
Seat Suspension	215,215B,217D,217F
Side Panels	199,199B
Side Rails	99
Slow Moving Vehicle Emblem	205
Steps	207
Tool Box	209

STEERING SECTION

Actuators	87,87B
Column	
Adjustable	79,79B
Rigid	77
Cylinder	87D
Hand Pump	85-85J
Hydrostatic System	81-83
Oil Filter	89
Relief Valve	89B

ALPHABETICAL INDEX

BASIC TRACTOR SECTION

THREE POINT HITCH

Adjustable Lift Links	181
Draft Arms	181
Upper Links	181
Quick Hitch Coupler	183,183B

TRANSMISSION SECTION







Brakes	121-123
Brake Controls	171
Brake Valve	133
Clutch	107
Clutch Controls	101
Clutch Housing	103
Counter Shaft	117
Differential	119,119B
Gear Shift Linkage	109B
Gear Shift Mechanism	111-113
Parking Brake	125
Planetary	129,129B
Rails and Forks	113
Range Shaft	105
Range Shift Linkage	109
Rear Axle	127-129
Reverse Idler Shaft	117
Sliding Gear Shaft	115
Transmission Covers	111
Transmission Housing	103

WHEEL SECTION

Front Wheels	95-97
Weights, Front End	99
Rear Wheels, Cast	137
Rear Wheels, Steel	141
Weights	139

JENSALES.COM

or Call 800-443-0625

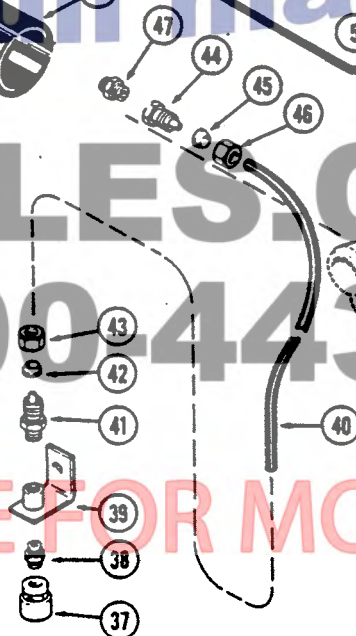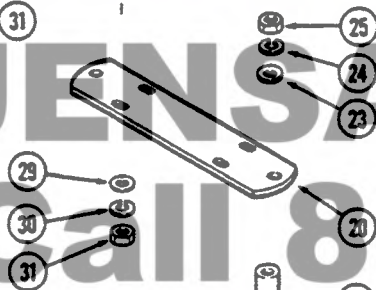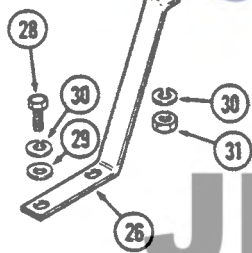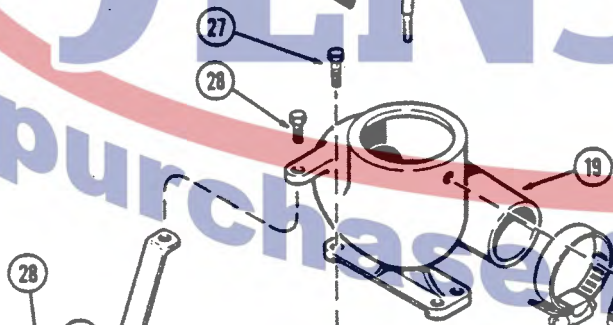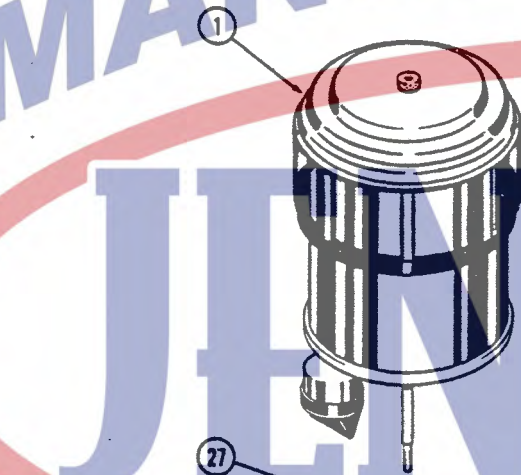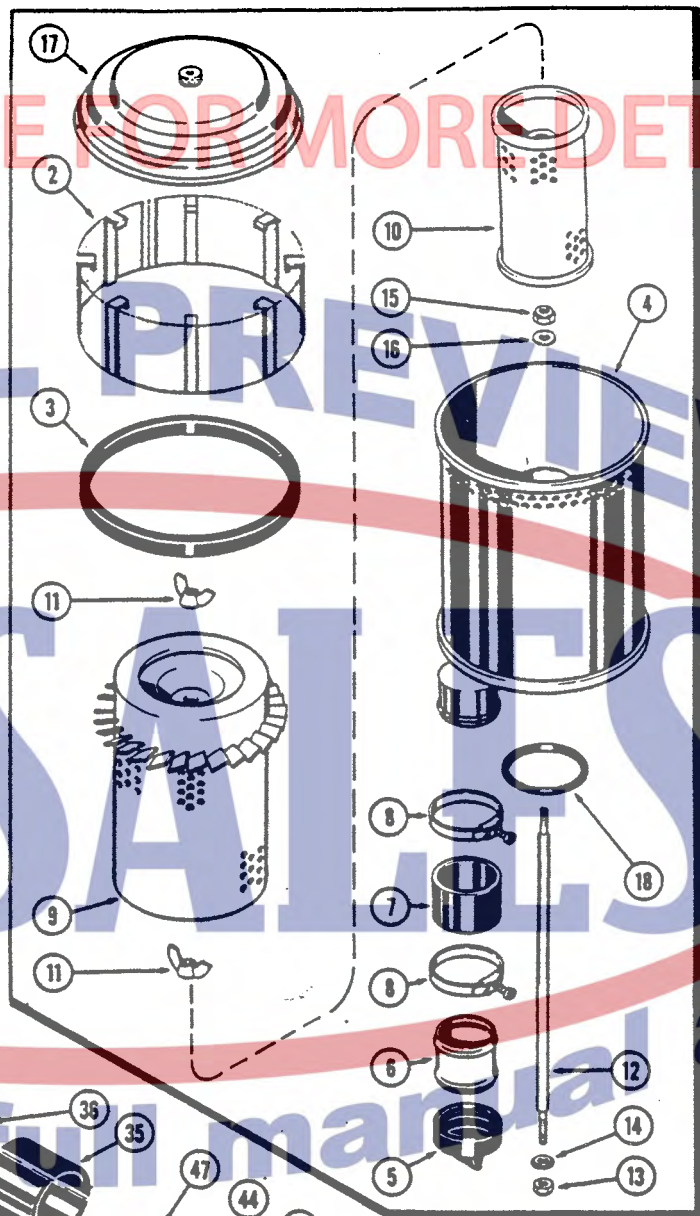

(451B) TURBO DIESEL ENGINE
AIR CLEANER

USED PRIOR TO TRAC. SER. NO. 8736747

REF.	PART NO.	DESCRIPTION	REQ'D
1	A 64551	CLEANER ASSY. - complete w/screen	1
2	A 62788	SCREEN - air cleaner	1
3	A 62808	GASKET - screen support (rubber)	1
	NSS	CLEANER ASSY. - (less screen)	1
4	NSS	BODY	1
5	L 30414	VACUATOR - valve	1
	A 43706	KIT - adapter, vacuator valve	1
6	NSS	ADAPTER	1
7	NSS	HOSE	1
8	NSS	CLAMP	2
9	A 43264	ELEMENT - cleaner, outer	1
10	A 43265	ELEMENT - safety	1
11	F 91761	NUT - wing (incl. gasket)	2
12	A 43266	POST - mounting	1
13	131- 52	NUT - lock, 3/8" N.C. hex.	1
14	A 43267	SEAL - (5/16 x 7/8 x 3/32" rubber & steel)	1
15	131- 81	NUT - lock, 7/16" N.F.	1
16	195- 105	WASHER - 1/2 x 1-1/4 x 5/64"	1
17	A 43263	COVER - air cleaner	1
18	A 43268	SEAL - body	1
19	A 61626	ELBOW - support, air cleaner	1
20	A 64573	BRACKET - mounting, air cleaner	1
21	A 64576	SPACER - mounting bracket (3-3/4" high)	2
22	A 64577	JACKSCREW - mounting bracket	2
23	195- 33	WASHER - 17/32 x 1-1/16 x 5/64"	2
24	92- 8	WASHER - lock, 1/2"	2
25	25- 108	NUT - 1/2" N.C. hex.	2
26	A 61627	BRACKET - air cleaner support	1
27	13- 618	BOLT - 3/8 x 1-1/8" N.C. hex.	3
28	13- 622	BOLT - 3/8 x 1-3/8" N.C. hex.	4
29	195- 25	WASHER - 13/32 x 13/16 x 1/16"	4
30	92- 6	WASHER - lock, 3/8"	1
31	25- 106	NUT - 3/8" N.C. hex.	5
35	A 61631	HOSE - air intake	1
36	214- 262	CLAMP - hose, 2-5/16" to 3-1/4"	2
37	A 62574	INDICATOR - air restriction	1
38	217- 194	NIPPLE - 1/8" x 1/8" P.T.	1
39	A 61940	BRACKET - indicator	1
40	A 61938	TUBE - indicator, air restriction	1
41	222- 5102	CONNECTOR - tube, 1/4" tube x 1/8" P.T.	1
42	222- 5185	SLEEVE - nylon, 1/4" tube	1
43	222- 5180	NUT - 1/4" tube	1
44	222- 5130	CONNECTOR - tube	1
45	222- 5185	SLEEVE - for 1/4" tube	1
46	222- 5180	NUT - for 1/4" tube	1
47	D 36264	FILTER - air restriction	1

NOTE: FOR PRE-CLEANER SEE PAGE 15 OR 17

CLICK ANYWHERE FOR MORE DETAILS



CLICK ANYWHERE FOR MORE DETAILS

A66503 AUXILIARY VALVE
USED PRIOR TO TRANS. SER. NO. 2465931

REF.	PART NO.	DESCRIPTION	REQ'D
	A 66503	VALVE ASSY. - auxiliary (Continued from Page 169D)	1
50	A 66469	SPOOL ASSY. - valve	2
51	211- 5	BALL - steel, 3/16" dia	1
52	A 57554	PLUNGER - inner, valve spool	1
53	A 57555	PLUNGER - outer, valve spool (drilled)	1
54	A 66472	SPRING - plunger	2
55	A 57546	ARM ASSY. - shift, lower spool	1
56	A 60105	SCREW - 1/4 x 1/4" N.C. hex. sckt. cup pt. set	1
57	A 60391	SHAFT - shift lever, lower spool	1
58*	A 30880	RETAINER - felt washer, outer shaft	1
59*	A 30879	WASHER - felt, outer shaft (3/4 x 1-1/16 x 1/4")	1
60*	A 30881	WASHER - seal, outer shaft (49/64 x 1-15/64 x 20 ga.)	1
61*	A 64837	"O" RING - outer, shaft, 3/4 x 15/16 x 3/32"	1
65	A 57547	ARM ASSY. - shift, upper spool	1
66	A 60105	SCREW - 1/4 x 1/4" N.C. hex. sckt. cup pt. set	1
67	A 60393	SHAFT - shift lever, upper spool	1
68*	A 30875	RETAINER - felt washer, inner shaft	1
69*	A 30853	WASHER - felt, inner shaft (1/2 x 15/16 x 1/4")	1
70*	A 27409	WASHER - seal, inner shaft (33/64 x 63/64 x 20 ga.)	1
71*	A 64836	"O" RING - inner shaft, 1/2 x 11/16 x 3/32"	1
	A 42888	KIT - seal, relief valve (not part of valve assy.)	1
74*	218- 5008	"O" RING - 3/4 x 59/64 x 1/8"	1
75*	A 34493	RING - pilot, relief valve	1
76*	A 17526	"O" RING - pilot relief valve, 5/8 x 3/4 x 1/16"	2
77	A 57553	PISTON - pilot relief valve	1
78	A 34382	SPRING - pilot relief valve	1
79	A 57556	PISTON ASSY. - pilot relief valve	1
81	A 57558	RETAINER - valve spring	1
82	A 61466	SPRING - valve	1
83	A 61467	SHIM - spring (.005")(See Note)	UAR
84	A 34849	SHIM - spring (.010")(See Note)	UAR
85	A 34390	SHIM - spring (.0329")(See Note)	UAR
85	A 34391	SHIM - spring (.0149")(See Note)	UAR
86	A 34817	SHIM - spring (.0149")(See Note)	1
87	A 34694	SHIM - spring (.0201")(See Note)	1
88	A 34392	PLUG - pilot relief valve	1
	A 43086	KIT - seal, valve overhaul (Incl. all items marked w/*)	1

NOTE: REFER TO TAG ATTACHED TO VALVE FOR SHIM DATA

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS



CLICK ANYWHERE FOR MORE DETAILS

A65326 AUXILIARY VALVE
1ST USED TRAC. SER. NO. 8709725

REF.	PART NO.	DESCRIPTION	REQ'D
A	65326	VALVE ASSY. - auxiliary (w/str. outlet fitting on R.H. side)	1
1	A 57534	BODY ASSY. - valve	1
2	NSS	SEAT - ball, check valve	4
3	NSS	SLEEVE - pilot, relief valve	1
4	221- 849	PLUG - pipe, 1/8" hex. socket	4
5	218- 5157	PLUG ASSY. - body port	1
6*	218- 5007	O-RING - 5/8 x 3/4 x 3/32"	1
7	A 57552	CAP - valve body	1
8*	A 76374	GASKET - cap	1
9	13- 414	SCREW - 1/4 x 7/8" N.C. hex.	4
10	92- 4	WASHER - lock, 1/4"	4
15	A 57565	HEAD ASSY. - R.H. valve	1
16	NSS	SEAT - valve head	2
17*	A 57561	GASKET - R.H. head	1
18	13- 628	BOLT - 3/8 x 1-3/4" N.C. hex.	2
18	13- 640	BOLT - 3/8 x 2-1/2" N.C. hex.	2
19	92- 6	WASHER - lock, 3/8"	4
26	A 62273	SEAT - thermal valve	2
27*	A 27891	O-RING - thermal valve	2
28	211- 3	BALL - thermal valve, 1/8" dia.	2
29	A 62272	GUIDE - ball, thermal valve	2
30	A 57396	SPRING - valve	2
35	A 57564	HEAD ASSY. - L.H. valve	1
36	NSS	SEAT - valve head	2
37*	A 57560	GASKET - L.H. head	1
38	13- 644	BOLT - 3/8 x 2-3/4" N.C. hex.	4
39	92- 6	WASHER - lock, 3/8"	4
40	A 64708	FITTING - outlet, remote hose (See Page 185D)	4
41*	218- 5008	O-RING - 3/4 x 59/64 x 1/8"	4
42	A 30877	SPRING - check valve	4
43	211- 13	BALL - check valve, 1/2" dia.	4
45	A 57559	SPOOL - auxiliary	4
46	A 27364	GUIDE - ball, check valve	4
47	A 27452	SPRING - check valve	4
48	211- 15	BALL - check valve, 5/8" dia.	4
49*	A 58602	O-RING - 15/16 x 1-1/8 x 3/32"	4

CONTINUED ON PAGE 171B

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS