



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Parts Manual

1294

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-P-1294

ILLUSTRATION AND TEXT

The arrangement of this parts catalog is for easy identification of Case parts. All parts are illustrated in "Exploded Views." This places each part in normal reference to each other. Reference numbers are used in the illustrations. These numbers are in reference to those on the text pages. The text pages list reference

GENERAL

1

ENGINE

2

FUEL

3

ELECTRICAL

4

STEERING

5

POWER TRAIN

6

BRAKES

7

HYDRAULIC

 
 
 
 
 
 
 
8

CHASSIS

9

**NUMERICAL
INDEX**

10

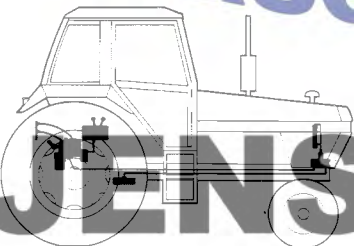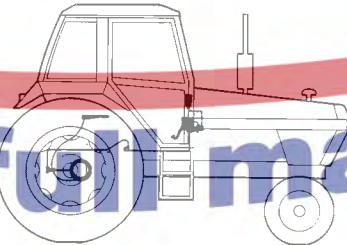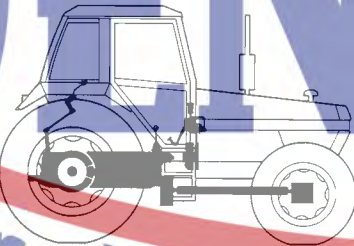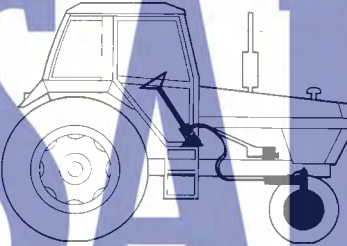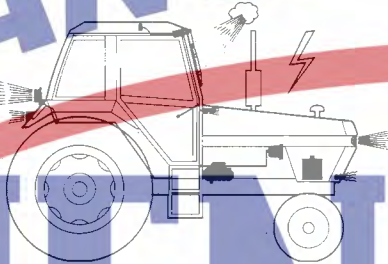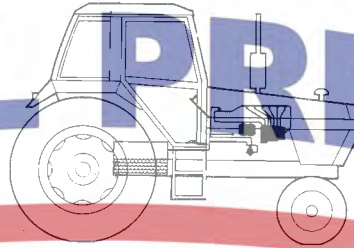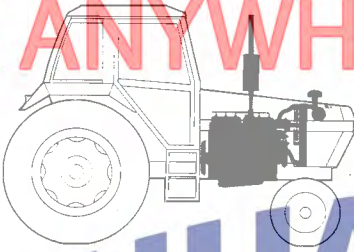

PART NO	PAGE	REF
A 141680	93	14
A 141684	297	18
A 141686	297	16
A 141692	189	1

1-III

GENERAL

1

CLICK ANYWHERE FOR MORE DETAILS

1294 TRACTOR
Parts Catalog

Pub 8-2191

This Catalog Replaces Pub 8-2190

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

1-VIII

1294 TRACTOR

SERIAL NUMBERS

When ordering use appropriate serial number as shown below. Serial number is shown in heading or parts description.

CLICK ANYWHERE FOR MORE DETAILS



MODEL AND PRODUCT
IDENTIFICATION NUMBER PLATE

JENSALES®

purchase full manual at

ENGINE SERIAL NUMBER

JENSALES.COM
or Call 800-448-0625

CLICK ANYWHERE FOR MORE DETAILS

CAB SERIAL NUMBER PLATE

ALPHABETICAL INDEX

- A**
- Air Cleaner 2-7
- Alternator Assembly 4-67
- Alternator and Supports 4-65
- Axle, Front - 2WD 5-107
- Axle, Front - MFD 5-109 through 5-119
- Axle, Rear 9-281
- Auxiliary Electrical Socket 4-57
- B**
- Ballast Weights and Frame, Front 9-283
- Ballast Weights, Rear Wheels 6-171
- Battery and Support 4-59
- Bevel Pinion Shaft, Gearbox 6-149
- Brake Hand (Park) 7-203,7-205
- Brake Master Cylinder 7-197
- Brake Pedals 7-193,7-197
- Brake Shoes and Drums 7-195,7-201
- Brake Slave Cylinder 7-199,7-201
- Brake Tubes 7-193,7-199
- C**
- Cab Accessories 9-347
- Cab Frame and
Fenders, etc. 9-325 through 9-339
- Cab Heater 9-341,9-343,9-345
- Cab Mounting and Steps 9-323
- Canopy, ROPS 9-289
- Clutch - Continuous 6-121,6-123,6-125
- Clutch - Independent 6-127 through 6-133
- Clutch Release Lever, Independent 6-183
- Clutch Release Mechanism -
PTO 6-175 through 6-181
- Console, Controls 8-221,8-223
- Crankshaft, Engine 2-21
- Cylinder Block 2-17,2-19
- Cylinder Head, Engine 2-13
- Cylinder Hitch System 9-253
- D**
- Decals 9-305 through 9-311
- Decals - Low Profile Special 9-309
- Differential, Rear Axle 6-159
- Differential - MFD 5-111
- Differential Lock and Controls 6-161,6-163
- Drawbar 9-271
- Drive Shafts - MFD 5-115
- Dump Valve, Hydraulic 8-217
- E**
- Engagement Lever, MFD 6-151,6-153
- Engine Hood and Hinge 9-291
- Engine Hood, Support
Frame and Panels 9-293
- Engine Stop Control 3-41
- Engine Throttle Controls 3-35,3-37
- F**
- Fan, Radiator 2-5
- Fenders and
Mountings 9-315,9-317,9-319,9-321
- Filter, Engine Oil 2-23
- Filter, Hydraulic 8-209
- Final Drive Housing and Covers 6-165
- Final Drive Gears and Shafts 6-169
- Final Drive - Low Profile Special 6-167
- Flow Rate Lowering Control 8-225,8-227
- Flywheel, Engine 2-21
- Footplates and Mountings 9-313
- Front Wheels - MFD 5-95
- Front Wheel - 2WD 5-75
- Front Wheels - Low Profile Special 5-81
- Fuel Feed Pump 3-29,3-31,3-33
- Fuel Injector Assembly 3-27
- Fuel Injection Pump 3-25
- Fuel Tank and Supports 3-43,3-45
- Fuse Box 4-57
- G**
- Gearbox Housing and Selectors 6-139
- Gearbox Gears and Shafts 6-147,6-149
- Gear Shift Levers 6-141,6-143,6-145
- Grille, Radiator 9-295
- H**
- Head Lamps 4-69
- Hitch System 9-253 through 9-263
- Hitch, Pick-up 9-273
- Horn 4-57
- Hubs, Front - MFD 5-113
- Hubs, Front - 2WD 5-103
- Hydraulic Controls 8-221,8-223
- Hydraulic Control Housing 8-219
- Hydraulic Control Valve 8-215
- Hydraulic Dump Valve 8-217
- Hydraulic Filter and Tubes 8-209
- Hydraulic Hoses and Couplings 8-247
- Hydraulic Lowering Control 8-225,8-227
- E**
- Electrical Wiring 4-47 through 4-53

ALPHABETICAL INDEX

H
 Hydraulic Pump 8-211
 Valves 8-235 through 8-249
 Hydraulic Selector Control 8-213
 Hydraulic Three-
 Way Valve 8-229,8-231,8-233
 Hydraulic Tubes 8-207,8-109
 Hydrostatic Power Steering - 2WD 5-87
 Hydrostatic Power Steering - MFD 5-89

I
 Injection Pump, Fuel 3-43
 Injectors and Tubes, Fuel 3-25,3-27
 Instrument Cluster 4-55
 Instrument Panel and Support .. 9-229,9-297

L
 Lamp, Head 4-69
 Lamp, Low Profile Special 4-75
 Lamps, Rear Flood 4-71
 Lamps, Side, Rear, Warning 4-73,4-77
 Lamps, Wiring and Reflectors -
 Low Profile Special 4-75
 Leveling Lever 9-255,9-257
 Lift Rod 9-259
 Lower Links 9-261

M
 Manifolds, Intake and Exhaust 2-9
 Mechanical Front Drive
 Axle - MFD 5-109 through 5-119
 Mechanical Front
 Drive - Transfer Box .. 6-151 through 6-157
 Muffler, Exhaust, Vertical 2-9
 Muffler, Exhaust, Downswept 2-11

P
 Pick-Up Hitch Attachment 9-273
 Pistons and Rings, Engine 2-21
 Planetaries - MFD 5-113
 Power Adjust Rear Wheels 6-173
 Power Takeoff 6-189,6-191
 Power Takeoff, Controls 6-185,6-187
 Pump, Engine Oil 2-23
 Pump, Hydraulic 8-211

R
 Radiator and Baffles 2-3
 Radiator Guards 9-283,9-285
 Ramshaft 9-253
 Ramshaft Bracket 8-251

R
 Ramshaft Cylinder 9-253
 Rear Axle Housing and Covers 9-281
 Rear Fender Mounting -
 Low Profile Special 9-321
 Rear Flood Lamps 4-71
 Rear Lamps 4-73,4-77
 Rear Main Frame and Covers 9-279
 Rear Wheels and Ballast Weights 6-171
 Remote Valve Assembly 8-249
 ROPS 9-289

S
 Seat Assembly 9-301,9-303
 Sensing Unit 9-265,9-267,9-269
 Side Lamps 4-73,4-77
 Silencer (Muffler), Exhaust 2-9
 Stabilizer Bars 9-261
 Starter Assembly 4-63
 Starter and Switches 4-61
 Steering Box, Manual Steering 5-83
 Steering Column, Power Steering 5-85
 Steering Cylinder - MFD 5-101
 Steering Cylinder - 2WD 5-99
 Steering - MFD (without cab) 5-89
 Steering - 2WD (without cab) 5-87
 Steering, Manual 5-81,5-83
 Steering - with cab 5-91,5-93,5-95
 Steering Pump and Reservoir
 Power Steering 5-97
 Stop Control, Engine 3-41

T
 Tachometer 4-55
 Thermostat, Cooling System 2-13
 Thermostart, Fuel System 3-29
 Three-Way Valve 8-229,8-231,8-233
 Throttle Control, Engine 3-35
 Timing Gears, Engine 2-15
 Tools and Tool Box 9-349
 Top Link 9-263
 Trailer Socket, Electrical 4-57
 Transfer Gearbox, Gears and
 Shafts - MFD 6-151 through 6-157

V
 Valve Mechanism, Engine 2-15

W
 Warning Lamps, Side and Rear 4-73
 Water Pump 2-5

1294 TRACTOR

1-XI

ALPHABETICAL INDEX

CLICK ANYWHERE FOR MORE DETAILS

Weights, Ballast, Rear Wheels	6-171
Weights, Front Ballast	9-283
Weights, Rear Wheels	6-171
Wheels, Front - MFD	5-119
Wheels, Front - 2WD	5-103
Wheels, Front - Low Profile Special	5-105
Wheels, Power Adjusted, Rear	6-173
Wheels, Rear	6-171
Wiring	4-47, 4-51, 4-53
Wiring - Low Profile Special	4-49

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS