



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Operator's Manual

1394

purchase full manual at

Operator's Manual

JENSALES.COM

or Call **800-443-0625**

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-O-1394

TABLE OF CONTENTS

TO THE OWNER	III	OPERATING INSTRUCTIONS	43
SAFETY	V-XIX	Run-In Procedure	43
Safety Rules	V	Before Operating The Tractor	44
Before Starting	V	Towing	45
Operation	VII	How to Transport the Tractor	45
Service	XVII	Operating Instruments	46,47
		Operating Lamps	48,49
HAND SIGNALS	XX,XXI	Operating Controls Tractor Without Cab	
DECALS	XXII-XXVI	Instrument Panel	50-55
SERIAL NUMBERS	I	Foot Pedals	54,55
DIESEL ENGINE SPECIFICATIONS	2-3	Levers, L/H Side	56-59
GENERAL SPECIFICATIONS	4-8	Levers, R/H Side	60-67
APPROXIMATE TRACTOR SPEEDS	9-12	Operating Controls Tractor With Cab	
FUEL SPECIFICATIONS	13	Instrument Panel	68-71
APPROXIMATE MEASUREMENTS	14-17	Foot Pedals	72,73
APPROXIMATE TRANSPORT WEIGHTS	14-17	Levers, L/H Side	74,75
TIRE AND WHEEL EQUIPMENT	18-21	Levers, R/H Side	76,77
TIRE ARRANGEMENTS - MFD	20	Controls Cab Roof	78,79
		Controls Cab	80-82
FRONT WHEEL TREAD POSITIONS - 2WD	22	Air Conditioning Operation	83,84
FRONT WHEEL TREAD POSITIONS - MFD	23,24	Operators Seat	85,86
REAR WHEEL TREAD POSITIONS	25	Seat Belt	87
POWER ADJUST REAR WHEEL TREAD POSITIONS	26	Amber Warning Lamps, Direction	
LUBRICATION	27-42	Turn Signals & SMV (North America) ...	88
Engine Hourmeter	27	Operating The Tractor On The Road (Noth America)	89
Diesel Engine Oil	27	Implement Warning Lamps, SMV Symbol (North America)	90
Lubrication Chart	28,29	Auxiliary Outlet Socket	91,92
Lubrication MFD Axle	30,31	Before Starting Engine	93
Grease Fittings	32,33	Starting Procedure	94,95
Engine Oil Change	34	Stopping the Engine	96,97
Engine Oil Filter Change	35	Cold Temperature Operation	98
Transmission Oil Level Check & Change	36	Power Shift Transmission	99-100
Transfer Gear Box Oil Level	37	Mechanical Shift Transmission	101-103
Hydraulic Oil Filter Change	38,39	Power Takeoff	104-105
Differential Oil Level - MFD	40	Operating Safety	106
Planetary Oil Level - MFD	41	Drawbar	107,108
Steering Filter Change	42	Pick-Up Hitch	109,110
		Combined Pickup Hitch and Drawbar	111-114
		Hitch Operation	115,116
		Lift Rod	117
		Mechanical Float	117
		Stabilizers	118
		Draft Sensing Unit	119
		Selector Dial	120
		Operating with Position	121
		Operating with Draft	122
		Remote Hydraulic Control	123-130
		Three-Way Valve	126
		Hydraulic Hose Couplers	130
		Front Axle Tread Adjustment 2WD	131-134
		Front Axle Adjustment MFD	135-139
		Rear Wheel Tread Adjustment	140

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

Tractor Ballast	141
Front End Weights	142
Rear Wheel Weights	143
Tire Liquid Ballast	144
Measuring Wheel Slip	145
ROLLOVER PROTECTIVE STRUCTURE (ROPS)	146-149

MAINTENANCE	150
First Oil Change at 20 Hours	151
Raising Engine Cover	152,153
Removing Front Panel	153
Removing Side Panels	154
Regular Maintenance Chart	155
Daily Inspection/10 Hour	156
50 Hour Service	157,161
100 Hour Service	162
200 Hour Service	162
400 Hour Service	163-169
800 Hour Service	170-172
Air Conditioning	182-185
Alternator	181
Auxiliary Battery	180
Battery	178,179
Fuses	173
Lamps	174-177
Optional Equipment	186
Trailer Brakes Kit	186
Hitch Assist Cylinder	186
CASE TECHNICAL MANUALS	189

MANUAL REVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

MANUAL PREVIEW

Your Authorized Case Dealer

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

1394 TRACTOR WITHOUT CAB

Figure 1

NOTE: The right-hand and left-hand of the tractor are the same as your right-hand and left-hand when you are in the tractor seat looking forward.

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

1394 TRACTOR WITH CAB

Figure 2

CLICK ANYWHERE FOR MORE DETAILS