



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Operator's Manual

1490

purchase full manual at

JENSALES.COM

or Call 800-443-0625

JENSALES

Operator's Manual

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. **J.I. CASE** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-O-1490

CONTENTS

	Page
TO THE OWNER.....	5
SAFETY RULES.....	7
HAND SIGNALS.....	14
DECALS.....	16
TRACTOR SERIAL NUMBERS.....	20
SPECIFICATIONS.....	22
INSTRUMENTS AND CONTROLS.....	42
OPERATING.....	83
MAINTENANCE.....	115
HIGH CLEARANCE TRACTORS.....	148

SPECIFICATIONS

DIESEL ENGINE SPECIFICATIONS.....	22
GENERAL TRACTOR SPECIFICATIONS.....	24
FUEL.....	27
BRAKE AND CLUTCH FLUID.....	27
GREASE.....	28
ANTI-FREEZE.....	28
APPROVED LUBRICANTS.....	29
TYRE SIZES, MAXIMUM LOADS AND PRESSURES.....	32
TYRE ARRANGEMENTS: 4WD TRACTORS.....	33
FRONT TREAD (TRACK) POSITIONS.....	34
REAR TREAD (TRACK) POSITIONS.....	35
TRAVEL SPEED CHART.....	37
APPROXIMATE MEASUREMENTS.....	41

INSTRUMENTS AND CONTROLS

	Page
OPERATING INSTRUMENTS: } ALL TRACTORS	42
WARNING LAMPS: }	44
OPERATING CONTROLS: CAB TRACTORS	46
OPERATING CONTROLS: FLAT DECK TRACTORS	52
OPERATING PEDALS: }	56
CONTROL LEVERS: } CAB OR FLAT DECK TRACTORS	58
OPERATOR'S SEAT: }	66
OPERATING CONTROLS: }	68
OPERATING PEDALS: }	70
CONTROL LEVERS: } STANDARD TRACTORS	72
OPERATOR'S SEAT: }	81
SEAT BELTS	82

OPERATING

ENGINE:	
Before Starting the Engine	83
Starting the Engine	84
Before Stopping the Engine	85
Stopping the Engine	85
HYDRA-SHIFT TRANSMISSION:	
Operating with Hydra-Shift Transmission	86
Using the Travel Speed Chart	86
SYNCHROMESH TRANSMISSION:	
Operating with Synchromesh Transmission	88
Using the Travel Speed Chart	88
BALLAST	90
MEASURING WHEEL SLIP	91
TREAD (TRACK) ADJUSTMENT: FRONT TREAD	92
TREAD (TRACK) ADJUSTMENT: REAR TREAD —	
POWER ADJUSTED	93

OPERATING

	Page
LINKAGE: JEFFES TYPE	94
Settings	94
Operating with Jeffes Linkage	95
LINKAGE: STANDARD TYPE	96
Settings	96
TELESCOPIC STABILISER BARS	97
LIFT ROD	98
MECHANICAL FLOTATION	99
PICK-UP HITCH	100
DRAWBAR	102
SENSING UNIT	104
SELECTOR DIAL	105
OPERATING WITH DRAFT CONTROL	106
OPERATING WITH POSITION CONTROL	107
THREE-WAY VALVE	108
DOUBLE ACTING TAKE-OFF VALVE	109
HOSE AND COUPLINGS	111
POWER TAKE-OFF (PTO)	112

MAINTENANCE

INTRODUCTION	115
FIRST OIL CHANGE AT 20/60 HOURS	115
SERVICE CHART: CAB OR FLAT DECK TRACTORS	116
SERVICE CHART: STANDARD TRACTORS	120
SERVICE CHART: 4WD TRACTORS	
David Brown Front Axle	124
Carraro Front Axle	125
DAILY INSPECTION	126
50 HOUR SERVICE	127
100 HOUR SERVICE	136
200 HOUR SERVICE	137
400 HOUR SERVICE	139
800 HOUR SERVICE	147

MAINTENANCE

	Page
BRAKE ADJUSTMENT.....	127
CLUTCH ADJUSTMENT	
Transmission } Cab or Flat Deck.....	128
PTO } Tractors	129
Transmission } Standard.....	130
PTO } Tractors	131
FUEL WATER TRAP	133
TRANSMISSION OIL.....	134
FRONT AXLE: 4WD DAVID BROWN.....	136
ENGINE OIL FILTER.....	137
FRONT AXLE: 4WD CARRARO	138
TRANSMISSION OIL FILTER.....	139
INJECTORS.....	140
VALVE CLEARANCES	140
FAN BELT.....	141
FUEL FILTERS.....	141
HYDROSTATIC STEERING	142
REMOVING AIR FROM THE FUEL SYSTEM.....	144
AIR CLEANER ELEMENTS.....	146
COOLING SYSTEM	148
FRONT HUB BEARINGS.....	151
CAB AIR FILTER	152
ALTERNATOR.....	153
BATTERY.....	154
FUSES.....	157

JENSALES.COM

HIGH CLEARANCE TRACTORS

CONVERTING TO HIGH CLEARANCE.....	158
-----------------------------------	-----

INTRODUCTION

CLICK ANYWHERE FOR MORE DETAILS

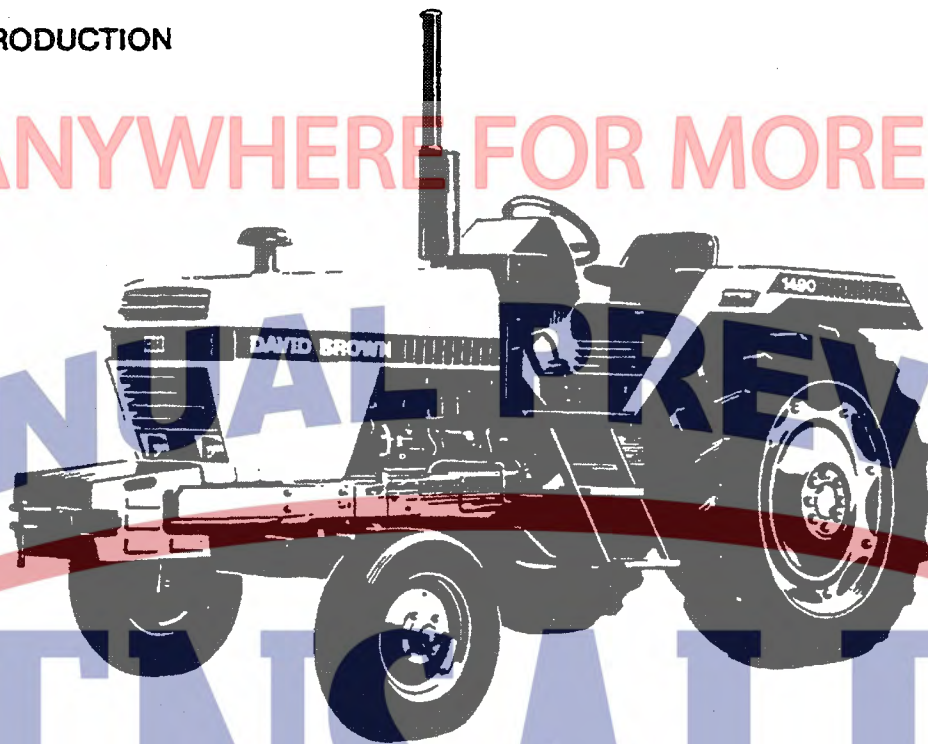 


FIGURE 2. FLAT DECK TRACTOR

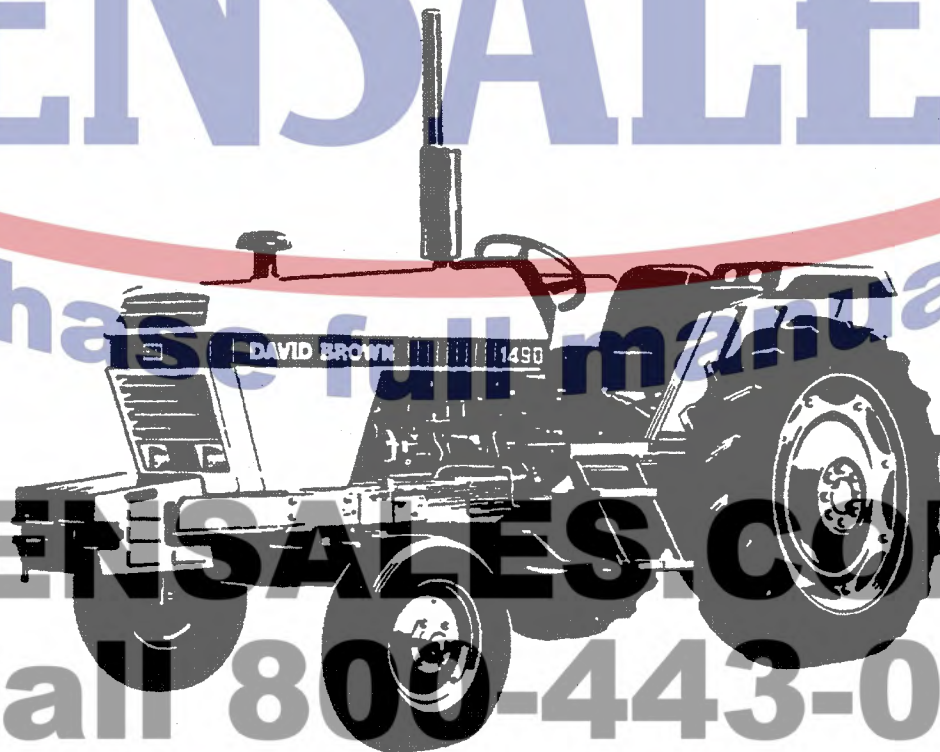 


FIGURE 3. STANDARD TRACTOR

NOTE: When left-hand and right-hand are used in this manual, they are the same as your left and right when you are sitting in the tractor seat looking forward.

CLICK ANYWHERE FOR MORE DETAILS

SIGNALS

 
COME TO ME

RAISE EQUIPMENT



DECREASE SPEED

LOWER EQUIPMENT

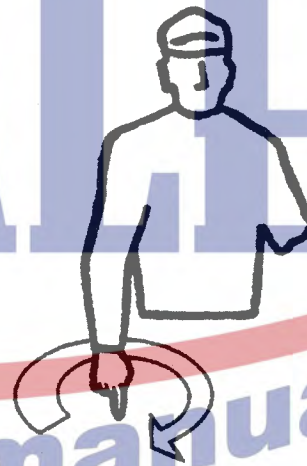

INCREASE SPEED

STOP



FIGURE 12.

78042

DECALS

DECALS

IMPORTANT: Install new decals if the old decals are destroyed, lost, painted over or can not be read. When parts are replaced that have decals, make sure you install a new decal with each new part.

NOTE: New decals are available from your David Brown Dealer.

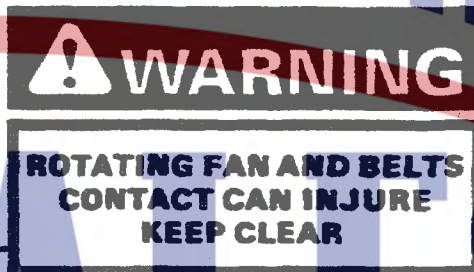 
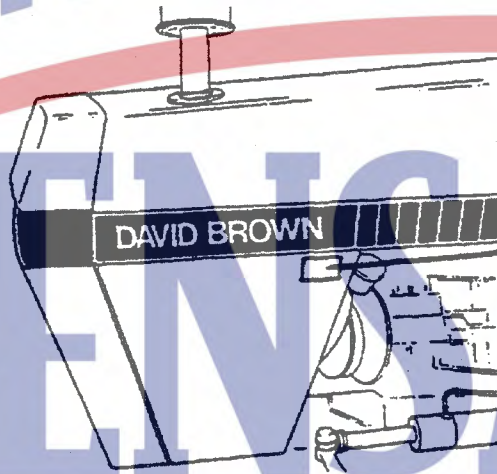 


FIGURE 13.

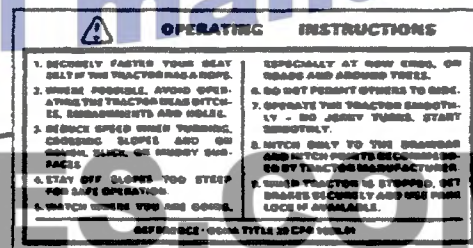 
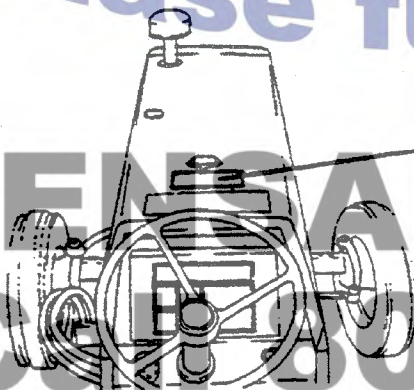 


FIGURE 14.

INSTRUMENTS AND CONTROLS

**OPERATING CONTROLS:
CAB TRACTORS**

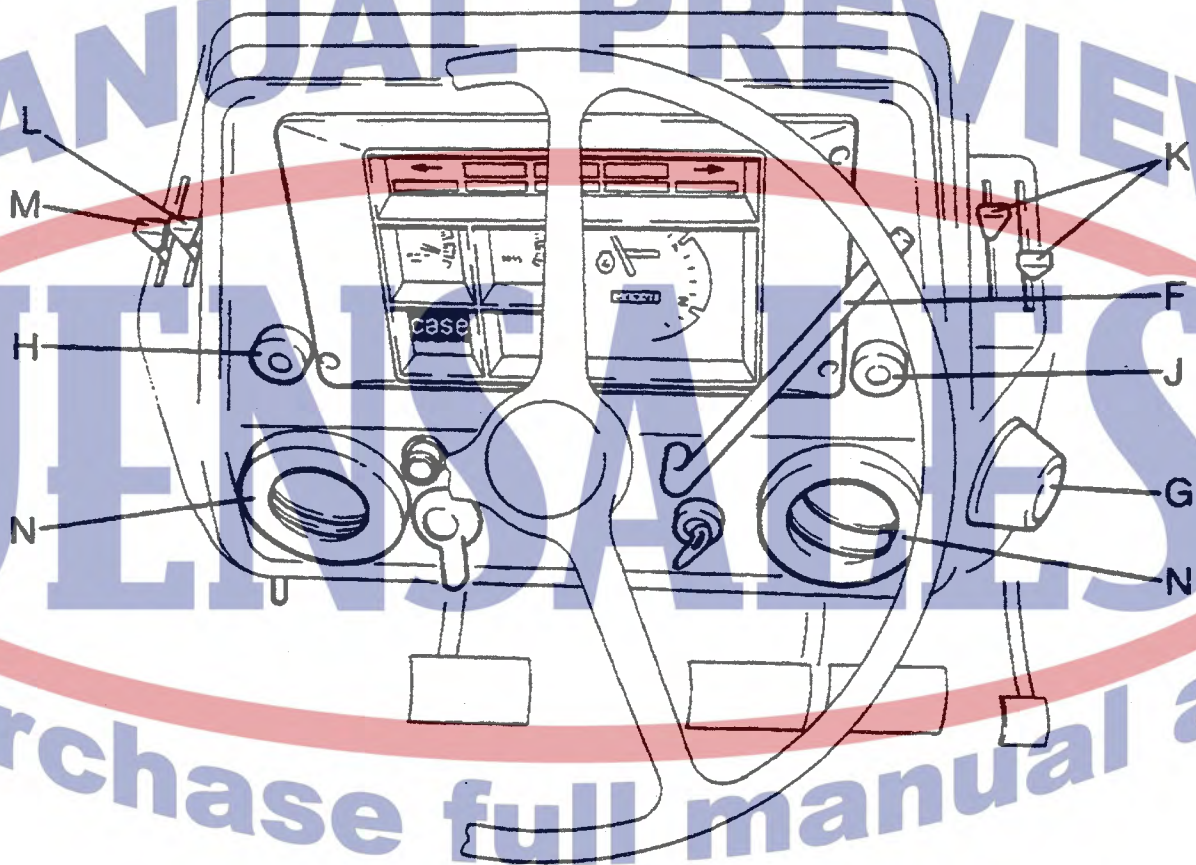 


FIGURE 33. OPERATING CONTROLS

F. Engine Speed Control Lever
Move the lever clockwise for maximum speed. Move the lever counterclockwise for idle speed.

G. Horn Switch
The horn switch is in the centre of the main lamp switch. Push the centre to operate the horn.