



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Parts Manual

1594

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-P-1594

ILLUSTRATION AND TEXT

The arrangement of this parts catalog is for easy identification of Case parts. All parts are illustrated in "Exploded Views." This places each part in normal reference to each other. Reference numbers are used in the illustrations. These numbers are in reference to those on the text pages. The text pages list reference

GENERAL

1

ENGINE

2

FUEL

3

ELECTRICAL

4

STEERING

5

POWER TRAIN

6

BRAKES

7

HYDRAULIC

 
 
 
 
 
 
 
 
8

CHASSIS

9

NUMERICAL
INDEX

10

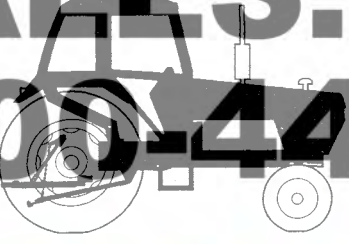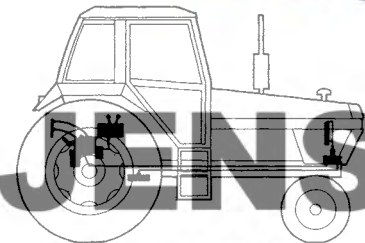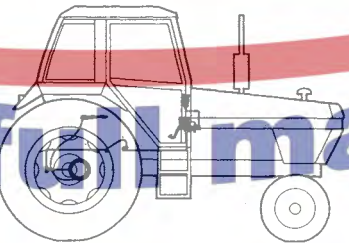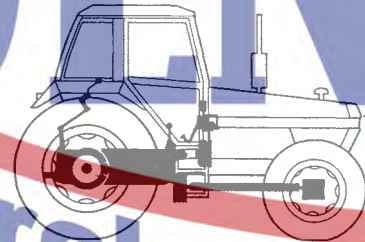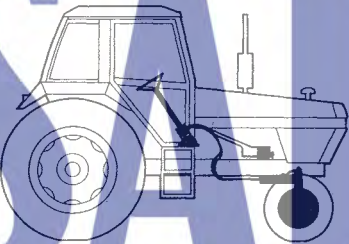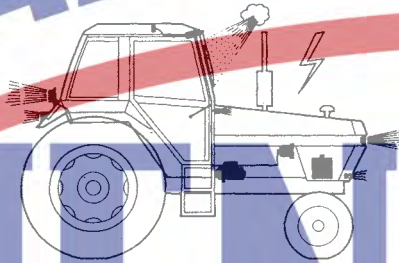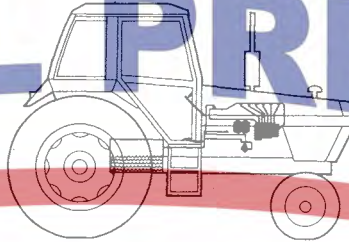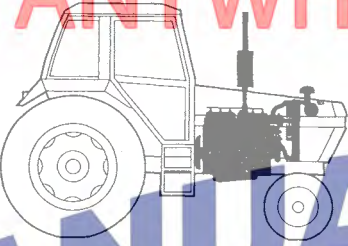

PART NO	PAGE	REF
A 141680	93	14
A 141684	297	18
A 141686	297	16
A 141692	189	1

1-III

GENERAL
1

CLICK ANYWHERE FOR MORE DETAILS

1594 TRACTOR
Parts Catalog

Pub 8-2220

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

A
 Air Cleaner Tubes, Engine 2-11
 Air Conditioning System 9-353
 Alternator Assembly 4-65,4-67,4-69
 Axle, Front - 2WD 5-107
 Axle Front, - MFD 5-109
 Axle Half Shafts - MFD 5-117
 Axle Housing - MFD 5-109
 Axle Housing, Rear 9-301
 Auxiliary Electrical Socket 4-63

B
 Balance Valve 7-199,7-201
 Ballast Weights and Frame, Front 9-303
 Ballast Weights, Rear Wheels 6-183
 Battery and Support 4-57
 Bevel Pinion Shaft, Gearbox 6-139
 Bleed Valve 8-227
 Brake Mechanism, Disc 7-207
 Brake Lever, Hand 7-211
 Brake Linkage, Hand 7-209
 Brake Pedals 7-199,7-203
 Brake Tubes 7-201,7-205

C
 Cab Accessories 9-359
 Cab Air Filter 9-345
 Cab Doors 9-335,9-337
 Cab Frame and Fenders 9-329
 Cab Interior Trim 9-313
 Cab Mounting and Steps 9-327
 Cab Roof 9-331
 Cab Windows 9-339,9-341
 Clutch Assembly 6-121
 Clutch Release Mechanism 6-123
 Combining Valve 8-229,8-231
 Compressor, Air Conditioner 9-355
 Control Housing 8-249
 Control Lever and Console 8-253,8-255
 Control Mechanism, Hydraulic System 8-237
 Control Valve, Hydraulic System 8-233
 Control Valve, Power Shift 6-157
 Crankshaft, Engine 2-25
 Cylinder Block Assembly 2-21
 Cylinder Head, Front 2-15
 Cylinder Head, Rear 2-17
 Cylinder, Hitch System 9-273

D
 Decals 9-321,9-323,9-325
 Differential, Rear Axle 6-163

D
 Differential - MFD 5-113
 Differential Lock and Controls 6-165,6-167
 Disc Brake Mechanism 7-207
 Doors, Cab 9-335,9-337
 Draft Control Mechanism 8-237
 Drawbar 9-287 thru 9-293
 Drive Shaft, Gearbox 6-137
 Drive Shaft - MFD 5-115
 Dump Valve, Hydraulic 8-235

E
 Electrical Wiring 4-49,4-51,4-53
 Engagement Lever - MFD 6-169,6-171
 Engine Front Grille 9-305
 Engine Hood and Hinge 9-305,9-309
 Engine Hood, Frame and Panels 9-307
 Engine Stop Control 3-41
 Engine Throttle Controls 3-35
 Engine Throttle Foot Control 3-37
 Engine Throttle Hand Control 3-39
 Evaporator, Air Conditioner 9-357

F
 Fan, Heater 9-345
 Fan, Radiator 2-7
 Fenders and Seat Support 9-317
 Filter, Hydraulic 8-227
 Final Drive Housing and Covers 6-179
 Final Drive, Gears and Shafts 6-181
 Flood Lamp 4-73,4-75
 Flow Rate Lowering Control 8-251
 Flywheel, Engine 2-25
 Footplates Mountings and Steps 9-315
 Front Axle Beam - 2WD 5-107
 Front Axle Half Shafts 5-117
 Front Axle Housing - MFD 5-109
 Front Axle Drive - MFD 5-115
 Front Hubs - 2WD 5-111
 Front Hubs and Planetaries - MFD 5-111
 Front Main Frame and Covers 9-297
 Front Wheels - MFD 5-119
 Front Wheels - 2WD 5-105
 Fuel Feed Pump 3-33
 Fuel Filters and Tubes 3-33
 Fuel Injector Assembly 3-31
 Fuel Injection Pump 3-29
 Fuel Reservoir and Tubes 3-33
 Fuel Tank and Supports 3-43,3-45,3-47
 Fuse Box 4-63

ALPHABETICAL INDEX

G	O
Gearbox Housing, Power Shift 6-141	Oil Cooler, Engine 2-3
Gearbox Housing, Synchromesh 6-129	Oil Cooler, Transmission 8-213
Gearbox Pump, Power Shift 6-155	Oil Filter and Tubes, Engine 2-27
Gear Shift Levers, Power Shift 6-145	Oil Pump, Engine 2-27
Gear Shift Levers, Synchromesh 6-131	Operators Seat and Seat Belt 9-319

H	P
Hand Brake Lever 7-211	Pick-Up Hitch Attachment 9-291,9-293
Hand Brake Linkage 7-209	Pistons and Rings, Engine 2-25
Hatch, Cab Roof 9-333	Planetaries - MFD 5-111
Head Lamps 4-71	Planetary Units, Powers Shift ... 6-151,6-153
Heater, Fan and Filter 9-347	Power Adjusted Rear Wheels 6-187
Heater, Tubes and Fittings 9-347	Power Shift Selector Lever 6-149
Heater Controls 9-305	Power Take-Off Controls 6-193
Height Control Mechanism 8-243	Power Take-Off 6-195,6-197
Hitch Brackets 9-301	PTO Clutch Release Mechanism 6-191
Horn 4-63	Pump, Hydraulic 8-217,8-219
Hoses and Brackets, Remote Valves ... 8-269	
Hubs, Front - MFD 5-111	R
Hubs, Front - 2WD 5-105	Radiator and Baffles 2-5
Hydraulic Pump, Single 8-217	Radiator Guard 9-303
Hydraulic Pump, Tandem 8-219	Radio 4-85
Hydraulic Tubes, Rear Axle 8-225	Ramshaft 9-273
Hydraulic Tubes, Hydraulic	Ramshaft Cylinder 9-273
Pumps 8-221,8-223	Range Shift Levers, Power Shift 6-147

I	
Independent Clutch Assembly 6-121	Range Shift Levers, Synchromesh 6-135
Independent Clutch, Release	Rate of Lowering control 8-251
Mechanism 6-123	Rear Axle Housing 9-301
Inlet Filter and Tubes, Hydraulic 8-215	Rear Flood Lamps 4-73
Injector Assembly 3-31	Rear Lamps 4-77,4-79
Injection Pump, Fuel 3-29	Rear Main Frame and Covers 9-299
Injectors and Tubes, Fuel 3-29	Rear Wheels and Ballast Weights ... 6-183,6-185
Instrument Cluster 4-55	Remote Valve Assembly 8-271
Instrument Panel and Pedal Support .. 9-311	Remote Valve Hoses and Couplings ... 8-269
	Remote Valves 8-263 thru 8-267
	Roof, Cab 9-331

L	S
Lamps, Flood 4-73,4-75	Seat Assembly 9-319
Lamps, Head 4-71	Selectamatic Control Valve 8-233
Lamps, Side and Rear 4-77,4-79	Selector Mechanism, Synchromesh ... 6-129
Leveling Lever 9-277	Sensing Control Lever 8-241
Lift Link 9-279	Shafts and Gears, MFD (Power Shift) .. 6-161
Lower Links 9-281	Shafts and Gears, Range Gearbox
	(Power Shift) 6-159
	Side Lamps 4-77,4-79
	Silencer (Muffler), Exhaust 2-13
	Slave Cylinder, Brake 7-195, 7-199
	Stabilizer Bars 9-283

M
Manifolds, Intake and Exhaust 2-13
Master Cylinder, Brake 7-199,7-203
Muffler, Exhaust 2-13

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

S

Starter Assembly	4-61
Starter and Switches	4-59
Steering Column, Without Cab	5-87
Steering Column, With Cab	5-93
Steering Cylinder and Tubes	5-91,5-97
Steering Cylinder	5-101,5-103
Steering Pump Assembly	5-99
Steering Pump and Tubes	5-89,5-95
Steering Valve	5-87,5-93
Steps	9-315,9-327
Stop Control, Engine	3-41
Stub Axles and Front Hubs - 2WD	5-105
Sway Blocks	9-305

T

Tachometer	4-55
Thermostat, Cooling System	2-15
Thermostat, Fuel System	3-33
Throttle Control, Engine	3-35,3-37,3-39
Timing Gears, Engine	2-19
Tools and Tool Box	9-361
Top Link	9-295
Tow Bracket	9-303
Trailer Socket, Electrical	4-63
Transfer Gearbox, Gears and Shafts - MFD	6-175
Transfer Gearbox, Housing and Selector - MFD (Synchromesh)	6-173

V

Valve Mechanism, Engine	2-19
-------------------------------	------

W

Warning Lamps, Side and Rear	4-77,4-79
Water Pump	2-9
Weights, Front Ballast	9-303
Weights, Ballast, Rear Wheels	6-183
Wheels, Front - MFD	5-119
Wheels, Front - 2WD	5-105
Wheels, Rear	6-183,6-185
Windshield Wiper and Washer	4-81
Window, Cab Rear	9-341
Window, Front and Side	9-339
Window Wiper, Rear	4-83
Wiring, Cab	4-53
Wiring, Chassis (With Cab)	4-51
Wiring (Without Cab)	4-49

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS