



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J. I. Case

Parts Manual

K

18-32 Cross Motor

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.



TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-P-18/32XMTR

Alphabetical Index

	Page
A	
Axle Extension, Front.....	50
Air Washer.....	9
Axle, Front.....	30-31-32
Axle, Rear.....	33-34-35-36-37-38
B	
Bearing Liners.....	6
Box of Tools and Contents.....	49
Bull Gear Guard.....	37-38
Bull Gear Guard Cover.....	37-38
C	
Carburetor.....	7-14
Carburetor Repair Parts.....	52-53
Clutch - Case and Borg and Beck.....	18-19-20-21
Clutch - Twin Disc.....	22-23-24
Connecting Rod.....	9
Cylinder.....	9-10
Cylinder Head.....	9
D	
Differential, Parts.....	33-34-35-36-37
F	
Fan.....	16-17
Frame.....	9-49
G	
Governor.....	11-12-13-14-15
Grouters, Numerical List.....	39
Grouters, Tabulated List.....	40-41-42
H	
Heater.....	6
Hood.....	49
L	
Lugs, Wheel.....	39
M	
Magneto.....	11-12-13-14-15
Magneto Repair Parts.....	54 to 65
Manifold.....	6
Miscellaneous.....	49
Motor.....	6-7-8-9-10
O	
Oil Gauge.....	46
Oil Indicator.....	45
Oil Pump.....	45
P	
Priming Cup.....	7
Power Take Off Attachment.....	66
R	
Radiator.....	47-48
S	
Seat.....	49
Seat Spring.....	49
Steering Gear.....	30-31-32
Self Steering Device.....	50
Shims.....	7-8
Sylphon Thermostat.....	47-48
T	
Tanks, Gasoline, Kerosene and Water.....	44-45-46
Tool Box.....	49
Transmission.....	25-26-27-28-29
Transmission Cover and Control Parts.....	28-29
Tube, Flexible.....	9
Tube, Fuel.....	46
Tube, Oil.....	45-46
W	
Water Pump.....	11-12-13-14-15
Wheel, Front.....	30-31-32
Wheel, Rear.....	33-34-35-36-37-38
Wheel Guard or Fender.....	37
Whistle, Exhaust Chime.....	50
Wires.....	8
Wrench.....	49
Note: For Sizes of Shafts, Rods, Pins, Keys, Bolts, Etc., see drawing on pages 51 and 52.	



MOTOR

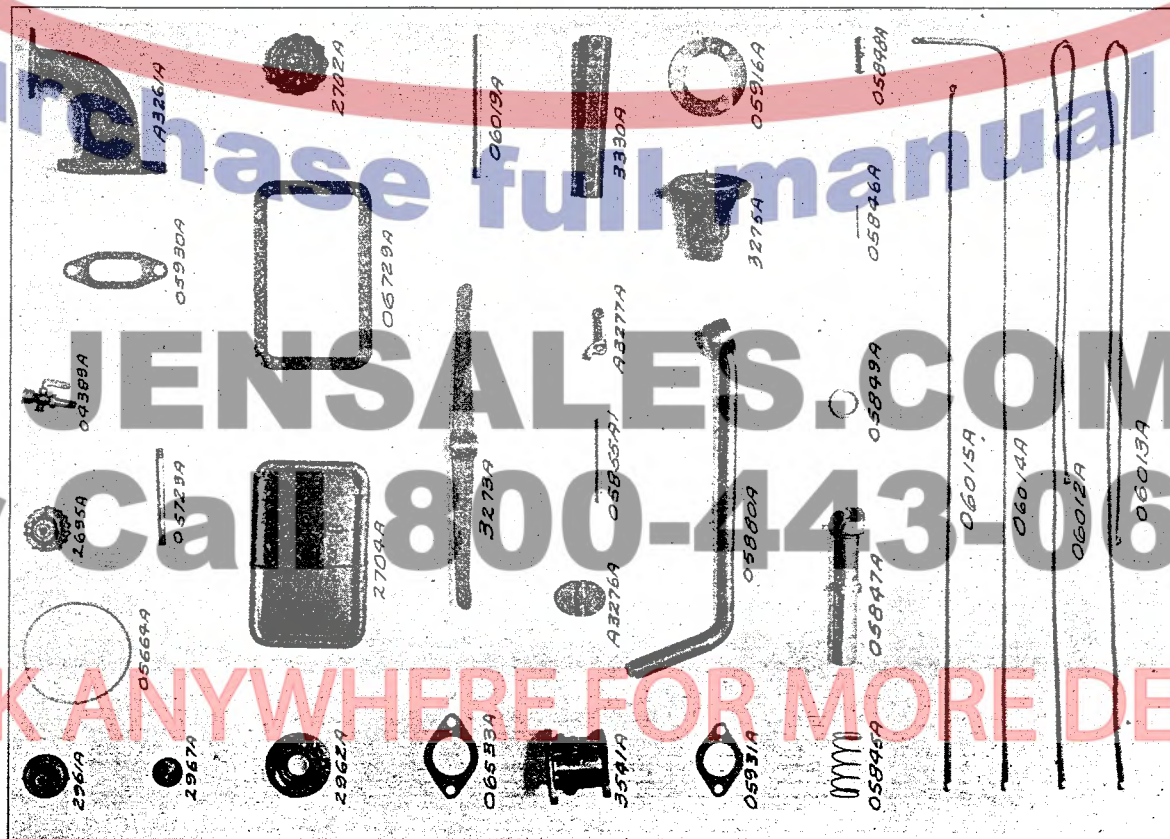
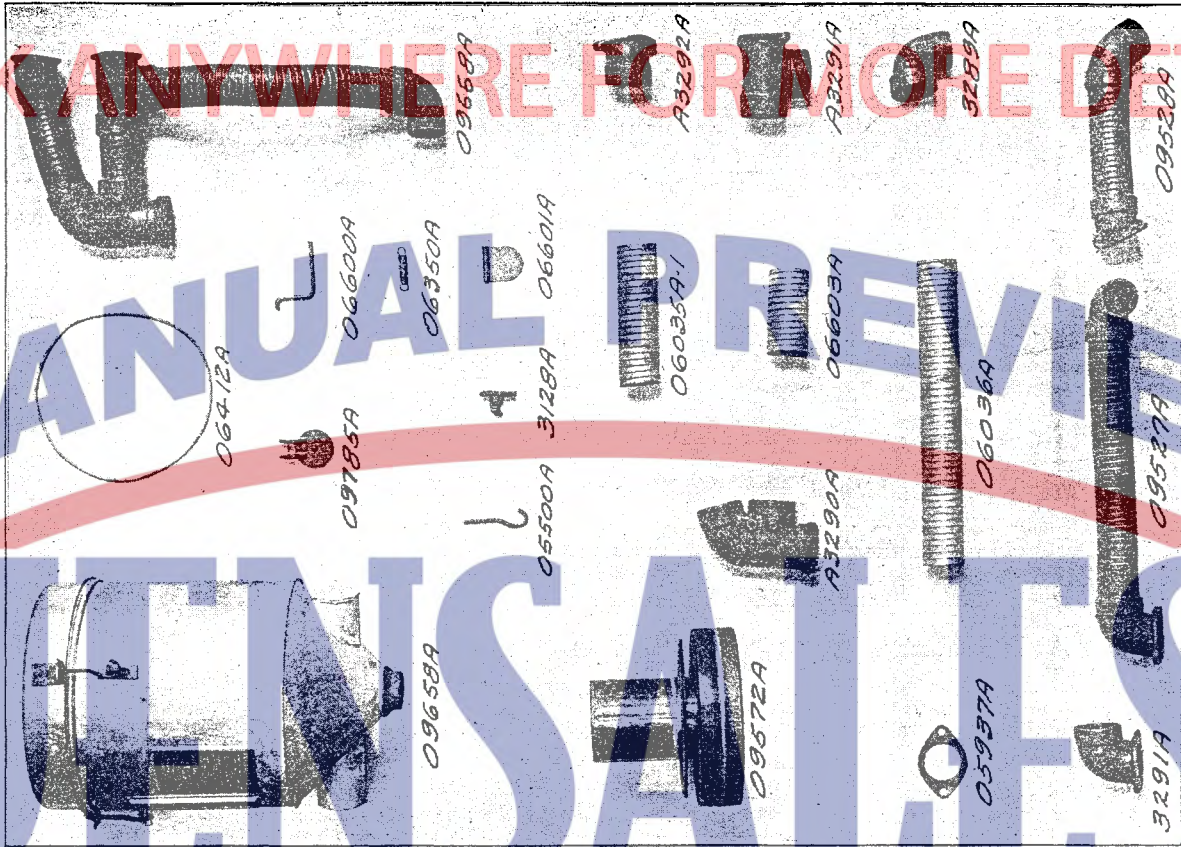


MOTOR

Telegraph Cipher	Number of Part	NAME OF PART
Comitial	2682 A	Bushing for piston pin.
Command	2686 A	Bushing for cam shaft end bearing.
Commentary	2695 A	Knob for cylinder head cover.
Communate	2702 A	Knob for crank case hand hole cover.
Commissary	2704 A	Hand hole cover for crank case, replaced by A2704A.
Girdled	A2704 A	Hand hole cover for crank case.
	2717 A	Bearing for cam shaft, left end; use 08808A.
	2718 A	Bearing for cam shaft, center, upper half; use 08748A.
	2719 A	Bearing for cam shaft, center, lower half; use 08748A.
Cuscuta	2961 A	Guide for breather valve.
Cushite	2962 A	Housing for breather valve.
Cushitic	2967 A	Breather valve.
Aqada	3126 A	Flange for Case air washer drain plug.
Lesson	3128 A	Catch for Case air washer hook bolt.
	3171 A	Cylinder, (Cylinder only use 09995A) (Cylinder with barrels use 09463A).
Microbe	3172 A	Cylinder barrel.
Midget	3175 A	Bracket for valve rocker arm, prior to 52705.
Eloba	A3175 A	Bracket for valve rocker arm.
Midiron	3176 A	Guide for valve stem.
Midland	3177 A	Bushing for valve rocker arm.
Midnight	3178 A	Spacer for valve rocker arm, replaced by 0982AB.
Midship	3179 A	Guide for push rod lifter, prior to 69079.
	3180 A	Cylinder head, use 09551A, discarded.
	A3180 A	Cylinder head, use 09551A1.
Midwife	3184 A	Piston—see 4123A—4294A—4295A.
Might	3185 A	Piston ring, see 3758A, 4093A, 4094A, 4095A.
	3186 A	Main frame, use 09459A—09459A1.
Migration	3201 A	Gear for cam shaft.
Milliner	3220 A	Cap for center crank shaft bearing, prior to 32934.
Ignorant	A3220 A	Cap for center crank shaft bearing.
Millinery	3221 A	Cap for end crank shaft bearing, prior to 32934.
Illapse	A3221 A	Cap for end crank shaft bearing.
Milling	3222 A	Oil thrower on crank shaft, prior to 69601—see 0953AB.
Milord	3223 A	Oil thrower for crank shaft.
Mimic	3224 A	Balance wheel.
Mimicker	3225 A	Cover for crank case, left end, prior to 69054.
Afame	A3225 A	Cover for crank case, left hand, after 69053.
Minimum	3236 A	Cover for crank case, right end.
Miracle	3249 A	Liner for center crank shaft bearing, upper, prior to 32934.
Illative	A3249 A	Liner for center crank shaft bearing, upper.
Mirage	3250 A	Liner for crank shaft bearing, lower, prior to 32934.
Illegal	A3250 A	Liner for center crank shaft bearing, lower.
Mirror	3251 A	Liner for L. H. crank shaft bearing, upper, prior to 32934.
Illness	A3251 A	Liner for L. H. crank shaft bearing, upper.
Mirthful	3252 A	Liner for L. H. crank shaft bearing, lower, prior to 32934.
Illude	A3252 A	Liner for L. H. crank shaft bearing, lower.
Miscue	3253 A	Liner for R. H. crank shaft bearing, upper, prior to 32934.
Illuding	A3253 A	Liner for R. H. crank shaft bearing, upper.
Misdirect	3254 A	Liner for R. H. crank shaft bearing, lower, prior to 32934.
Illuminate	A3254 A	Liner for R. H. crank shaft bearing, lower.
Miser	3255 A	Liner for connecting rod bearing, lower, prior to 32934.
Illusion	A3255 A	Liner for connecting rod bearing, upper and lower.
Miserable	3256 A	Liner for connecting rod bearing, upper, prior to 32934.
Madden	3258 A	Filler cover for crank case, after 69053.
Miserly	3261 A	Elbow for cylinder head water outlet, discarded, used on tractors with old style syphon.
Image	A3261 A	Elbow for cylinder head water outlet, used with new style syphon, prior to 45781.
Ayaya	B3261 A	Elbow for cylinder head water outlet, see 4067A, from 45781 to 69751, see 4067A.
Afane	C3261 A	Elbow for cylinder head water outlet, after 69751.
Misplay	3273 A	Clamp for crank case hand hole cover.
Misprint	3275 A	Bearing for starting shaft.
Missed	3276 A	Throttle valve (used on tractors with 3293A manifold).
Imaginary	A3276 A	Throttle valve (used on tractors equipped with A3293A and B3293A).
Mission	3277 A	Arm for throttle valve (used on tractors equipped with 3293A).
Imagine	A3277 A	Arm for throttle valve (used on tractors equipped with A3293A).
Eloca	B3277 A	Arm for throttle valve (used on tractor equipped with B3293A) after tractor No. 51878.
Mistress	3286 A	Exhaust elbow, cylinder head to manifold, (discarded), *see note.
Mistrust	3287 A	Flange for exhaust pipe.
Mitral	3289 A	Air intake elbow, flexible tube to carburetor.
Mitten	3290 A	Elbow, Case air washer to flexible tube, prior to 32934.
Imban	A3290 A	Elbow, Case air washer to flexible tube.
Mixed	3291 A	Elbow, heater to carburetor air tube, prior to 32934, Case air washer.
Imbank	A3291 A	Tee, heater to carburetor air tube, Case air washer.
Mixing	3292 A	Elbow, Case air washers tube to heater, prior to 32934.
Imbead	A3292 A	Elbow, Case air washer tube to heater.
Mixture	3293 A	Exhaust and inlet manifold, old style, use 09724A, new style manifold with throttle valve housing.
Imbecile	A3293 A	Exhaust and inlet manifold, new style, (give number on old manifold).
Giver	B3293 A	Exhaust and inlet manifold, used on tractors equipped with A3180A cylinder head.
Moanful	3295 A	Heater, carburetor air intake, give number on old heater, see A3295A.
Gizzard	A3295 A	Heater, carburetor air intake, for new exhaust by-pass attachment, (give number on old heater). —A3295A Heater used regularly after tractor No. 42834, and also on several tractors which were built in 1920 that were changed over.
Molding	3330 A	Wrench for spark plug.
Imbibe	3541 A	Housing for throttle valve, used on tractors equipped with A3293A and B3293A manifold.
Ipaja	3583 A	Special piston ring (1/64" oversize in width).
Immund	3584 A	Special piston ring (1/8" oversize in width).
Glabrous	3587 A	Body for exhaust by-pass valve, R. H., *see note.
Glacial	3588 A	Body for exhaust by-pass valve, L. H., *see note.
Glacier	3589 A	Cover for exhaust by-pass valve, L. H., *see note.
Glacious	3590 A	Cover for exhaust by-pass valve, R. H., *see note.



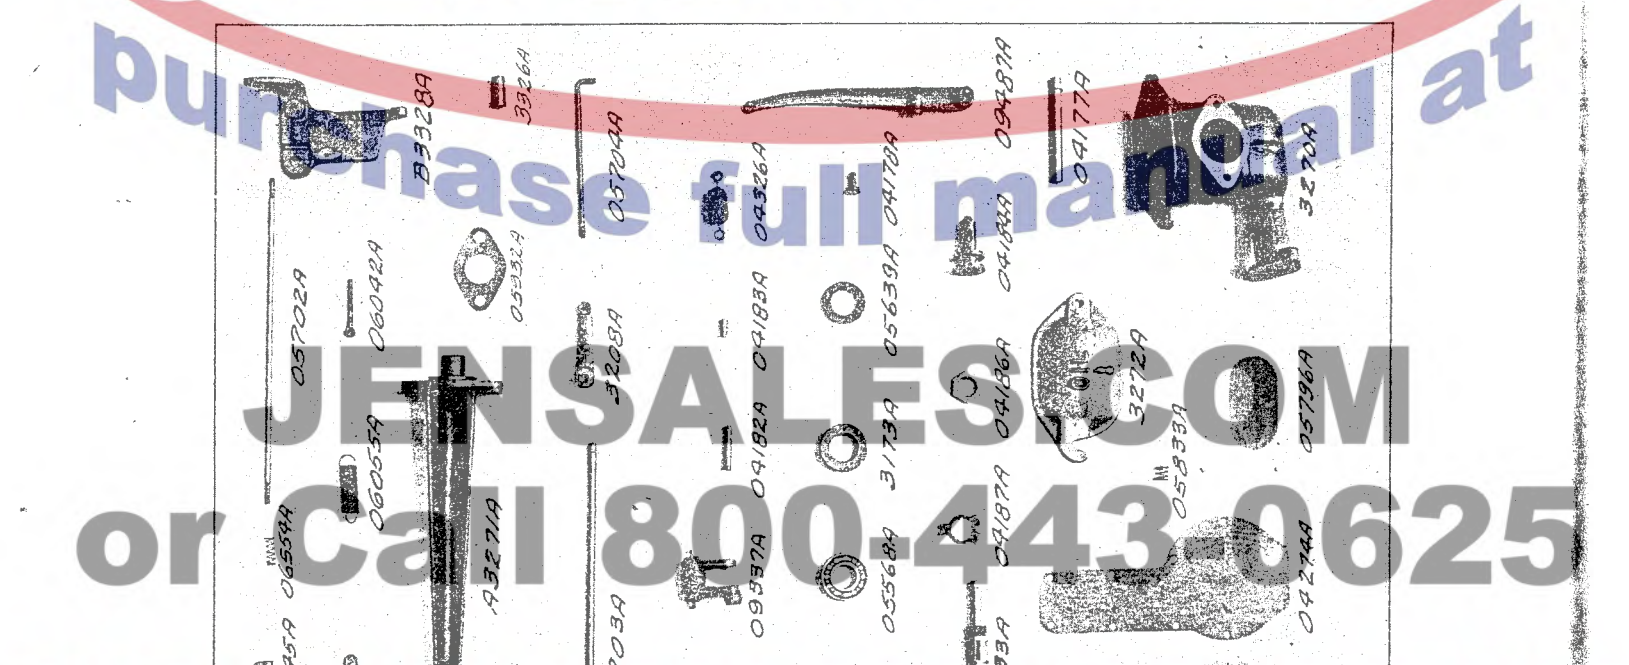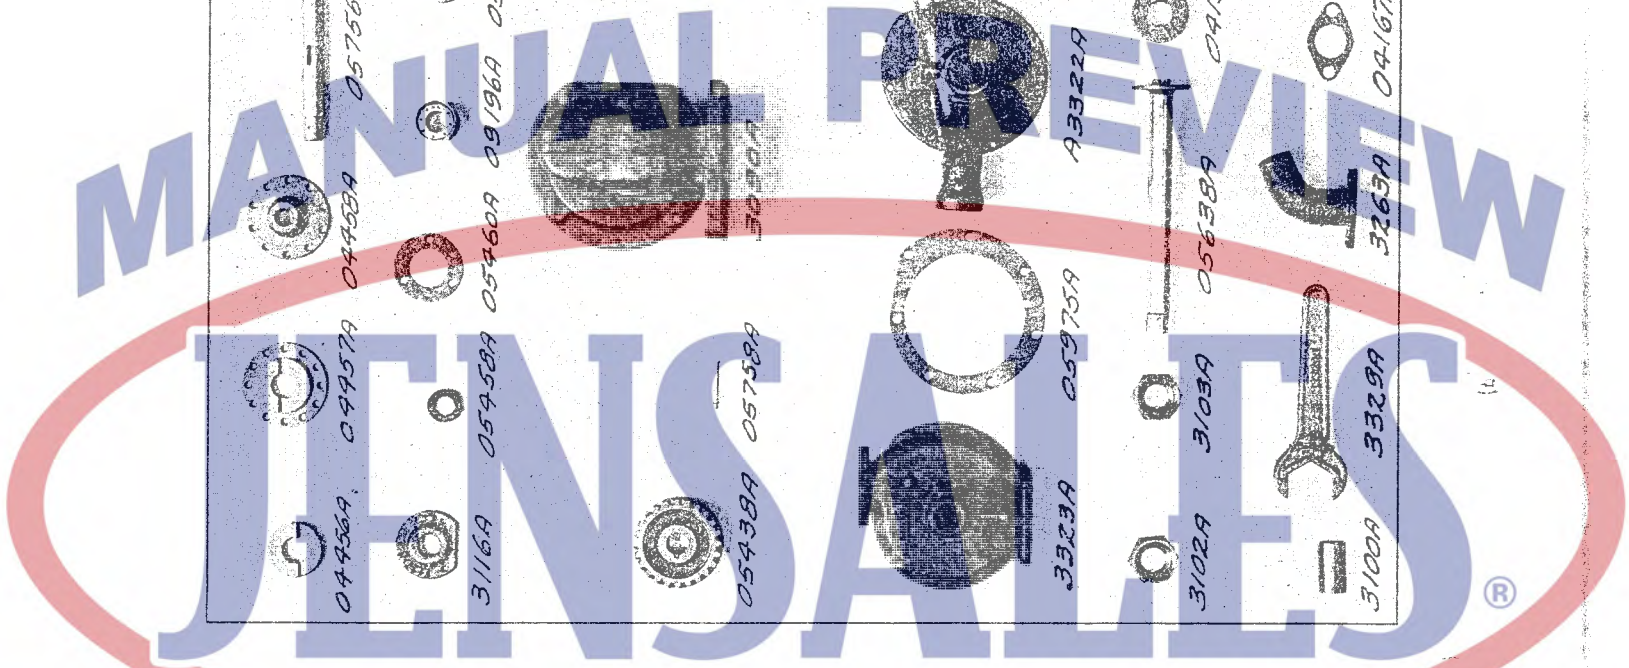

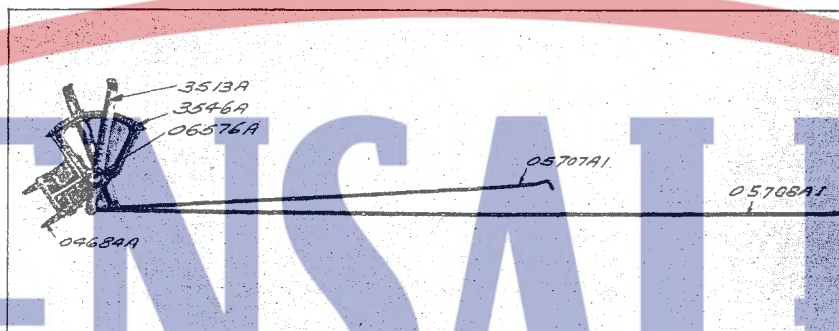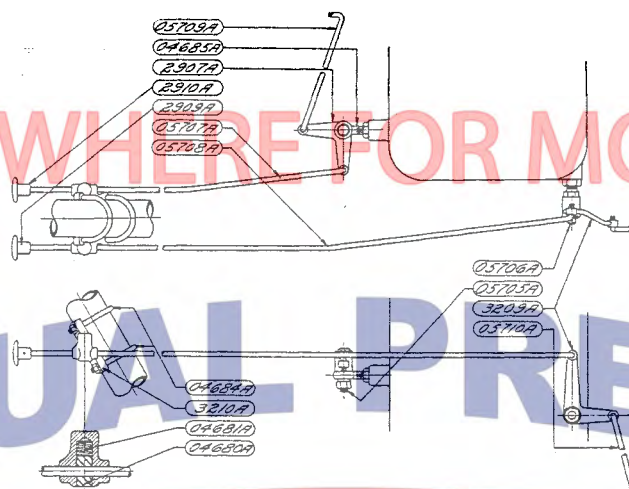


Telegraph Cipher	Number of Part	NAME OF PART
Etiolated	2733 A	Weight for governor, use 09337A, prior to 49814.
Etiquette	2907 A	Bell crank for throttle control rods.
Etonian	2909 A	Knob for spark rod (discarded 1919).
Lobular	2910 A	Knob for throttle rod (discarded 1919).
Locular	3063 A	Bracket for Kingston magneto (see 3340A).
Leper	3090 A	Housing for fan gear.
Leprose	3100 A	Bushing for water pump.
Leprosy	3102 A	Stuffing box for water pump, R. H. thread.
Leptus	3103 A	Stuffing box for water pump, L. H. thread.
Microscope	3116 A	Retainer for fan gear housing, prior to 42852 (see 3760A and 3766A).
Middling	3173 A	Retainer for governor shaft ball bearing.
Migrate	3174 A	Bushing for governor shaft.
Mildew	3200 A	Governor gear.
Emaya	3208 A	Connection for governor rod, prior to 51879.
Mileage	A3208 A	Connection for governor rod, from 51878 to 69054.
Impelled	3209 A	Bell crank for magneto control, Kingston.
Militant	A3209 A	Bell crank for magneto control, Berling or Bosch.
Misfit	3210 A	Bracket on steering column for spark and throttle rods, old style, discarded.
Misfortune	3262 A	Outlet elbow for water pump.
Misjudge	3263 A	Inlet elbow for water jacket.
Mislead	3270 A	Bracket for governor arm shaft, prior to 69054.
Misplace	A3271 A	Bracket for governor rod, prior to 69054.
Modest	3272 A	Cap for oil filler, prior to 69054.
Modify	3316 A	Bushing for governor arm, prior to 69054.
Modulate	3321 A	Impeller for water pump.
Mohawk	3322 A	Cover for water pump.
Moisten	A3322 A	Cover for water pump, use 3322A.
Moisture	3323 A	Body for water pump.
Molar	3326 A	Bushing for governor arm shaft, front, prior to 69054.
Impending	3327 A	Double arm connection for governor rod, prior to 49814.
Molasses	3328 A	Bracket for governor spring (discarded) replaced by B3328A.
Impenned	B3328 A	Bracket for governor spring, prior to 49814, see 07534A—07534A1.
Hoggish	3329 A	Wrench for water pump stuffing nut.
Holcodont	3340 A	Bracket for magneto; Berling or Bosch, see 09723A—09723A1—09723A3 and 4323A.
Imperant	3506 A	Adjusting screw for governor spring, after 49813.
Imperial	3513 A	Hand lever for spark and throttle quadrant; used with new style control parts.
Acexa	3545 A	Adjusting clamp for governor spring, from 32984 to 49813 and after 54020.
Emaza	3546 A	Quadrant for spark and throttle levers (new style control parts).
Acaya	A3648 A	Sleeve for governor, from 49814 to 54061 (see 04184A).
Acuva	B3648 A	Sleeve for governor, after 54061.
Gloried	3649 A	Hand hole cover for governor, after 69053.
Glorify	3737 A	Bushing for governor lever shaft, after 69053.
	3760 A	Retainer for fan gear housing, R. H., from 42852 to 49813, (see 3765A).
	3761 A	Nut for fan gear housing, R. H., from 42852 to 49813, (see 3762A).

Governor, Water Pump, Fan Gear, Carburetor, Magneto and Control Rods

Telegraph Cipher	Number of Part	NAME OF PART
Adama	3762 A	Nut for fan gear housing, R. H., after 49813, (see 3761A)
Glorious	3763 A	Nut for fan gear housing retainer, L. H., after 42851
Adapa	3765 A	Retainer for fan gear housing, R. H., after 49813, (see 3760A)
Glory	3766 A	Retainer for fan gear housing, L. H., after 42851
	A3785 A	Weight for governor, use 010220A, after 49813
Adaza	A3831 A	Lever for governor sleeve, after K313119
Adefa	4011 A	Yoke for governor rod, after 51878
Emeba	4130 A	Cover for governor housing, from 49814 to 69053, see 04228A-3649A
Emeca	4131 A	Lever for governor, from 49814 to 69053, see 06849A2
Emefa	4157 A	Dust cover for 07048A1 and 07521A Bosch magneto, (see 010531A)
Afebe	4323 A	Bracket for magneto, used with F.U.4.C.125 Robert Bosch magneto, after 69003
Emega	0255 A	Dowel for 3090A and 3323A
Homely	04021 A	Dowel for magneto
Concenter	04158 A	Center piece for water pump shaft coupling
Concert	04167 A	Gasket for water pump outlet
Magnesium	04177 A	Shaft for governor lever, prior to 69054—see 0635AB
Magnetism	04178 A	Button for governor lever, prior to 49814, (see 07193A1)
Magnetite	04182 A	Fulcrum pin for governor weight
Magnetize	04183 A	Pin for governor weight
Conchoid	04184 A	Sleeve for governor, prior to 49814, (see A3648A—B3648A)
Magnifier	04185 A	Pin for governor sleeve, prior to 49814
Conchoidal	04186 A	Nut for governor gear
Magnify	04187 A	Lockwasher for governor gear nut
Molten	04228 A	Cover for governor housing, prior to 49814, (see 4130A) and 3649A
Emeja	04240 A	Pin for magneto strap, prior to 69004
Emeka	04244 A	Pin for magneto tie rod, prior to 69004
Momentary	04274 A	Gasket for governor housing cover, prior to 69054, see 06790A
Concordat	04326 A	Spring for governor weight, prior to 49814
Conductor	04456 A	Cross piece for magneto coupling, prior to 49814, (see 07049A—07598A)
Condurrite	04457 A	Coupling for magneto, prior to 69004, see 06064A-0625AB
Condyle	04458 A	Adjusting piece for magneto coupling, prior to 69004, see 0626AB
Evocable	04681 A	Spring for spark and throttle rod, (discarded) old style control
Momentous	04684 A	U bolt for spark and throttle rod bracket
Evocatory	04685 A	Eyebolt for magneto and throttle control bell crank bracket
Excitement	04749 A2	Kingston high tension magneto
Librarian	04813 A1	Gasket for fan gear housing
Lightly	05438 A	Fan gear on water pump shaft
Marline	05441 A	Thrust washer for fan gear on water pump shaft
Ligneous	05458 A	Felt washer for fan gear housing, prior to 42852, now use 1/16 I.D. x 1 1/4 O.D. x 1 1/2" metallic packing
Emela	05459 A	Dowel for roller bearing spacer on fan gear housing
Monitor	05460 A	Gasket for fan gear housing retainer
Legacy	05461 A	Outer race for bearing 09196A
Legal	05462 A	Roller assembly for bearing 09196A
Lignify	05480 A	Spacer for fan gear housing bearing
	05568 A	Ball bearing for governor shaft (see 010432A)
Monoplane	05624 A	Kingston carburetor, only 1 3/8", (see 010288A)
Enuga	05624 A2	Kingston carburetor, 1 3/8", fitted with special weighted water valve, after 56575
Monopoly	05633 A	Shaft for governor, prior to 49814
Enula	05633 A1	Shaft for governor
Emema	05634 A	Dowel for governor shaft ball bearing retainer
Monotone	05637 A	Coupling for water pump shaft
Monotonous	05638 A	Shaft for water pump
Monotony	05639 A	Felt washer for governor shaft bearing retainer
Morning	05702 A	Rod for throttle valve, prior to 69054
Afece	05702 A1	Rod for governor, after 69053
Morocco	05703 A	Shaft for governor connection arm, prior to 69054
Morose	05704 A	Rod for governor connection, prior to 69054
Morpheus	05705 A	Pin for throttle control bell crank
Morphine	05706 A	Pin for magneto control bell crank, prior to 69054
Morrow	05707 A	Throttle rod (discarded) old style control
Impetuous	05707 A1	Throttle rod, new style control
Morsel	05708 A	Spark rod (discarded) old style control
Impiety	05708 A1	Spark rod, new style control
Mortal	05709 A	Carburetor rod
Mortality	05710 A	Magneto rod, Kingston only (see 06066A2)
Mortar	05711 A1	Air damper rod
Mucous	05756 A	Shaft to drive fan gear and magneto, prior to 49814
Ayena	05756 A1	Shaft to drive fan gear and magneto, after 49813
Homiletics	05758 A	Rivet for fan drive and magneto shaft coupling
Muddy	05759 A	Coupling for fan gear and magneto shaft
Murky	05833 A	Spring for oil filler cap, prior to 69054
Hominy	05915 A	Tie rod for Bosch magneto, prior to 69004
Acame	05915 A1	Tie rod for Robert Bosch magneto, after 69003
Narrate	05932 A	Gasket for governor arm shaft bracket, prior to 69054
Nasty	05975 A	Gasket for water pump cover
Nauseous	06042 A	Eye bolt for governor adjusting spring, prior to 49814, (see 07219A)
Naval	06055 A	Adjusting spring for governor, prior to 49814
Homogeny	06064 A	Magneto coupling (Berling or Bosch) prior to 49814 (see 04457A)
Impinge	06066 A2	Magneto rod (Berling or Bosch) prior to 69054, see 05710A
Afege	06066 A3	Magneto rod, after 69053
Hurrah	06362 A	Lock nut for governor spring adj. screw, after 49813
Husband	06369 A	Spring for spark and throttle levers (new style control)
Implex	06554 A	Spring for governor rod, upper; from 32934 to 49813, and after 54020 (see 07218A)
Implicate	06571 A	Bracket for spark control bell crank, (Berling or Bosch) prior to 69079
Afeje	06571 A1	Bracket for spark control bell crank, after 69078
Implicit	06576 A	Pin for spark and throttle levers (new style control)
	06629 A1	Strap for F.U.4.C.125 Robert Bosch magneto (use 09722A1)
Adiga	06630 A	Tie rod for magneto, Berling
Hygienic	06645 A	Bosch Magneto, Z R 4, (see 07048A1—07521A—06645A1—06645A2)


CLICK ANYWHERE FOR MORE DETAILS

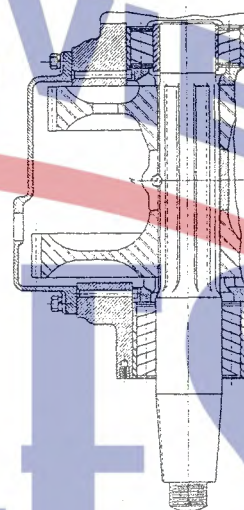

TRANSMISSION

Telegraph Cipher	Number of Part	NAME OF PART
Midst	3181 A	Drive gear for first reduction shaft, prior to 69560
Afese	A3181 A	Drive gear for first reduction shaft, after 69559
	3182 A	Reverse gear, (use 09396A)
	3183 A	Bushing for reverse gear (use A3183A)
Ayawa	A3183 A	Bushing for reverse gear (2 used)
Milker	3215 A	Spacer for second reduction shaft bearing, R. H., prior to 42835 and after 56596
Glummy	A3215 A	Spacer for second reduction shaft bearing, R. H., from 42835 to 56596
Milky	3216 A	Spacer for second reduction shaft bearing, L. H., prior to 42835 and after 56596
Glumous	A3216 A	Spacer for second reduction shaft bearing, L. H., from 42835 to 56596
Millenary	3217 A	Retainer for first reduction shaft felt washer
Millennial	3218 A	Flange for second reduction shaft bearing, prior to 54083 (see 4220A)
Miller	3219 A	Cap for first reduction shaft bearing, L. H., prior to 56375
Enura	A3219 A	Cap for first reduction shaft bearing, L. H.
Mockery	3301 A	Bottom for transmission case
Molecule	3331 A	Spacing collar for gears on second reduction shaft, prior to 69762
Afeve	A3331 A	Spacing collar for gears on second reduction shaft, after 69761
Incumbent	3346 A	Collar for first reduction shaft, used regularly from 29533 to 56374, also shipped with shafts for all tractors, 2" I. S. dia., 1 1/2" wide, (see 05728A)
		Collar for first reduction shaft, prior to 69004
Enusa	A3346 A	Collar for first reduction shaft, R.H., after 69703
Afewa	B3346 A	Oil filler plug for transmission, used with transmission oil gauge
Emoga	4159 A	Flange for second reduction shaft bearing, after 54082 (see 3218A)
Emoja	4220 A	Retainer for first reduction shaft bearing, R. H., after tractor 56374
Enuva	4273 A	Dowel used with A3183A bushing
Eloga	068 A	Dowel used with 3346A collar
Emoka	03601 A	Felt washer for second reduction shaft bearing flange, after 54082 (see 05749A)
Condition	03749 A	Washer for second reduction shaft (discarded 1919)
Mainly	04237 A	Key for first reduction shaft drive gear, prior to 69560
Exanthema	04697 A	Cap screw for bull pinion (discarded 1919)
Excruciate	04831 A	Outer race for bearing 09410A—09410A1—010664A
Leakage	05191 A	Roller assembly for bearing 09410A (use 05193A1)
	05193 A	Roller assembly for bearing 09410A1 and 010664A
Emola	05193 A1	Set screw for second reduction shaft collar, prior to 69762
Marquis	05475 A	First reduction shaft (use 09992A)
	05641 A	First reduction shaft (use 09992A)
	05641 A1	First reduction shaft, after 69703
Afexe	05641 A2	Second reduction shaft (use 09627A2) prior to 54083
	05642 A1	Second reduction shaft, 3", after 54082 (use 010850A)
Emoma	05642 A2	High speed gear on second reduction shaft (49 teeth; 3 1/2 M.P.H.) (used regularly prior to 32143)
Monthly	05647 A	High speed gear on second reduction shaft (51 teeth; 3 M.P.H.) (used regularly after 32133)
Indefinite	05647 A1	Low speed gear on second reduction shaft
Monument	05648 A	High speed sliding pinion, (23 teeth; 3 1/2 M.P.H.) (used regularly prior to 32134)
Moody	05649 A	High speed sliding pinion, (21 teeth; 3 M.P.H.) (used regularly after 32133)
Indelible	05649 A1	Low speed sliding pinion
Mooring	05660 A	Bull pinion, prior to 54083
Moose	05666 A	Bull pinion, after 54082
Emona	05666 A1	Spacing washer
Mothering	05724 A	Spacing washer
Motherly	05725 A	Felt washer for first reduction shaft
Motion	05726 A	Spacer for first reduction shaft bearing, R. H., prior to 56575
Motional	05727 A	Collar for first reduction shaft, prior to 29534 2 3/5" dia., 1/2" wide (see 3346A)
Motionless	05728 A	Spacer for first reduction shaft bearing, L. H., prior to 56575
Motive	05729 A	Spacer for first reduction shaft bearing, L. H.
Enuza	05729 A1	Felt washer for second reduction shaft, prior to 54083 (see 03749A)
Mover	05749 A	Gasket for transmission case bottom
Muffle	05764 A	Washer for reverse shaft
Mumbling	05809 A	Shaft for reverse gear
Mummify	05810 A	Cap screw for second reduction bearing flange
Mummy	05818 A	Cap screw for first reduction bearing retainer
Mungo	05822 A	Dowel for roller bearing spacer
Emopa	05823 A	Gasket for transmission case cover
Nandina	05922 A	Gasket for first reduction shaft bearing, R. H.
Naples	05926 A	Gasket for second reduction shaft bearing, L. H.
Napoleon	05927 A	Bolt for transmission case bottom, rear
Nasal	05945 A	Bolt for transmission case bottom, front and center
Nasality	05946 A	Roller assembly for bearing 09411A
Galaxy	05979 A	Inner race for bearing 09411A
Gale	05980 A	Outer race for bearing 09411A
Galeas	05981 A	Inner race for bearing 09410A and 010664A, prior to 54083
Galena	05982 A	Roller assembly for bearing 09409A
Garrison	05983 A	Roller assembly for first reduction shaft bearing 09409A1
Enuxa	05983 A1	Inner race for bearing 09409A
Gaskins	05984 A	Inner race for Hyatt bearing 09409A1
Ipeja	05984 A1	Outer race for bearing 09409A
Gasped	05935 A	Outer race for first reduction shaft bearing 09409A1
Epaca	05985 A1	Nut for bull pinion; used with 05642A1 shaft and also with 05642A when stud is put in same, prior to 54083 (see 07741A)
Hydrus	06568 A	Spacing washer for second reduction shaft from 42835 to 56596
Gondola	07043 A	Nut for first reduction gear, after 69703
Afoqa	07054 A	Key for 05666A bull pinion
Emoqa	07569 A	Key for 05666A1 bull pinion
Emora	07569 A1	Reverse gear—use 09396A
	07570 A	Oil gauge for transmission, prior to 62409 (see 07976A)
Emosa	07603 A	Nut for bull pinion after 54082 (see 06568A)
Emova	07741 A	Snap ring for first reduction shaft bearing spacer, after tractor 56374
Epada	07932 A	Dowel for first reduction shaft collar, after tractor 56374
Epafa	07933 A	Oil gauge for transmission, after 62408 (see 07603A)
Ipepa	07976 A	Bolt for A3331A spacing collar, after 69761
Afeye	0949 AB	Washer for first reduction shaft R.H., after 69003
Afeze	01023 AB	

Gasoline and Kerosene Tanks, Oil Pump, Indicator, Gauge and Tubing

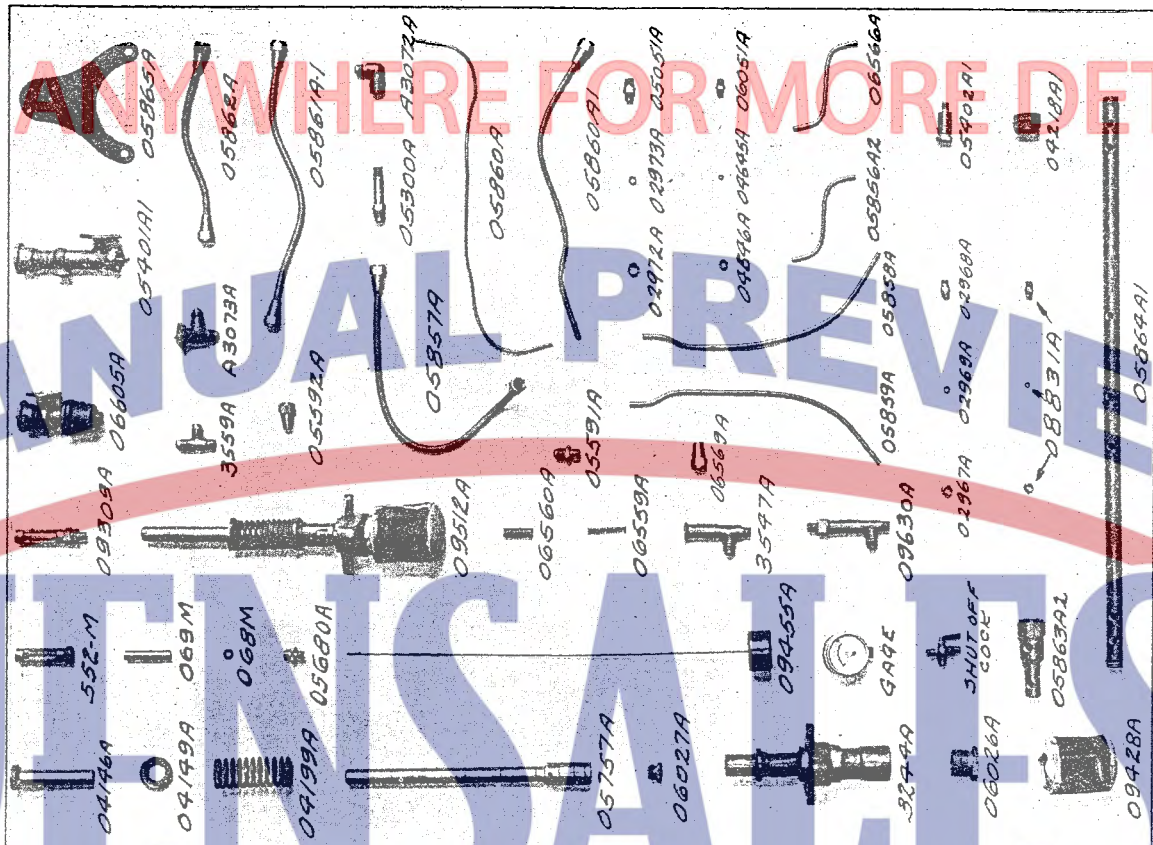

Telegraph Cipher	Number of Part	NAME OF PART
Afowe	2378 1/2 A	Saddle for water tank.
Combining	2653 A	Filler cap for gasoline and kerosene tanks, prior to 47003.
Ajeja	A2653 A	Filler cap for gasoline, kerosene and carburetor supply water tank.
Carrie	2942 A	Outlet flange for kerosene tank.
Apuz	3053 A	Filler flange for kerosene tank, prior to 47003.
Aqaca	A3053 A	Filler flange for kerosene tank.
Lutist	A3072 A	Elbow for oil tube, prior to 48802.
Luxuriant	A3073 A	Connection for oil indicator, prior to 32934.
Mintage	3244 A	Body for oil pump.
Ayaza	3325 A	Outlet flange for gasoline, carburetor supply water tank.
Aqaga	3336 A	Filler flange for gasoline tank, prior to 47003.
Aqaja	A3336 A	Filler flange for gasoline, and carburetor supply water tank.
Infusion	3547 A	Body for oil pressure valve, after 32933.
Ingenerate	3559 A	Connection for oil indicator, from 32934 to 45180.
Codger	02967 A	Nut for compression coupling, 1/4" tubing.
Codify	02968 A	Body for compression coupling, 1/4" tubing.
Codilla	02969 A	Sleeve for compression coupling, 1/4" tubing.
Codium	02972 A	Nut for compression coupling 09035A.
Coequal	02973 A	Sleeve for compression coupling 09035A.
Coerce	02991 A	Body for 08359A compression coupling.
Conceit	04146 A	Push rod for oil pump plunger.
Enoga	04148 A	Pin for oil pump spring collar.
Magnesia	04149 A	Collar for oil pump spring.
Concinnity	04199 A	Spring for oil pump.
Conclude	04218 A	Cap for oil distributor, R. H., prior to 32934.
Ingenious	04218 A1	Cap for oil distributor, R. H.
	04602 A	Float for oil level gauge, use 09455A.
Evangelize	04644 A	Body for compression coupling, 1/8" x 1/8" (for 08831A).
Evaporable	04645 A	Sleeve for compression coupling, 1/8" x 1/8" (for 08831A).
Evection	04646 A	Nut for compression coupling, 1/8" x 1/8" (for 08831A).
Library	05051 A	Body for compression coupling 09035A.
Mongolian	05300 A	Connection for oil pump tube to outlet elbow (discarded).
Enoja	05393 A	Stud for oil filler cap spring, prior to 69054.
Margin	05401 A1	Oil indicator, prior to 32934 (see 06605A).
Marginate	05402 A1	Pipe connection for oil distributor, prior to 45781.
Lignite	05489 A	Flared tube union, 1/8" x 1/8".
Lignum	05490 A	Flared tube union nut, 1/8" x 1/8".
Homiletic	05589 A	Flared tube union, 1/8" x 1/4".
Marvel	05591 A	Flared tube union, 3/8" x 1/4".
Marvelous	05592 A	Flared tube nut, 3/8" x 1/4".
Menthol	05680 A	Connection for oil level gauge, prior to 62409.
Mortify	05712 A	Gasket for oil reservoir.
Muddle	05757 A	Body plunger for oil pump, use 010773A.

POWER TAKE OFF ATTACHMENT

