



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Parts Manual

2094

Volume 1 of 2

JENSALES.COM
or Call 800-443-0625

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. **J.I. CASE** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-P-2094

Parts Manual

ILLUSTRATION AND TEXT

The arrangement of this parts catalog is for easy identification of Case parts. All parts are illustrated in "Exploded Views." This places each part in normal reference to each other. Reference numbers are used in the illustrations. These numbers are in reference to those on the text pages. The text pages list reference

GENERAL

1

ENGINE

2

FUEL

3

ELECTRICAL

4

STEERING

5

POWER TRAIN

6

BRAKES

7

HYDRAULIC

8

CHASSIS

9

NUMERICAL
INDEX

1

0

PART NO	PAGE	REF
A 141680	93	14
A 141684	297	18
A 141686	297	16
A 141692	189	1

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

2094 TRACTOR
Parts Catalog

Rac 8-1940

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

A

Accumulator, Emergency Brake . . . 7-247,249
 Acoustical Covers, Cab 9-405
 Adapters, Hydraulic Coupling 8-315
 Air Cleaner 2-11
 Air Conditioning Compressor Clutch . . 9-425
 Air Conditioning, Cab 9-421
 Air Conditioning Hoses 9-427
 Air Conditioning Evaporator 9-419
 Air Conditioning Condenser 9-427
 Air Conditioning Compressor 9-429
 Air Conditioning Blower Assembly . . . 9-413
 Air Conditioning Receiver-Drier 9-427
 Air Conditioning Expansion Valve 9-421
 Air Conditioning Switches 9-409
 Air Filter, Cab 9-411
 Air Restriction Switch 2-11
 Alternator Assembly 4-93 through 4-97
 Alternator Mounting 4-91
 Arm, Draft 9-335
 Arm, Draft (Telescoping) 9-337
 Arm, Steering 5-125
 Aspirator Tube, Engine 2-11
 Auxiliary Electric Outlet 4-63,79
 Auxiliary Outlet Harness 4-63,79
 Axle, Front 5-125,127
 Axle, Front (MFD) 5-131 through 5-141
 Axle, Rear 120 Inch 6-201
 Axle, Rear 96 Inch 6-199

B

Battery 4-83
 Battery Cables 4-83
 Battery Holder Box 4-83
 Bearing, Engine Main 2-31
 Belt, Fan 2-9
 Belt, Seat 9-361,367
 Block, Cylinder 2-29
 Blower Assembly, Cab Air 9-413
 Brake, Differential 6-195
 Brake Pedals 7-233
 Brake, PTO 6-227
 Brake Valve Assembly 7-237,239
 Brake Valve, Master 7-241
 Breaker, Circuit 4-81
 Bushings, Camshaft 2-27

C

Cab Assembly 9-389
 Cab Lights 4-71
 Cab Mounts and Supports 9-381

C

Cable, Battery 4-83
 Cable, Cab Heat Control 9-409
 Caliper, Disc Brake 7-257
 Camshaft, Engine 2-27
 Camshaft Bushings 2-27
 Cap, Main Bearing 2-29
 Center Wheel, Transmission 6-193
 Cigar Lighter 4-57
 Circuit Breaker 4-81
 Cluster, Instrument 4-77
 Clutch, Air Compressor 9-425
 Clutch, Foot 6-169
 Clutch, PTO 6-227
 Clutch Housing 6-151
 Clutches, (C1) and (C4) 6-173
 Clutches, (C2) and (C3) 6-177
 Cold Start Switch 2-13
 Compensator, Hydraulic Pump 8-281
 Compressor, Air 9-429
 Condenser, Air Conditioning 9-427
 Connecting Rod 2-33
 Connecting Rod Bearing 2-33
 Control Console 9-359
 Coolant Indicator Module 4-69
 Cooler, Engine Oil 2-21
 Cooler, Hydraulic Oil 5-117
 Core, Evaporator 9-419
 Core, Heater 9-417
 Countershaft, Transmission 6-191
 Coupler, Quick Hitch 9-339,341
 Couplings, Hydraulic 8-315
 Cover, Cylinder Head 2-23
 Covers, Trans. Without Hitch 6-159
 Crankshaft, Engine 2-31
 Cylinder Assembly, Remote Hydraulic . . 8-301
 Cylinder Block, Engine 2-29
 Cylinder Block Gasket Kit 2-39
 Cylinder Block Heater 2-13
 Cylinder Head, Engine 2-23
 Cylinder Assembly, Steering 5-121

D

Decals, French Language 9-373,375
 Decals, Safety 9-375
 Decals, Tractor 9-373
 Defroster, Cab Windshield 9-407
 Differential Assembly 6-193
 Differential Assembly (MFD) 5-133,135
 Differential Brake 6-195
 Differential Clutch 6-195

ALPHABETICAL INDEX

D

Differential Lock Harness 4-57
 Differential Lock Mechanism 6-197
 Dipstick, Engine Oil 2-29
 Dipstick, Transmission Oil 6-157
 Door, Cab 9-391
 Draft Arms, Hitch 9-335
 Draft Arms, Hitch (Telescoping) 9-337
 Draft Sensing Linkage 8-321
 Drawbar 9-343
 Drawbar, Special Wide Swing 9-345
 Drive, Fuel Injection Pump 3-41

E

Electric Outlet, Auxiliary 4-63,79
 Electric Shift Harness 4-75
 Electrical Harness, Auxiliary Outlet .. 4-63,79
 Electrical Harness, Cab Headliner 4-71
 Electrical Harness, Cab Lower 4-57
 Electrical Harness, Fwd. Components .. 4-69
 Electrical Harness, Engine 4-61
 Electrical Harness, Rear Component ... 4-65
 Electrical Harness, Transmission 4-63
 Emergency Hand Brake .. 7-245 through 7-253
 Engaging Control (MFD) 6-183
 Engine Cylinder Block 2-29
 Engine Block Heater 2-13
 Engine Cylinder Head 2-23
 Engine Crankshaft 2-31
 Engine Shut off, Automatic 4-107
 Ether Starting Kit 2-13
 Evaporator, Air Conditioning 9-419
 Exchanger, Engine Oil Heat 2-21
 Exhaust System 2-15

F

Fan 2-9
 Fan Belt 2-9
 Filter, Cab Air 9-411
 Filter, Engine Fuel 3-45
 Filter, Engine Oil 2-21
 Filter, Hydraulic Oil 8-267
 Filter, Water 2-7
 Flasher Switch 4-57
 Flasher Warning Lamp 4-99
 Flood Lamp, Front 4-101
 Flood Lamp, Rear 4-101
 Flood Lamp, Upper 4-103
 Flow Control Kit (Remote Hydraulic) .. 8-285
 Flywheel, Engine 2-31
 Foot Clutch 6-169

F

Forward Component Harness 4-69
 Four Post ROPS Wiring 4-73
 Frame, Cab 9-389
 Frame, Protective 9-385
 Frame, Weight 9-349
 Front Lamp Harness 4-69
 Front Wheel 5-147
 Front Wheel, MFD 5-149
 Fuel Filter System 3-45
 Fuel Injection Pump 3-43
 Fuel Injection Pump Drive 3-41
 Fuel Injection System 3-47
 Fuel Injector 3-49,51
 Fuel Shut Off Control 3-53
 Fuel Tank 3-55
 Fuel Tank Level Sender 3-55
 Fuel Tank Repair Kit 3-55
 Fuses, Cab 4-59
 Fuses, Tractor 4-59
 Fuse Block, Cab 4-59
 Fuse Holder, Tractor 4-59

G

Gasket Kits, Engine 2-39
 Gasket Kits, Engine Oil Pan 2-39
 Gear, Bevel, Transmission 6-193
 Gear, Park Lock 6-191
 Gear, Pinion, Transmission 6-193
 Gear Shift Linkage 6-163
 Glass, Cab 9-399,401
 Grille, Front Lower 9-353
 Grille, Front Upper 9-355
 Ground Speed Attachment 4-107
 Guide, Engine Valve 2-25

H

Hand Brake, Emergency . 7-245 through 7-253
 Hand Brake, Parking 7-255
 Harness, Auxiliary Outlet 4-63,79
 Harness, Cab Headliner 4-71
 Harness, Cab Lower 4-57
 Harness, Forward Components 4-69
 Harness, Engine Electrical 4-61
 Harness, Electric Shift 4-75
 Harness, Rear Component 4-65
 Harness, Transmission Electrical 4-63
 Head Lamp 4-99
 Headliner, Cab 9-407
 Heat Exchanger, Engine Oil 2-21
 Heater, Cab 9-417

ALPHABETICAL INDEX

H		L	
Heater, Cylinder Block	2-13	Lighter Cigar	9-57
Hitch Control Valve	8-331	Linkage, Draft Control	8-319
Hitch Depth Control Linkage	8-319	Linkage, Draft Sensing	8-321
Hitch Depth Sensing Linkage	8-321	Linkage, Power Shift	6-161
Hitch Draft Arms	9-335	Linkage, Range Shift	6-163
Hitch Draft Arms (Telescoping)	9-337	Lock, Differential	7-243
Hitch Hydraulic Circuit	8-329	Louvers, Cab Air	9-407
Hitch Rockshaft	8-323		
Holder, Fuse (Tractor)	4-59	M	
Hood, Upper	9-355	Manifold, Electric Shift	6-155
Hood Latch	9-351	Manifold, Exhaust	2-15
Hood Supports	9-351	Manifold, Intake	2-15
Hoses, Cab Air Conditioning	9-421	Manifold, Water	2-5
Hoses and Adapters, Remote	8-313	Master Brake Valve	7-241
Housing, Rear Axle 120 Inch	6-201	Mats, Floor	9-403
Housing, Rear Axle 96 Inch	6-199	Mirrors, Cab	9-431
Hub, Front Wheel	5-147	Muffler, Vertical	2-17
Hydraulic Charging Pump	8-263	Muffler, Vertical Attachment	2-19
Hydraulic Circuit, Hitch Control	8-329		
Hydraulic Circuit, PTO	8-259	N	
Hydraulic Manifold, Elec. Shift	6-153	Nozzle, Ether Injector	2-13
Hydraulic Oil Filter	8-267	Nozzle, Fuel Injector	3-49,51
Hydraulic Oil Cooler	5-117		
Hydraulic Pump Assembly	8-273	O	
Hydraulic Pump Circuit	8-265	Oil Cooler, Engine	2-21
Hydraulics, Power Shift	8-261	Oil Cooler, Hydraulic	5-117
		Oil Filter, Engine	2-21
I		Oil Filter, Hydraulic	8-267
Injection System, Engine Fuel	3-47	Oil Pan, Engine	2-37
Insert, Connecting Rod	2-33	Oil Pan Gasket	2-39
Insert, Main Bearing	2-31	Oil Pressure Switch, Hydraulic	8-259
Insert, Exhaust Valve	2-25	Oil Pump, Engine	2-35
Instrument Cluster	4-77	Operators Manual Box	9-357
Instrument Panel	9-357		
Intermediate Shaft	6-181	P	
		Pan, Engine Oil	2-37
K		Pan, Evaporator	9-419
Key, Starting and Door	4-57,9-391	Panel, Cab Controls	9-409
		Panel, Instrument	9-357
L		Panels, Side Front	9-353
Lamp, Cab Mounted	4-71	Panels, Side Rear	9-355
Lamp, Flasher Warning	4-99	Park Lock Control	6-165
Lamp, Head	4-99	Parking Hand Brake	7-255
Lamp, Instrument Cluster	4-77	Pedals, Brake	7-233
Lamp Assembly, Cab Courtesy	9-407	Piston, Engine	2-83
Lamp Assembly, Cab Dome	9-407	Piston, Rockshaft Control	8-323
Latch, Hood Lock	9-351	Planetary Clutch	6-175
Lift Eyes	9-377	Planetary Output	6-179
Lifter, Push Rod	2-25	Planetary, Rear Axle	6-199,201
Light Switch	4-57	Plates, Differential Brake	6-195

ALPHABETICAL INDEX

P

Plates, Differential Clutch	6-195
Plates, Torque Limiter	6-171
Plates, PTO Clutch	6-227
Platform and Fenders, without Cab	9-379
Platform Mounts	9-377
Platform Lamp Wiring	4-67
Plenum, Cab Air	9-415
Power Shift Linkage	6-161
Power Shift Hydraulics	8-261
Power Train (MFD)	6-185
Pressure Control Valve	7-251
Pressure Regulator Valve	7-253
PTO Controls	6-221
PTO Clutch and Brake	6-227
PTO Gears and Shafts	6-229
PTO Housing	6-225
PTO Hydraulics	8-259
PTO Output	6-231
PTO Valve	6-223
Pulley, Air Compressor Drive	9-425
Pulley, Fan Drive	2-9
Pulley, Fan Drive (Crankshaft)	2-31
Pump, Engine Oil	2-35
Pump, Hydraulic Charge	8-263
Pump, Steering	5-119
Pump, Water	2-9
Push Rod, Engine	2-25
Pyrometer Thermocouple	4-59

Q

Quick Hitch Coupler	9-339,341
---------------------------	-----------

R

Radiator	2-3
Radio and Speakers	4-109
Rail, Side	9-349
Range Shift Mechanism	6-167
Rear Component Harness	4-65
Receiver-Drier, Air Conditioning	9-427
Regulator, Hydraulic Oil Filter	8-267
Regulator, Remote Cylinder Return	8-313
Regulator Valve, Hydraulic Oil	6-223
Relief Valve, Lube Oil	6-157
Remote Cylinder Attachment	8-313
Remote Hydraulics, 2 Circuit	8-287
Remote Hydraulics, No. 3 Circuit ..	8-289,293
Remote Hydraulics, No. 4 Circuit ..	8-297,299
Remote Hydraulic Controls, 2 Circuit ..	8-287
Remote Hydraulic Couplings	8-315
Remote Hydraulic Control Valve	8-301

R

Remote Hydraulic Valve Body	8-303,305
Rocker Arm, Engine	2-25
Rockshaft, Hitch	8-323
Rod, Connecting	2-33
Rod, Push	2-25
Roof, Cab	9-387
Rotator, Engine Valve	2-25

S

Safety Chain Support	9-347
Seat Assembly, Cloth ...	9-361 through 9-365
Seat Assembly, Vinyl	9-367, 9-369
Seat Belts	9-361,367
Seat Swivel Kit	9-371
Sender, Fuel Tank Level	3-55
Sensing Linkage, Rockshaft	8-323
Sensing Springs, Draft Control	9-333
Shroud, Fan	2-3
Shroud, Instrument Panel	9-357
Shut Off, Engine	4-107
Shut Off, Fuel	3-53
Side Rail	9-349
Sleeve, Cylinder	2-33
Solenoid, Cab Electrical	4-81
Solenoid, Engine Electrical	4-81
Speakers, Radio	4-109
Spindle, Front Wheel	5-125,127
Starter Assembly	4-87,89
Starting Key	4-57
Starter Mounting	4-85
Starting Switch	4-57
Steering Arm	5-125,127
Steering Column	5-111
Steering Cylinders	5-121
Steering Cylinders (MFD)	5-123
Steering Wheel	5-111
Steering Pump, Hydrostatic	5-119
Steering System, Hydrostatic	5-113
Steering Tie Rod	5-143,145
Steering Tie Rod (MFD)	5-131
Step Extension	9-383
Steps	9-383
Switch, Air Restriction	2-11
Switch, Blower Control	9-409
Switch, Cold Start	2-13
Switch, Light	4-57
Switch, Neutral Start	6-167
Switch, Starting	4-57
Switch, Transmission Oil Filter	8-265
Switch, Transmission Oil Pressure	6-221

ALPHABETICAL INDEX

S

Switch, Transmission Temperature	8-259
Switch, Windshield Wiper	9-409

T

Tail Lamp	4-99
Tank, Fuel	3-55
Tie Rod, Steering	5-143,145
Tie Rod, Steering (MFD)	5-131
Timing Gear Cover	3-41
Thermocouple, Pyrometer	4-59
Thermostat, Engine Temperature	2-5
Throttle Control	3-53
Torque Limiter	6-171
Transfer Gearbox, Constant Lock	6-189
Transfer Gearbox (MFD)	6-187
Transmission Harness, Electrical	4-63
Transmission Housing	6-157
Transmission Lubrication Tubes ..	8-269,271

V

Valve, Discharge (Air Compressor)	9-429
Valve, Exhaust	2-25
Valve, Expansion	9-421
Valve, Hitch Control	8-331
Valve, Power Brake	7-237,239
Valve, PTO and Regulator	6-223
Valve, Remote Hydraulics	8-301
Valve, Suction (Air Compressor)	9-429
Valve, Grind Gasket Kit	2-39
Valve, Intake	2-25

W

Water Filter Kit	2-7
Water Manifold	2-5
Water Pump	2-9
Weight, Front End	9-349
Weight Frame	9-349
Weights, Rear Wheel	6-219
Wheel, Front	5-147
Wheel, Front (MFD)	5-149
Wheel, Dual Rear (34 Inch Cast)	6-211
Wheel, Dual Rear (38 Inch Cast)	6-213
Wheel, Dual Rear (38 Inch Steel)	6-215
Wheel, Rear (30 Inch Cast)	6-203
Wheel, Rear (34 Inch Cast)	6-205,207
Wheel, Rear (38 Inch Cast)	6-209
Wheel, Steering	5-111
Wheel, Spacer, Outer Dual	6-217
Wheel, Spindle, Front	5-125,127
Wheel, Weights	6-219

W

Window, Cab Rear	9-395
Window, Cab Side	9-397
Wiper, Windshield	9-423
Wishbone, Draft Control	9-333

**PICTORIAL INDEX
MAIN HYDRAULICS**

REF	DESCRIPTION	PAGE
1	Regulator Valve to Manifold Tube	8-329
2	PTO Brake Drain Tube	8-259
3	Regulator Valve to Differential Lock Valve Tube	7-243
4	Differential Lock Valve to Transmission Tube	7-243
5	Regulator Valve to PTO Clutch Tube	8-259
6	Regulator Valve to PTO Brake Tube	8-259
7	Manifold to Lift Cylinder Tube	8-329
8	Right Hitch Valve Pilot Tube	8-265
9	Left Hitch Valve Pilot Tube	8-265
10	Pump to Regulator Valve Hose	8-259
11	Regulator Valve to Shift Manifold Supply Tube	8-261
12	Control Valve to Shift Manifold Tube	8-261
13	Hydraulic Pump Drain Tube	8-265
14	Transmission Charge Pump Tube	8-269
15	C1 Clutch Fill Tube	8-261
16	C4 Clutch Fill Tube	8-261
17	Filter Housing to Pump Suction Tube	8-265
18	Transmission Countershaft Lubrication Tube	8-269
19	C1 Clutch Lubrication Tube	8-269
20	Steering Suction Tube	8-265

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS