



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Parts Manual

2394

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-P-2394

ILLUSTRATION AND TEXT

The arrangement of this parts catalog is for easy identification of Case parts. All parts are illustrated in "Exploded Views." This places each part in normal reference to each other. Reference numbers are used in the illustrations. These numbers are in reference to those on the text pages. The text pages list reference

GENERAL

1

ENGINE

2

FUEL

3

ELECTRICAL

4

STEERING

5

POWER TRAIN

6

BRAKES

7

HYDRAULIC

8

CHASSIS

9

NUMERICAL
INDEX

10

PART NO	PAGE	REF
A 141680	93	14
A 141684	297	18
A 141686	297	16
A 141692	189	1

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

**2394 TRACTOR
Parts Catalog**

Rac 8-1960

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

2394 TRACTOR

ALPHABETICAL INDEX

A

Accumulator, Emergency Brake ... 7-221,223
 Acoustical Covers, Cab 9-369
 Adapters, Hydraulic Coupling 8-279,281
 Air Cleaner 2-13
 Air Conditioning Compressor Clutch ... 9-389
 Air Conditioning, Cab 9-383
 Air Conditioning Hoses 9-383
 Air Conditioning Evaporator 9-381
 Air Conditioning Condenser 9-391
 Air Conditioning Compressor 9-393
 Air Conditioning Blower Assembly 9-375
 Air Conditioning Receiver-Drier 9-391
 Air Conditioning Expansion Valve 9-383
 Air Conditioning Switches 9-385
 Air Filter, Cab 9-373
 Air Induction System 2-11
 Alternator Assembly 4-97,99,101
 Alternator Mounting 4-95
 Antenna, Radio 4-111
 Arm, Draft Arm Lift 8-293
 Arm, Steering 5-123
 Auxiliary Electric Outlet 4-83
 Auxiliary Outlet Harness 4-69
 Axle, Front 5-123,125
 Axle, Rear (Long) 6-175
 Axle, Rear (Short) 6-173

B

Battery 4-87
 Battery Cables 4-87
 Battery Holder Box 4-87
 Bearing, Engine Main 2-37
 Belt, Fan 2-9
 Belt, Seat 9-337
 Block, Cylinder 2-35
 Blower Assembly, Cab Air 9-375
 Brake, Differential 6-169
 Brake System
 Emergency Hand 7-219 through 7-227
 Brake Hydraulic Circuit 7-209
 Brake Pedals 7-207
 Brake, PTO 6-203
 Brake Valve Assembly 7-213,215,217
 Breaker, Circuit 4-85
 Bushings, Camshaft 2-33

C

Cab Assembly 9-351,353
 Cab Lights 4-107
 Cab Mounts and Supports 9-345

C

Cable, Battery 4-87
 Cable, Cab Heat Control 9-385
 Camshaft, Engine 2-33
 Camshaft Bushings 2-33
 Cap, Cab Roof 9-351
 Cap, Main Bearing 2-35
 Cigar Lighter 4-63
 Circuit Breaker 4-85
 Cluster, Instrument 4-81
 Clutch, Air Compressor 9-389
 Clutch, Foot 6-149
 Clutch, PTO 6-203
 Clutch Housing 6-151,153
 Clutches, (C1) and (C4) 6-155
 Clutches, (C2) and (C3) 6-161
 Clutches, (C5) and (C6)
 24 Speed Transmission 6-163
 Cold Start Switch 2-15
 Compensator, Hydraulic Pump 8-243
 Compressor, Air 9-393
 Condenser, Air Conditioning 9-391
 Connecting Rod 2-39
 Connecting Rod Bearing 2-39
 Control Console 9-327[®]
 Coolant Indicator Module 4-73
 Cooler, Hydraulic Oil 5-117
 Core, Evaporator 9-381
 Core, Heater 9-379
 Countershaft, Transmission 6-165
 Coupler, Quick Hitch 9-313,315,317
 Couplings, Hydraulic 8-281
 Cover, Cylinder Head 2-29
 Cover Timing Gear 3-47
 Covers, Transmission Without Hitch ... 6-139
 Crankshaft, Engine 2-37
 Cylinder Assembly, Remote Hydraulic . 8-283
 Cylinder Assembly, Steering 5-121
 Cylinder Block, Engine 2-35
 Cylinder Block Gasket Kit 2-45
 Cylinder Block Heater 2-15
 Cylinder Head, Engine 2-29
 Cylinder Sleeve 2-39

D

Decals, Safety Kit 9-343
 Decals, Tractor Kit 9-341
 Defroster, Cab Windshield 9-371
 Differential Assembly 6-167
 Differential Brake 6-169

2394 TRACTOR

ALPHABETICAL INDEX

D

Differential Clutch 6-167
 Differential Lock Mechanism 6-171
 Dipstick, Engine Oil 2-35
 Dipstick, Transmission Oil 6-137
 Door, Cab 9-355,357
 Draft Arms, Hitch 9-301
 Draft Sensing Linkage 8-291
 Drawbar (With Hitch) 9-305,307
 Drawbar (Without Hitch) 9-309
 Drive, Fuel Injection Pump 3-47
 Drive Shaft 6-167
 Dual Range Manifold,
 24 Speed Transmission 6-133

E

Electric Outlet, Auxiliary 4-83
 Electrical Harness, Auxiliary Outlet 4-69
 Electrical Harness, Cab Headliner 4-75
 Electrical Harness, Cab 4-63
 Electrical Harness, Differential Lock 4-63
 Electrical Harness,
 Forward Components 4-73
 Electrical Harness, Engine 4-67
 Electrical Harness, Flood Lamp
 Lower Front 4-67
 Electrical Harness, Transmission 4-69
 Electrical Shift Harness 4-79
 Electric Shift Manifold 6-133
 Emergency
 Brake System 7-219 through 7-227
 Engine Block Heater 2-15
 Engine Cylinder Block 2-35
 Engine Cylinder Head 2-29
 Engine Crankshaft 2-37
 Engine RPM Sensor 3-47
 Engine Shutoff 4-109
 Ether Starting Kit 2-15
 Evaporator, Air Conditioning 9-381
 Exhaust System 2-5,23

F

Fan, Engine 2-9
 Fan Belt 2-9
 Filter, Cab Air 9-373
 Filter, Engine Fuel 3-51
 Filter, Engine Oil 2-27
 Filter, Hydraulic Oil 8-245
 Filter, Water 2-7
 Flasher Switch 4-63

F

Flasher Warning Lamp 4-103
 Flood Lamp, Front 4-107
 Flood Lamp, Rear 4-105
 Flood Lamp, Upper 4-105
 Flow Control Kit (Remote Hydraulic) .. 8-265
 Flywheel, Engine 2-37
 Foot Clutch 6-149
 Forward Component Harness 4-73
 Frame, Cab 9-353
 Frame, Protective 9-349
 Front Lamp Lower Harness 4-65
 Front Wheel 5-129
 Fuel Filter System 3-51
 Fuel Injection Pump 3-49
 Fuel Injection Pump Drive 3-47
 Fuel Injection System 3-51
 Fuel Injector 3-55,57
 Fuel Shut Off Control 3-59
 Fuel Tank 3-61
 Fuel Tank Level Sender 3-61,71
 Fuel Tank Repair Kit 3-61
 Fuses, Tractor 4-65
 Fuse Holder, Tractor 4-65

G

Gasket Kits, Engine 2-45
 Gasket Kits, Engine Oil Pan 2-43
 Gear, Transmission Bevel 6-167
 Gear, Park Lock 6-171
 Gear, Transmission Pinion 6-167
 Gear Shift Linkage 6-143
 Gear Shift Mechanism 6-147
 Gear Pump Assembly, Hydraulic 8-241
 Glass, Cab 9-363,365
 Grille, Front Lower 9-321
 Grille, Front Upper 9-323
 Ground Speed Sensor Attachment 4-111
 Guide, Engine Valve 2-31

H

Hand Brake System,
 Emergency 7-219 through 7-227
 Harness, Auxiliary Outlet 4-69,83
 Harness, Cab Headliner 4-75
 Harness, Cab 4-63
 Harness, Forward Components 4-73
 Harness, Engine Electrical 4-67
 Harness, Lower Flood Lamp 4-67
 Harness, Electrical Shift 4-79

2394 TRACTOR

ALPHABETICAL INDEX

H		L	
Harness, Rear Components	4-71	Lamp Assembly, Cab Dome	9-371
Harness, Transmission Electrical	4-69	Lamp, Tail	4-103
Head Lamp	4-103	Latch, Hood Lock	9-319
Headliner, Cab	9-371	Lever, Emergency Hand Brake	7-219
Heat Exchanger	2-27	Lifter, Push Rod	2-31
Heater, Cab	9-379	Light Switch	4-63
Heater, Cylinder Block	2-15	Lighter Cigar	4-63
Hitch Control Valve	8-297	Liners, Connecting Rod Bearing	2-39
Hitch Depth Control Linkage	8-295	Liners, Main Bearing	2-37
Hitch Depth Sensing Linkage	8-291	Linkage, Draft Control	8-291
Hitch Draft Arms	9-301	Linkage, Draft Sensing	8-291,293
Hitch Hydraulic Circuit	8-295	Linkage, Gear Shift	6-143
Hitch Rockshaft	8-289	Linkage, PTO	6-197
Hood, Upper	9-323	Linkage, Range Power Shift	6-141
Hood Latch	9-319	Lock, Differential	6-171
Hood Supports	9-319	Lock, Valve, Differential	7-211
Hoses, Cab Air Conditioning	9-391	Louvers, Cab Air	9-371
Hoses and Adapters, Remote Hydraulic	8-281		
Hoses, Heater	9-379	M	
Housing, Rear Axle (Long)	6-175	Magnetic Sensor, Engine RPM	3-47
Housing, Rear Axle (Short)	6-175	Manifold Assembly, Electric Shift	6-135
Housing, PTO	6-201	Manifold, Exhaust	2-17
Housing, Transmission	6-137	Manifold, Intake	2-17
Hub, Front Wheel	5-129	Manifold, Electric Shift	6-133
Hydraulic Charging Pump	8-247	Manifold, Water	2-5
Hydraulic Circuit, Hitch Control	8-285	Mat, Floor	9-367
Hydraulic Circuit, PTO	8-229	Mirrors, Cab	9-395
Hydraulic Oil Filter	8-245	Muffler, Vertical	2-23
Hydraulic Oil Cooler	5-117	Muffler, Vertical On Tractor with Loader	2-25
Hydraulic Pump Assembly	8-237		
Hydraulic Pump Circuit	8-231,233	N	
Hydraulics, Brake	7-209	Neutral Start Switch	6-145
Hydraulic Manifold, Electric Shift	6-133	Nozzle, Ether Injector	2-15
		Nozzle, Fuel Injector	3-55,57
I			
Injection System, Engine Fuel	3-53	O	
Insert, Exhaust Valve	2-31	Oil Cooler, Hydraulic	5-117
Instrument Cluster	4-81	Oil Filter, Engine	2-27
Instrument Panel	9-325	Oil Filter, Hydraulic	8-245
		Oil Pan, Engine	2-43
K		Oil Pan Gasket	2-43
Key, Starting and Door	4-83	Oil Pressure Switch, Engine	4-67
L		Oil Pressure Switch, Hydraulic	8-229
Lamp, Cab Mounted	4-107	Oil Pump, Engine	2-41
Lamp, Flasher Warning	4-103	Operators Manual Box	9-325
Lamp, Head	4-103		
Lamp, Instrument Cluster	4-81	P	
Lamp Assembly, Cab Courtesy	9-371	Pan, Engine Oil	2-43
		Pan, Evaporator	9-381

2394 TRACTOR

ALPHABETICAL INDEX

P	R
Panel, Cab Control 9-385	Receiver-Drier, Air Conditioning 9-391
Panel, Instrument 9-325	Relay, Lamp 4-63
Panels, Side Front 9-321	Regulator, Hydraulic Oil Filter 8-245
Panels, Side Rear 9-323	Regulator, Remote Cylinder Return ... 8-279
Park Lock Control 6-145	Regulator Valve, Hydraulic Oil 6-199
Pedals, Brake 7-207	Remote Cylinder Attachment 8-279
Piston, Engine 2-39	Remote Hydraulics,
Piston, Rockshaft Control 8-289	No. 3 Circuit 8-253 through 259
Planetary Clutch,	Remote Hydraulics, No. 4 Circuit .. 8-261,263
12 Speed Transmission 6-157	Remote Hydraulic Couplings 8-281
Planetary Clutch,	Remote Hydraulic
24 Speed Transmission 6-159	Control Valve 8-267 through 8-277
Planetary Lubrication Tubes 6-177	Remote Hydraulic Valve Body 8-267,275
Planetary Output 6-165	Reverse Shift Mechanism 6-143
Planetary, Rear Axle 6-173,175	Rocker Arm, Engine 2-31
Plates, Differential Brake 6-168	Rockshaft, Hitch 8-289
Plates, Differential Clutch 6-167	Rod, Connecting 2-39
Plates, Torque Limiter 6-151,153	Rod, Push 2-31
Plates, PTO Clutch 6-203	Roof, Cab 9-351
Plenum, Cab Air 9-377	Roof Cap, Cab 9-351
Pressure Control Valve,	Rotator, Engine Valve 2-31
Emergency Brake 7-225	
Pressure Regulator Valve,	S
Emergency Brake 7-227	Safety Chain 9-311
PTO Controls 6-197	Seat Assembly 9-329 through 9-337
PTO Clutch and Brake 6-203	Seat Belts 9-337
PTO Gears and Shafts 6-205	Sender, Fuel Tank Level 3-61
PTO Housing 6-201	Sensing Linkage, Rockshaft 8-289
PTO Output 6-205	Sensing Springs, Draft Control 9-299
PTO Valve 6-199	Sensor Attachment, Ground Speed 4-111
Pulley, Air Compressor Drive 9-389	Sensor, Magnetic Engine RPM 3-47
Pulley, Fan Drive 2-9	Shroud, Fan 2-3
Pulley, Fan Drive (Crankshaft) 2-37	Shroud, Instrument Panel 9-325
Pump, Engine Oil 2-41	Shut Off, Fuel 3-59
Pump, Hydraulic Charge 8-247	Side Rail 9-311
Pump, Steering 5-119	Sleeve, Cylinder 2-39
Pump, Water 2-9	Shut Off, Engine 4-109
Push Rod, Engine 2-31	Solenoid, Cab Electrical 4-85
Pyrometer Thermocouple 4-65	Solenoid, Engine Electrical 4-85
Q	Speakers, Radio 4-111
Quick Hitch Coupler 9-313,315,317	Spindle, Front Wheel 5-123,125
R	Starter Assembly 4-91,93
Radiator 2-3	Starting Key 4-83
Radio and Speakers 4-111	Starter Mounting 4-89
Rail, Side 9-311	Starting Switch 4-83
Range Power Shift Linkage 6-141	Steering Arm 5-123,125
Rear Component Harness 4-71	Steering Column 5-113
	Steering Cylinders 5-121
	Steering Wheel 5-113

2394 TRACTOR

ALPHABETICAL INDEX

S

Steering Pump, Hydrostatic 5-119
 Steering System, Hydrostatic 5-115
 Steering Tie Rod 5-127
 Steps and Step Extension 9-347
 Switch, Air Cleaner Restriction 4-67
 Switch, Blower Control 4-75
 Switch, Cab Temperature 4-75
 Switch, Cold Start 2-15, 4-63
 Switch, Engine Oil Pressure 4-67
 Switch, Engine Temperature 2-5
 Switch, Light 4-63
 Switch, Starting 4-63, 83
 Switch, Transmission Oil Filter 4-69
 Switch, Turn Signal 4-83
 Switch, Windshield Wiper 4-75

T

Tachometer 4-81
 Taillight 4-103
 Tank, Fuel 3-61
 Tie Rod, Steering 5-127
 Timing Gear Cover 3-47
 Thermocouple, Pyrometer 4-65
 Thermostat, Engine Temperature 2-5
 Throttle Control 3-59
 Torque Limiter, 12 Speed Transmission 6-151
 Torque Limiter, 24 Speed Transmission 6-153
 Torque Tube 6-131
 Transmission Harness, Electrical 4-69
 Transmission Housing 6-137
 Turbocharger 2-21
 Turbocharger System 2-19

V

Valve, Cab Heat Control 9-385
 Valve, Differential Lock 7-211
 Valve, Discharge (Air Compressor) 9-393
 Valve, Engine Exhaust 2-31
 Valve, Expansion 9-383
 Valve, Hitch Control 8-297
 Valve, Master Brake 7-217
 Valve, Mechanism 2-31
 Valve, Power Brake 7-213, 215
 Valve, Pressure Control,
 Emergency Brake 7-225
 Valve, Pressure Regulator,
 Emergency Brake 7-227
 Valve, PTO and Regulator 6-199
 Valve, Remote Hydraulics 8-265 through 277

V

Valve, Suction (Air Compressor) 9-393
 Valve, Grind Gasket Kit 2-45
 Valve, Engine Intake 2-31

W

Water Filter and Kit 2-7
 Water Manifold 2-5
 Water Pump 2-9
 Weight, Front End 9-311
 Weights, Rear Wheel 6-195
 Wheel, Front 5-129
 Wheel, Dual Rear (32 inch Cast) 6-185
 Wheel, Dual Rear (38 inch Cast) 6-189
 Wheel, Dual Rear (38 inch Steel) 6-187
 Wheel, Dual Rear (42 inch Cast) 6-191
 Wheel, Dual Rear (42 inch Steel) 6-193
 Wheel, Rear
 (32 inch Cast and Stamped) 6-179
 Wheel, Rear (38 inch Cast) 6-181
 Wheel, Rear (42 inch Cast) 6-183
 Wheel, Steering 5-112
 Wheel, Spacer, Outer Dual 6-185, 187, 189, 191
 Wheel, Spindle, Front 5-123, 125
 Wheel, Weights 6-195
 Window, Cab Rear 9-359
 Window, Cab Side 9-361
 Window, Kit, Lower Rear 9-359
 Wiper, Windshield 9-387
 Wishbone, Draft Control 9-299

2394 TRACTOR

PICTORIAL INDEX
MAIN HYDRAULICS

REF	DESCRIPTION	PAGE
1	Dual Range Lubrication Tube (24 Speed Transmission)	8-229
2	(C1) Clutch Lubrication Tube	8-229
3	PTO Lubrication Tube (Front)	8-229
4	PTO Lubrication Tube (Rear)	8-229
5	Hydraulic Pump Suction Tube	8-231
6	Steering Pump Suction Tube	8-231
7	Hydraulic Pump To Regulator Tube	8-231
8	Dual Range LH Tube (24 Speed Transmission)	6-133
9	Dual Range RH tube (24 Speed Transmission)	6-133
10	Planetary Lubrication Tube (Front)	6-177
11	Planetary Lubrication Tube Assembly (Rear)	6-177
12	Regulator Valve to Lock Valve Tube	7-211
13	Differential Lock to Transmission Tube	7-211
14	Regulator Valve to PTO Clutch Tube	8-229
15	Regulator Valve to PTO Brake Tube	8-229

JENSALES®
 purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS