



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J. I. Case

Parts Manual

256

Terratac Crawler

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-P-256 TER

CLICK ANYWHERE FOR MORE DETAILS



MODEL "256" TERRATRAC

CRAWLER TRACTOR

PARTS CATALOG

No. 1005

JENSALES.COM

or Call **800-443-0625**



CLICK ANYWHERE FOR MORE DETAILS

J. I. CASE CO.

Est. 1842 Racine, Wisconsin, U. S. A.

MODEL "256" CRAWLER TRACTOR

ALPHABETICAL INDEX

CLICK ANYWHERE FOR MORE DETAILS

Page

Page

A

Air Cleaner	26
Ammeter	21-25
Axle - Drive	46

B

Ballast Box	61
Battery Cables	31
Bearings - Engine	9-19
Belt Pulley	117
Block - Engine Cylinder	5
Brakes	41
Brake Levers	35
Breather - Filter	73-76
Bushings - Track	54
Bushings - Camshaft	11-19

C

Camshaft	11
Carburetor	15-17
Carburetor Parts	16-17
Chain - Track	54
Choke - Control	26
Clutch	36-37
Clutch Pedal	38
Coil - Ignition	21
Connecting Rods	9
Counter Weights	59-60-61
Crankshaft	9
Cushion - Seat	33

D

Differential	41
Distributor - Ignition	21
Distributor Parts	22-23
Dozer - Angle	81-85
Dozer - Snow	89-90
Dozer - Straight	79-83
Dozer Hydraulics	86-88-91-92
Drawbar	63

E

Electrical Parts	21
Engine - Replacement	19
Exhaust Pipe	31

F

Fan	27-77
Fan Belt	27
Fenders	33-77
Flywheel	9
Frame - Engine	63
Fuel Pump	14
Fuel Strainer	18
Fuel Strainer Parts	18

G

Gauge - Oil Pressure	25
Generator	21-23
Gear Shift	45
Governor	13
Grease Gun	55
Grousers	56-58
Guard - Crankcase	55
Guard - Hydraulic Valve	109

H

Head - Engine Cylinder	5
Heat Indicator	25
Hood - Engine	31
Hook - Pull	55
Hourmeter	19
Hydraulic Cylinder - Dozers	93
Hydraulic Cylinder - Loader Pump	71
Hydraulic Cylinder - Loader Lift	70
Hydraulic Cylinder - Scarifier	95
Hydraulic Pumps	110-115
Hydraulic Control Valve	104-107
Hydraulic Relief Valve	108

I

Ignition Switch	26
Ignition Wires	21

L

Lights	32
Links - Track	54
Light Switch	32
Loader	66-69-73-76

M

Manifold - Engine	7
Muffler	19

O

Oil Filter - Engine	12
Oil Gauge - Engine	25
Oil Pan - Engine	6
Oil Pump - Engine	11-19

P

Pins - Track	54
Pistons	9
Piston Rings	9
Piston Pins	9-19
Pivot Bar	65
Plates - Side	65
Power Take-off	116-117

CLICK ANYWHERE FOR MORE DETAILS

MODEL "256" CRAWLER TRACTOR

ALPHABETICAL INDEX - CONTINUED

CLICK ANYWHERE FOR MORE DETAILS

R		T (Continued)	
Radiator	29	Torque Tube	63
Radiator Guard	30	Track Frame	49
Rain Cap - for Muffler	19	Track Roller	52
Rock Guards	50	Track Shoes	56-58
		Track Idler Support	51-53
		Transmission	43-44-45

S		U	
Scarifier	94-95-96-97	Universal Joint	39
Seat - Operators	33		
Spark Plugs	21		
Spring - Leaf	47		
Spring - Track Recoil	48-49		
Sprocket - Track Drive	47		
Starting Motor	21-23		
Starter Switch	21-26		
Switch Ignition	26		
Switch Light	32		

T		V	
Tank - Fuel	33	Valves - Engine	11
Thermostat	5	Valves - Exhaust Kit	19
Three Point Hitch	98-103	Valves - Intake Kit	19
Throttle Control	25	Valve - Guide Kit	19
Tools	55		


		W	
		Water Pump	27
		Wheel - Track Roller	51
		Wiring Harness	26

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

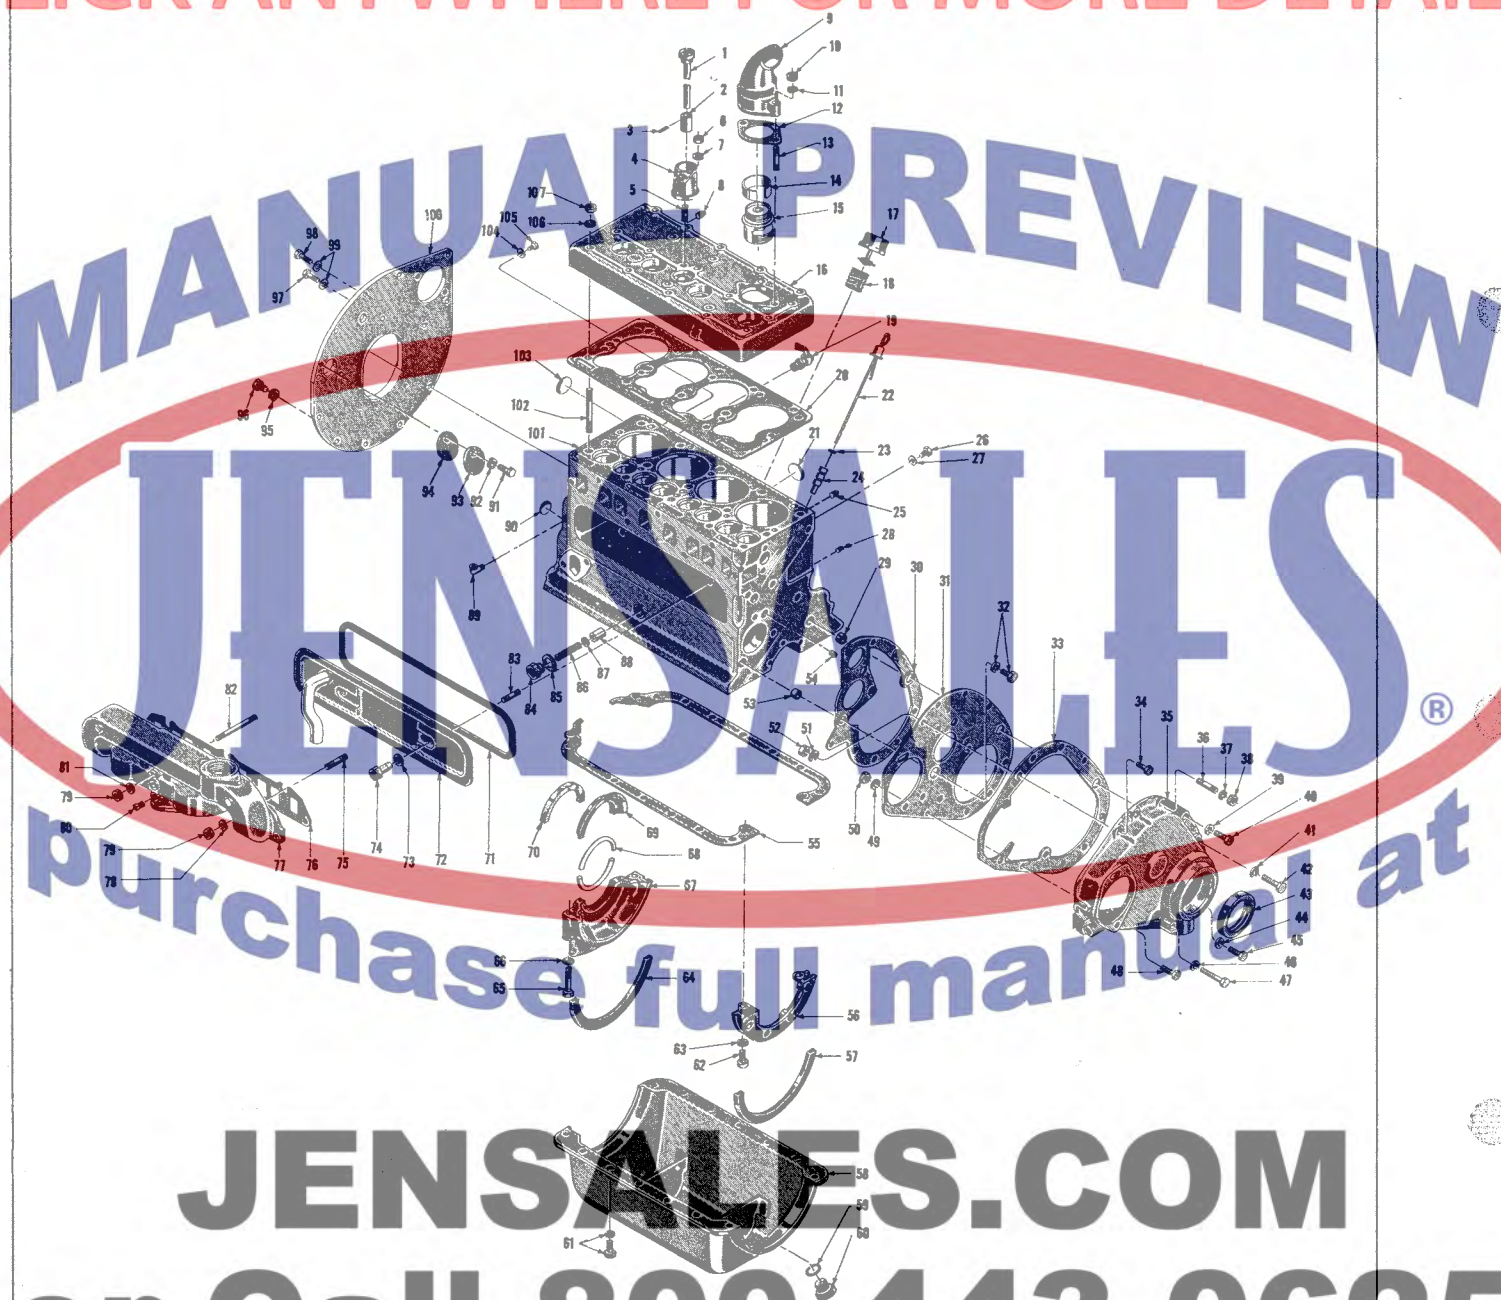

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

MODEL "256" CRAWLER TRACTOR

ENGINE - EXTERNAL PARTS

REF.	GROUP NO.	PART NO.	DESCRIPTION	REQ'D
1		10572	SHAFT ASS'Y - DISTRIBUTOR DRIVE (INC. REF. # 2 & 3)	1
2		10573	COUPLING - DISTRIBUTOR DRIVE	1
3		10574	PIN - DRIVE COUPLING	1
4		10571	ADAPTER - DISTRIBUTOR	1
5		G11204	STUD 3/8 - 16 NC X 1-3/8 (10571 MT'G) Replaces 10077	1
6		30438	HEX NUT (3/8 - 16 NC)(10571 MT'G)	1
7		48446	LOCKWASHER - MED. SEC. (10571 MT'G)	1
8		41838	PIPE PLUG - CT'SK HD. - 1/2 NP	1
9		10550	ELBOW - CYLINDER WATER OUTLET	1
10		47861	HEX NUT (5/16 - 18 NC)(10550 MT'G)	2
11		48465	LOCKWASHER (10550 MT'G)	2
12		10553	GASKET - WATER OUTLET ELBOW	1
13		10082	STUD 5/16 - 18 NC X 2-1/8 (10550 MT'G)	2
14		10562	ADAPTER RING - THERMOSTAT	1
15		10561	THERMOSTAT	1
16		14067	CYLINDER HEAD	1
17		10406	CAP ASS'Y - OIL FILLER	1
18		41406	CLOSE NIPPLE - OIL FILLER	1
19		10554	DRAINCOCK - WATER	1
20		10144	GASKET - CYLINDER HEAD	1
21		10618	HUBBARD PLUG	2
22		10411	OIL GAUGE ROD ASS'Y (INC. REF. #23)	1
23		10416	FELT - OIL GAUGE ROD	1
24		10412	SUPPORT - OIL GAUGE ROD	1
25		41821	PIPE PLUG - EXT. SQ. HEAD - 1/4 NP	1
26		45053	HHCS 3/8 - 16 NC X 5/8 (PLUGGING SCREW)	3
27		10298	COPPER WASHER	3
28		41820	PIPE PLUG - EXT. SQ. HEAD - 1/8 NP	1
29		10294	RING DOWEL	1
30		10315	GASKET - FRONT END PLATE TO C/CASE	1
31		10311	FRONT END PLATE	1
32		45029	HHCS 5/16 - 18 NC X 3/4 (10311 MT'G)	1
		48465	LOCKWASHER (10311 MT'G)	1
33		10301	GASKET - GEAR COVER TO FRT. END PLATE	1
34		10299	DOWEL SCREW (32647 MT'G)	1
35		32647	GEAR COVER ASS'Y (INC. REF. #43)	1
36		VT4501	STUD 3/8 - 16 NC X 1-11/16 (32647 MT'G) Replaces 10089	2