



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Operator's Manual

2594

purchase full manual at

Operator's Manual

JENSALES.COM

or Call 800-443-0625

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-O-2594

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENSALES®

purchase full manual at

2594 Tractor

Operators Manual

JENSALES.COM

or Call **800-443-0625**

9-9442

CASE III

Reprinted

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

MANUAL PREVIEW

Your Authorized Case Dealer

JENSALES®

purchase full manual at

JENSALES.COM

Figure 1

NOTE: When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

TABLE OF CONTENTS

TO THE OWNER	1	OPERATING INSTRUCTIONS (Cont'd)	
SAFETY	IV-XVIII	True Ground Speed	47
Safety Rules	IV	True Ground Speed Sensor	47,48
Before Starting	IV-V	Programming Attachment Width ..	51,52
Operation	VI-XIV	English/Metric Selection	53
Service	XV-XVII	Operating Service Monitors and	
HAND SIGNALS	XIX-XX	Bar Indicators	54-59
DECALS	XXI-XXV	Automatic Shutdown System	
SERIAL NUMBERS	1	(If Equipped)	60
DIESEL ENGINE SPECIFICATIONS	2,3	Instrument Cluster	
GENERAL SPECIFICATIONS	4-6	Functional Checks	61
APPROXIMATE TRACTOR SPEEDS	7-9	Operating Controls	62-91
TIRE AND WHEEL EQUIPMENT	10,11	Steering Console	62-65
APPROXIMATE OVER ALL		Operators Console	66-71
MEASUREMENTS	12,13	Steering Column Tilt	72
APPROXIMATE TRANSPORT		Telescopic Steering Column	72
WEIGHT	12,13	Heater Stop Valve	73
OPERATORS CAB	12,13	Fuel Tank Water Trap	73
FRONT WHEEL TREAD POSITIONS ..	14,15	Rear View Mirrors	74
REAR WHEEL TREAD POSITIONS	16,17	Cab Window Lever	74
DUAL REAR WHEEL		Cab Headliner Controls	75,76
TREAD POSITIONS	18,19	Cab Air Flow Control	77
FUEL SPECIFICATIONS	20,21	Cab Defroster Control	77
LUBRICATION	22-33	Cab Air Flow Arrangements	78-80
Engine Hourmeter	22	Air Conditioner Operation	81
Diesel Engine	23	Cab Door Lock	81
Lubrication Chart	24,25	Operators Seat	82-85
Engine Oil Change	26,27	Seat Belts	86,87
Engine Oil Filters	27	Amber Warning Lamps, Direction	
Transmission Oil Level Check & Change ..	28	Turn Signals & SMV Symbol	88,89
Hydraulic Oil Filters	29-31	Implement Warning Lamps,	
Steering & Brake System Air Removal ..	32	SMV Symbol	90
Front Wheel Bearings	33	Auxiliary Outlet Socket	91
ALTERNATOR CHARGING SYSTEMS ..	34	Starting Procedure	92,93
OPERATING INSTRUCTIONS	35-142	Stopping the Engine	94
Run-In Procedure	35	Cold Temperature Operation	95
Before Starting the Engine	36	Preparing Tractor For Operating in	
Towing	37	Cold Temperatures	96
How to Transport the Tractor	37	Cold Temperature Starting	97-100
Digital Instrument Cluster	38-61	Case Starting Fluid	97
Programming Tire Size	41-43	Coolant Heater	97
Programming Static Loader Radius ..	44	Ether Starting Fluid	98,99
Programming Dynamic		Starting Fluid Container	
Loaded Radius	45,46	Replacement	100
		Power Shift Transmission	101,102
		Differential Lock	103
		Power Takeoff	104-106
		Operating PTO	104
		Guards	105
		Operating Safety	106

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

TABLE OF CONTENTS

OPERATING INSTRUCTIONS (Cont'd)

Drawbar	107
Three Point Hitch System	108
Hitch System Adjustments	109-112
Hitch Operation	113-117
Anti-Sway Chain	113
Connect Implement	114
Hitch Control Lever	114,115
Sensing Control	116,117
Stationary Depth	117
Hydraulic Float Control	117

Hitch Coupler - Category III-II	118-121
Hitch Coupler - Category III	122
Remote Hydraulic Control	123-129
Remote Control Levers	123,124
Variable Flow Control	125,126
Operating the Remote System	127
Hydraulic Motors	127
Remote Valve With Lockcheck (if Equipped)	127
Hydraulic Hose Couplers	128
Hydraulic Hose Coupling	129
Remote Cylinder	130
Hydraulic Cylinder Jack Pads	131
Front Axle Adjustment	132
Rear Wheel Hub Adjustment	133-135
Dual Wheel Mounting	136
Rear Tire Mounting	137
Loads Matched to Tractor	137
Tractor Ballast	139-142
Measuring Slip Without True Ground Speed Sensor	138
Tractor and Equipment Weight	139
Front End Weights	140
Rear Wheel Weights	141
Tire Liquid Weight	142

PREVENTIVE MAINTENANCE

Hood and Side Panels	144
Cooling System	145-154
Pressure Cooling System	145
Coolant Solutions	146
Engine Cooling System Treatment	146
Radiator Cleaning	147
Cooling System Service	148
Thermostat Check	149
Thermostat Replacement	149-151
Fan Belt Adjustment	152
Fan Belt Replacement	153
Water Filter & Conditioner (if Equipped)	154

PREVENTIVE MAINTENANCE (Cont'd)

Fuel System	155-160
Service Intervals	155
Fuel Filter Replacement	156,157
Fuel Strainer	158,159
Air Removal	159,160
Air Induction System	161-170
Air Filter Service Interval	162
Final Air Filter Service	163-166
Aspirated Strata Tube Service	167-169
Tubes and Hoses	170

Neutral Start Switch Adjustment ..	171,172
Electrical System	173-176
Head Lamps	173
Flood Lamps	173
Flashing Amber Warning Lamps	174
Tail Lamps	174
Instrument Cluster Lamps	175
Fuse Panel - Tractor & Cab	175
Head Lamp Adjustment	176

Batteries	177-180
General Maintenance	177
When Batteries Are Not In Use	177
Access to Batteries	178
Battery Cables and Terminals	178
Battery Water	179
Removal and Installation of Batteries ..	179
Auxiliary Battery Connections	180

Roll Over Protective Structure (ROPS)	181-183
Tractor Roll Over	182
Safety Rules	182
Maintenance and Inspection	182
ROPS Label	183

Operators Cab	184-196
Preventive Maintenance	184,185
Air Filter Service	186-188
Seat Belt Inspection and Maintenance	188
Operators Seat	189-190
Refrigerant Check	191-192
Compressor Belt Adjustment	193
Compressor Belt Replacement	194
Dome Lamp	195
Console Lamp	196

CASE TECHNICAL MANUALS

.....	197
-------	-----

CLICK ANYWHERE FOR MORE DETAILS