



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Parts Manual

2594

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-P-2594

ILLUSTRATION AND TEXT

The arrangement of this parts catalog is for easy identification of Case parts. All parts are illustrated in "Exploded Views." This places each part in normal reference to each other. Reference numbers are used in the illustrations. These numbers are in reference to those on the text pages. The text pages list reference

GENERAL

ENGINE

FUEL

ELECTRICAL

STEERING

 
 
 
 
 
 
 
 
POWER TRAIN

BRAKES

HYDRAULIC

CHASSIS

NUMERICAL
INDEX

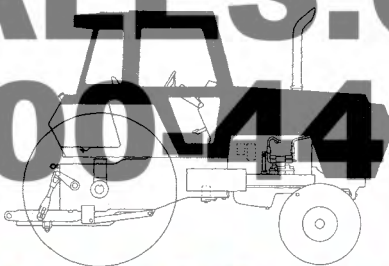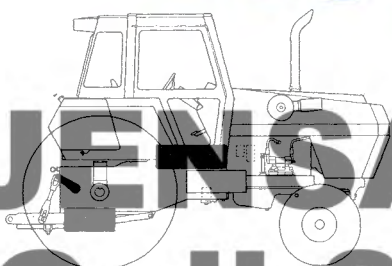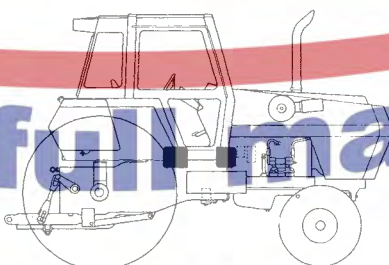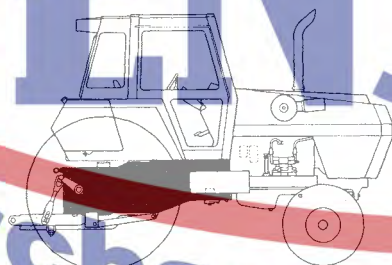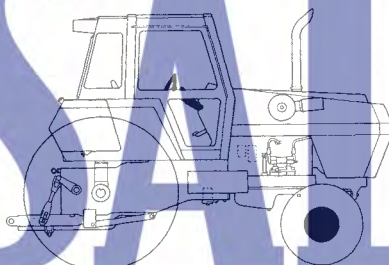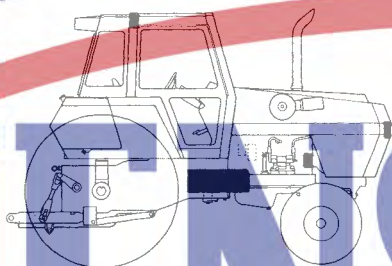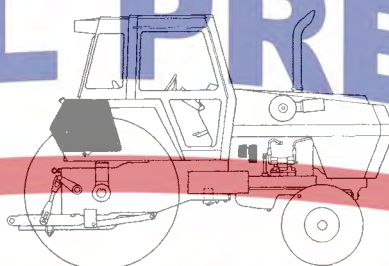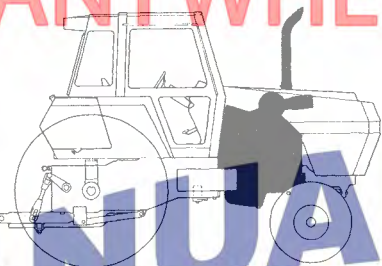

PART NO	PAGE	REF
A 141680	93	14
A 141684	297	18
A 141686	297	16
A 141692	189	1

GENERAL

1

CLICK ANYWHERE FOR MORE DETAILS

2594 TRACTOR
Parts Catalog

Rac 8-1970

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Rac 8-1970

2594 TRACTOR

ALPHABETICAL INDEX

A

Accumulator, Emergency Brake ... 7-221,223
 Acoustical Covers, Cab 9-369
 Adapters, Hydraulic Coupling 8-279,281
 Air Cleaner 2-13
 Air Conditioning Compressor Clutch ... 9-389
 Air Conditioning, Cab 9-383
 Air Conditioning Hoses 9-383
 Air Conditioning Evaporator 9-381
 Air Conditioning Condenser 9-391
 Air Conditioning Compressor 9-393
 Air Conditioning Blower Assembly 9-375
 Air Conditioning Receiver-Drier 9-391
 Air Conditioning Expansion Valve 9-383
 Air Conditioning Switches 9-385
 Air Filter, Cab 9-373
 Air Induction System 2-11
 Alternator Assembly 4-97,99,101
 Alternator Mounting 4-95
 Antenna, Radio 4-111
 Arm, Draft Arm Lift 8-293
 Arm, Steering 5-123
 Auxiliary Electric Outlet 4-83
 Auxiliary Outlet Harness 4-69
 Axle, Front 5-123,125
 Axle, Rear (Long) 6-175
 Axle, Rear (Short) 6-173

B

Battery 4-87
 Battery Cables 4-87
 Battery Holder Box 4-87
 Bearing, Engine Main 2-37
 Belt, Fan 2-9
 Belt, Seat 9-337
 Block, Cylinder 2-35
 Blower Assembly, Cab Air 9-375
 Brake, Differential 6-169
 Brake System,
 Emergency Hand 7-219 thru 7-227
 Brake Hydraulic Circuit 7-209
 Brake Pedals 7-207
 Brake, PTO 6-203
 Brake Valve Assembly 7-213,215,217
 Breaker, Circuit 4-85
 Bushings, Camshaft 2-33

C

Cab Assembly 9-351,353
 Cab Lights 4-107
 Cab Mounts and Supports 9-345

C

Cable, Battery 4-87
 Cable, Cab Heat Control 9-385
 Camshaft, Engine 2-33
 Camshaft Bushings 2-33
 Cap, Cab Roof 9-351
 Cap, Main Bearing 2-35
 Cigar Lighter 4-63
 Circuit Breaker 4-85
 Cluster, Instrument 4-81
 Clutch, Air Compressor 9-389
 Clutch, Foot 6-149
 Clutch, PTO 6-203
 Clutch Housing 6-151,153
 Clutches, (C1) and (C4) 6-155
 Clutches, (C2) and (C3) 6-161
 Clutches, (C5) and (C6)
 24 Speed Transmission 6-163
 Cold Start Switch 2-15
 Compensator, Hydraulic Pump 8-243
 Compressor, Air 9-393
 Condenser, Air Conditioning 9-391
 Connecting Rod 2-39
 Connecting Rod Bearing 2-39
 Control Console 9-327
 Coolant Indicator Module 4-73
 Cooler, Hydraulic Oil 5-117
 Core, Evaporator 9-381
 Core, Heater 9-379
 Countershaft, Transmission 6-165
 Coupler, Quick Hitch 9-313,315,317
 Couplings, Hydraulic 8-281
 Cover, Cylinder Head 2-29
 Cover Timing Gear 3-47
 Covers, Transmission Without Hitch ... 6-139
 Crankshaft, Engine 2-37
 Cylinder Assembly, Remote Hydraulic . 8-283
 Cylinder Assembly, Steering 5-121
 Cylinder Block, Engine 2-35
 Cylinder Block Gasket Kit 2-45
 Cylinder Block Heater 2-15
 Cylinder Head, Engine 2-29
 Cylinder Sleeve 2-39

D

Decals, Safety Kit 9-343
 Decals, Tractor Kit 9-341
 Defroster, Cab Windshield 9-371
 Differential Assembly 6-167
 Differential Brake 6-169

2594 TRACTOR

ALPHABETICAL INDEX

D		F	
Differential Clutch	6-167	Flasher Warning Lamp	4-103
Differential Lock Mechanism	6-171	Flood Lamp, Front	4-107
Dipstick, Engine Oil	2-35	Flood Lamp, Rear	4-105
Dipstick, Transmission Oil	6-137	Flood Lamp, Upper	4-105
Door, Cab	9-355,357	Flow Control Kit (Remote Hydraulic)	8-265
Draft Arms, Hitch	9-301	Flywheel, Engine	2-37
Draft Sensing Linkage	8-291	Foot Clutch	6-149
Drawbar (With Hitch)	9-305,307	Forward Component Harness	4-73
Drawbar (Without Hitch)	9-309	Frame, Cab	9-353
Drive, Fuel Injection Pump	3-47	Frame, Protective	9-349
Drive Shaft	6-167	Front Lamp Lower Harness	4-65
Dual Range Manifold,		Front Wheel	5-129
24 Speed Transmission	6-133	Fuel Filter System	3-51
E		Fuel Injection Pump	3-49
Electric Outlet, Auxiliary	4-83	Fuel Injection Pump Drive	3-47
Electrical Harness, Auxiliary Outlet	4-69	Fuel Injection System	3-51
Electrical Harness, Cab Headliner	4-75	Fuel Injector	3-55,57
Electrical Harness, Cab	4-63	Fuel Shut Off Control	3-59
Electrical Harness, Differential Lock	4-63	Fuel Tank	3-61
Electrical Harness,		Fuel Tank Level Sender	3-61,71
Forward Components	4-73	Fuel Tank Repair Kit	3-61
Electrical Harness, Engine	4-67	Fuses, Tractor	4-65
Electrical Harness,		Fuse Holder, Tractor	4-65
Flood Lamp Lower Front	4-67	G	
Electrical Harness, Transmission	4-69	Gasket Kits, Engine	2-45
Electrical Shift Harness	4-79	Gasket Kits, Engine Oil Pan	2-43
Electric Shift Manifold	6-133	Gear, Transmission Bevel	6-167
Emergency Brake		Gear, Park Lock	6-171
System	7-219 through 7-227	Gear, Transmission Pinion	6-167
Engine Block Heater	2-15	Gear Shift Linkage	6-143
Engine Cylinder Block	2-35	Gear Shift Mechanism	6-147
Engine Cylinder Head	2-29	Gear Pump Assembly, Hydraulic	8-241
Engine Crankshaft	2-37	Glass, Cab	9-363,365
Engine RPM Sensor	3-47	Grille, Front Lower	9-321
Engine Shutoff	4-109	Grille, Front Upper	9-323
Ether Starting Kit	2-15	Ground Speed Sensor Attachment	4-111
Evaporator, Air Conditioning	9-381	Guide, Engine Valve	2-31
Exhaust System	2-5,23	H	
F		Hand Brake System,	
Fan, Engine	2-9	Emergency	7-219 through 7-227
Fan Belt	2-9	Harness, Auxiliary Outlet	4-69,83
Filter, Cab Air	9-373	Harness, Cab Headliner	4-75
Filter, Engine Fuel	3-51	Harness, Cab	4-63
Filter, Engine Oil	2-27	Harness, Forward Components	4-73
Filter, Hydraulic Oil	8-245	Harness, Engine Electrical	4-67
Filter, Water	2-7	Harness, Lower Flood Lamp	4-67
Flasher Switch	4-63	Harness, Electrical Shift	4-79

2594 TRACTOR

ALPHABETICAL INDEX

H

Harness, Rear Components 4-71
 Harness, Transmission Electrical 4-69
 Head Lamp 4-103
 Headliner, Cab 9-371
 Heat Exchanger 2-27
 Heater, Cab 9-379
 Heater, Cylinder Block 2-15
 Hitch Control Valve 8-297
 Hitch Depth Control Linkage 8-295
 Hitch Depth Sensing Linkage 8-291
 Hitch Draft Arms 9-301
 Hitch Hydraulic Circuit 8-295
 Hitch Rockshaft 8-289
 Hood, Upper 9-323
 Hood Latch 9-319
 Hood Supports 9-319
 Hoses, Cab Air Conditioning 9-391
 Hoses and Adapters, Remote Hydraulic 8-281
 Hoses, Heater 9-379
 Housing, Rear Axle (Long) 6-175
 Housing, Rear Axle (Short) 6-175
 Housing, PTO 6-201
 Housing, Transmission 6-137
 Hub, Front Wheel 5-129
 Hydraulic Charging Pump 8-247
 Hydraulic Circuit, Hitch Control 8-285
 Hydraulic Circuit, PTO 8-229
 Hydraulic Oil Filter 8-245
 Hydraulic Oil Cooler 5-117
 Hydraulic Pump Assembly 8-237
 Hydraulic Pump Circuit 8-231, 233
 Hydraulics, Brake 7-209
 Hydraulic Manifold, Electric Shift 6-133

I

Injection System, Engine Fuel 3-53
 Insert, Exhaust Valve 2-31
 Instrument Cluster 4-81
 Instrument Panel 9-325

K

Key, Starting and Door 4-83

L

Lamp, Cab Mounted 4-107
 Lamp, Flasher Warning 4-103
 Lamp, Head 4-103
 Lamp, Instrument Cluster 4-81
 Lamp Assembly, Cab Courtesy 9-371

L

Lamp Assembly, Cab Dome 9-371
 Lamp, Tail 4-103
 Latch, Hood Lock 9-319
 Lever, Emergency Hand Brake 7-219
 Lifter, Push Rod 2-31
 Light Switch 4-63
 Lighter Cigar 4-63
 Liners, Connecting Rod Bearing 2-39
 Liners, Main Bearing 2-37
 Linkage, Draft Control 8-291
 Linkage, Draft Sensing 8-291, 293
 Linkage, Gear Shift 6-143
 Linkage, PTO 6-197
 Linkage, Range Power Shift 6-141
 Lock, Differential 6-171
 Lock, Valve, Differential 7-211
 Louvers, Cab Air 9-371

M

Magnetic Sensor, Engine RPM 3-47
 Manifold Assembly, Electric Shift 6-135
 Manifold, Exhaust 2-17
 Manifold, Intake 2-17
 Manifold, Electric Shift 6-133
 Manifold, Water 2-5
 Mat, Floor 9-367
 Mirrors, Cab 9-395
 Muffler, Vertical 2-23
 Muffler, Vertical On Tractor with Loader .. 2-25

N

Neutral Start Switch 6-145
 Nozzle, Ether Injector 2-15
 Nozzle, Fuel Injector 3-55, 57

O

Oil Cooler, Hydraulic 5-117
 Oil Filter, Engine 2-27
 Oil Filter, Hydraulic 8-245
 Oil Pan, Engine 2-43
 Oil Pan Gasket 2-43
 Oil Pressure Switch, Engine 4-67
 Oil Pressure Switch, Hydraulic 8-229
 Oil Pump, Engine 2-41
 Operators Manual Box 9-325

P

Pan, Engine Oil 2-43
 Pan, Evaporator 9-381

2594 TRACTOR

ALPHABETICAL INDEX

P	R
Panel, Cab Control 9-385	Receiver-Drier, Air Conditioning 9-391
Panel, Instrument 9-325	Relay, Lamp 4-63
Panels, Side Front 9-321	Regulator, Hydraulic Oil Filter 8-245
Panels, Side Rear 9-323	Regulator, Remote Cylinder Return ... 8-279
Park Lock Control 6-145	Regulator Valve, Hydraulic Oil 6-199
Pedals, Brake 7-207	Remote Cylinder Attachment 8-279
Piston, Engine 2-39	Remote Hydraulics,
Piston, Rockshaft Control 8-289	No. 3 Circuit 8-253 through 8-259
Planetary Clutch 12,	Remote Hydraulics, No. 4 Circuit .. 8-261,263
Speed Transmission 6-157	Remote Hydraulic Couplings 8-281
Planetary Clutch 24,	Remote Hydraulic
Speed Transmission 6-159	Control Valve 8-267 through 8-277
Planetary Lubrication Tubes 6-177	Remote Hydraulic Valve Body 8-267,275
Planetary Output 6-165	Reverse Shift Mechanism 6-143
Planetary, Rear Axle 6-173,175	Rocker Arm, Engine 2-31
Plates, Differential Brake 6-168	Rockshaft, Hitch 8-289
Plates, Differential Clutch 6-167	Rod, Connecting 2-39
Plates, Torque Limiter 6-151,153	Rod, Push 2-31
Plates, PTO Clutch 6-203	Roof, Cab 9-351
Plenum, Cab Air 9-377	Roof Cap, Cab 9-351
Pressure Control Valve,	Rotator, Engine Valve 2-31
Emergency Brake 7-225	
Pressure Regulator Valve,	S
Emergency Brake 7-227	Safety Chain 9-311
PTO Controls 6-197	Seat Assembly 9-329 through 9-337
PTO Clutch and Brake 6-203	Seat Belts 9-337
PTO Gears and Shafts 6-205	Sender, Fuel Tank Level 3-61
PTO Housing 6-201	Sensing Linkage, Rockshaft 8-289
PTO Output 6-205	Sensing Springs, Draft Control 9-299
PTO Valve 6-199	Sensor Attachment, Ground Speed ... 4-111
Pulley, Air Compressor Drive 9-389	Sensor, Magnetic Engine RPM 3-47
Pulley, Fan Drive 2-9	Shroud, Fan 2-3
Pulley, Fan Drive (Crankshaft) 2-37	Shroud, Instrument Panel 9-325
Pump, Engine Oil 2-41	Shut Off, Fuel 3-59
Pump, Hydraulic Charge 8-247	Side Rail 9-311
Pump, Steering 5-119	Sleeve, Cylinder 2-39
Pump, Water 2-9	Shut Off, Engine 4-109
Push Rod, Engine 2-31	Solenoid, Cab Electrical 4-85
Pyrometer Thermocouple 4-65	Solenoid, Engine Electrical 4-85
	Speakers, Radio 4-111
Q	Spindle, Front Wheel 5-123,125
Quick Hitch Coupler 9-313,315,317	Starter Assembly 4-91,93
	Starting Key 4-83
R	Starter Mounting 4-89
Radiator 2-3	Starting Switch 4-83
Radio and Speakers 4-111	Steering Arm 5-123,125
Rail, Side 9-311	Steering Column 5-113
Range Power Shift Linkage 6-141	Steering Cylinders 5-121
Rear Component Harness 4-71	Steering Wheel 5-113

2594 TRACTOR

ALPHABETICAL INDEX

S
 Steering Pump, Hydrostatic 5-119
 Steering System, Hydrostatic 5-115
 Steering Tie Rod 5-127
 Steps and Step Extension 9-347
 Switch, Air Cleaner Restriction 4-67
 Switch, Blower Control 4-75
 Switch, Cab Temperature 4-75
 Switch, Cold Start 2-15, 4-63
 Switch, Engine Oil Pressure 4-67
 Switch, Engine Temperature 2-5
 Switch, Light 4-63
 Switch, Starting 4-63, 83
 Switch, Transmission Oil Filter 4-69
 Switch, Turn Signal 4-83
 Switch, Windshield Wiper 4-75

T
 Tachometer 4-81
 Taillight 4-103
 Tank, Fuel 3-61
 Tie Rod, Steering 5-127
 Timing Gear Cover 3-47
 Thermocouple, Pyrometer 4-65
 Thermostat, Engine Temperature 2-5
 Throttle Control 3-59
 Torque Limiter 12, Speed Transmission 6-151
 Torque Limiter 24, Speed Transmission 6-153
 Torque Tube 6-131
 Transmission Harness, Electrical 4-69
 Transmission Housing 6-137
 Turbocharger 2-21
 Turbocharger System 2-19

V
 Valve, Cab Heat Control 9-385
 Valve, Differential Lock 7-211
 Valve, Discharge (Air Compressor) 9-393
 Valve, Exhaust Engine 2-31
 Valve, Expansion 9-383
 Valve, Hitch Control 8-297
 Valve, Master Brake 7-217
 Valve, Mechanism 2-31
 Valve, Power Brake 7-213, 215
 Valve, Pressure Control, Emergency Brake 7-225
 Valve, Pressure Regulator, Emergency Brake 7-227
 Valve, PTO and Regulator 6-199
 Valve, Remote Hydraulics 8-265 through 277

V
 Valve, Suction (Air Compressor) 9-393
 Valve, Grind Gasket Kit 2-45
 Valve, Intake Engine 2-31

W
 Water Filter and Kit 2-7
 Water Manifold 2-5
 Water Pump 2-9
 Weight, Front End 9-311
 Weights, Rear Wheel 6-195
 Wheel, Front 5-129
 Wheel, Dual Rear (32 inch Cast) 6-185
 Wheel, Dual Rear (38 inch Cast) 6-189
 Wheel, Dual Rear (38 inch Steel) 6-187
 Wheel, Dual Rear (42 inch Cast) 6-191
 Wheel, Dual Rear (42 inch Steel) 6-193
 Wheel, Rear (32 inch Cast and Stamped) 6-179
 Wheel, Rear (38 inch Cast) 6-181
 Wheel, Rear (42 inch Cast) 6-183
 Wheel, Steering 5-112
 Wheel, Spacer, Outer Dual 6-185, 187, 189, 191
 Wheel, Spindle, Front 5-123, 125[®]
 Wheel, Weights 6-195
 Window, Cab Rear 9-359
 Window, Cab Side 9-361
 Window, Kit, Lower Rear 9-359
 Wiper, Windshield 9-387
 Wishbone, Draft Control 9-299

2594 TRACTOR

PICTORIAL INDEX
MAIN HYDRAULICS

REF	DESCRIPTION	PAGE
1	Dual Range Lubrication Tube (24 Speed Transmission)	8-229
2	(C1) Clutch Lubrication Tube	8-229
3	PTO Lubrication Tube (Front)	8-229
4	PTO Lubrication Tube (Rear)	8-229
5	Hydraulic Pump Suction Tube	8-231
6	Steering Pump Suction Tube	8-231
7	Hydraulic Pump To Regulator Tube	8-231
8	Dual Range LH Tube (24 Speed Transmission)	6-133
9	Dual Range RH tube (24 Speed Transmission)	6-133
10	Planetary Lubrication Tube (Front)	6-177
11	Planetary Lubrication Tube Assembly (Rear)	6-177
12	Regulator Valve to Lock Valve Tube	7-211
13	Differential Lock to Transmission Tube	7-211
14	Regulator Valve to PTO Clutch Tube	8-229
15	Regulator Valve to PTO Brake Tube	8-229

JENSALES®
purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS