



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J. I. Case
Parts Manual

Parts Manual

310 Loader & Backhoe
Attachment

S/n 4001935 thru 4003999

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-P-310LB

PARTS CATALOG NO. A633

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW
CASE

LOADER and BACKHOE

SERIAL NO. 4001935 THRU 4003999

FOR

MODEL 310 UTILITY WHEEL TRACTOR

®

purchase full manual at

JENSALLES.COM

or Call **800-443-0625**

CLICK ANYWHERE FOR MORE DETAILS



J. I. CASE COMPANY
Racine, Wisconsin, U.S.A.

CASE MODEL 310 UTILITY LOADER AND BACKHOE (WHEEL TRACTOR)

ALPHABETICAL INDEX

CLICK ANYWHERE FOR MORE DETAILS

B

Boom	11
Buckets - Backhoe	13, 15
Buckets - Loader	47
Bulldozer Blade	73

M

Modification Parts	45
Mounting Parts - Backhoe	7

C

Counterweight - Rear	72
Cylinder - Boom, Hydraulic Backhoe	11, 19, 31
Cylinder - Bucket, Hydraulic Backhoe	11, 21, 35
Cylinder - Bucket, Hydraulic Loader	47, 57
Cylinder - Crowd, Hydraulic Backhoe	11, 21, 33
Cylinders - Lift, Hydraulic Loader	47, 53, 55
Cylinders - Stabilizer, Hydraulic Backhoe	9, 25, 29
Cylinders - Swing, Hydraulic Backhoe	7, 23, 27

P

Parts - Conversion, Hose and Fitting Assembly	4
Pumps - Hydraulic	17, 49, 63, 65, 67, 69
Pump Drive - Loader and Backhoe	17, 43, 49

D

Dipper Arm - Backhoe	11
----------------------	----

S

Scarifier	74
Seat - Deluxe	5, 45
Seat - Standard	45
Stabilizers	9

H

Hydraulics - Backhoe	17, 19, 23
Hydraulics - Loader	49

T

Tower	11
Transfers	13

I

Index - Numerical	75
-------------------	----

V

Valve - Control, Backhoe Hydraulic	19, 23, 37
Valve - Control, Loader Hydraulic	49, 59, 61
Valve - Flow Control	21, 42
Valve - Special Relief	19, 40, 41

L

Lift Arm	47
Linkage - Swing, Backhoe	7
Loader Frame	47

W

Weight Boxes - Rear	70, 71
---------------------	--------

CLICK ANYWHERE FOR MORE DETAILS

CASE MODEL 310 UTILITY LOADER AND BACKHOE (WHEEL TRACTOR)**HOSE AND FITTING ASSEMBLY CONVERSION PART NUMBERS**

To make up a replacement hose line, find the Case original equipment part number in the left hand column. Reading to the right of this number are the component part numbers needed to assemble the replacement hose line.

ORIGINAL EQUIPMENT ASS'Y. NO.	BULK HOSE NO.	CUT HOSE LENGTH	USE FITTING NO.	USE FITTING NO.	USE ADAPTER NO.
35197	A21573	18-1/2"	220-205	220-205	
35209	A21573	28-1/2"	220-205	220-205	
36210	A21572	18"	220-203	220-203	
36212	A21572	20"	220-203	220-203	
36232	A21574	28-1/4"	220-206	220-226	
36252	A21573	61-1/2"	220-205	220-205	
36443	A21572	21-1/2"	220-203	220-203	
36445	A21572	23-1/2"	220-203	220-203	
36942	A21573	40-1/2"	220-205	220-205	
37219	A21572	15-1/2"	220-203	220-203	
38349	A21572	21-3/4"	220-203	220-243	
38462	A21573	22-3/4"	220-205	220-205	
38685	A21568	24"	220-106	220-106	
D21317	A21573	17-3/4"	220-205	220-205	218-457
D21320	A21573	11-1/2"	220-205	220-205	

JENSALES®
purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

**CASE MODEL 310 UTILITY LOADER AND BACKHOE (WHEEL TRACTOR)
MOUNTING PARTS, SWING LINKAGE, AND STABILIZERS**

CLICK ANYWHERE FOR MORE DETAILS



JENSALES.COM
or Call **800-443-0625**

CLICK ANYWHERE FOR MORE DETAILS

BN225-60

CASE MODEL 310 UTILITY LOADER AND BACKHOE (WHEEL TRACTOR)
MOUNTING PARTS, SWING LINKAGE, AND STABILIZERS

Part Number	DESCRIPTION	Quantity Used
MOUNTING PARTS		
30634	Bushing - mounting bracket for swing link	4
35395	Pin - transport locking (Includes chain)	1
36084	Rest - foot, L.H.	1
36085	Rest - foot, R.H.	1
36121	Bushing - mounting bracket, upper tower pivot	1
38253	Plate - mounting, control valve	1
	1/2" - 20 x 1-3/4" NF hex. hd. cap screw (D14-828)	6
	1/2" lockwasher (D92-8)	6
	1/2" - 20NF hex. nut (D25-118)	6
38294	Plate - mounting	1
	3/4" - 16 x 4" NF hex. hd. cap screw (D14-1264)	6
	3/4" lockwasher (D92-12)	6
	3/4" - 16NF hex. nut (D25-1112)	6
38393	Tube - spacer, tie rod	2
38395	Rod - tie, mounting bracket	2
	3/4" - 16NF hex. lock nut (D25-2712)	4
38440	Bracket - mounting (Includes 4 - 30634, 1 - 36121, and 2 - D23203 bushings)	1
	1" - 14 x 2-1/2" NF hex. hd. cap screw (D14-1640)	2
	1" lockwasher (D92-16)	2
	1" - 14NF hex. nut (D25-1116)	2
70466	Bushing - mounting bracket, lower tower pivot (Use D23203)	2
D23203	Bushing - mounting bracket, lower tower pivot	2
SWING CYLINDERS AND LINKS		
30634	Bushing - for 36088 swing link	8
35031	Pin - pivot, swing cylinder	4
	1/8" NPT grease fitting, 67-1/2° (Lincoln #5300)	4
	1/2" - 20 x 1" NF hex. hd. cap screw (D14-816)	4
	1/2" Internal tooth Shakeproof lockwasher (D193-32)	4
36088	Link - swing (Includes 4 - 30634 bushings)	2
36117	Pin - swing link to tower (Use D21331)	2
36260	Bolt - swing links to cylinder (Use D21332)	2
	1" x 14NF hex. lock nut (D131-370)	4
38374	Cylinder - swing, hydraulic (L.H.) (Use D23252) Has 3" O.D. tube - See page 27 for breakdown	1
38375	Cylinder - swing, hydraulic (R.H.) (Use D23253) Has 3" O.D. tube - See page 27 for breakdown	1
D20158	Link - swing	4
D21331	Pin - swing link to tower	2
	1/8" NPT straight grease fitting (Lincoln #5000)	2
	1/2" - 20 x 1" NF hex. hd. cap screw (D14-816)	2
	1/2" Internal tooth Shakeproof lockwasher (D193-32)	2
D21332	Bolt - swing, D20158 link	4
	1" - 14NF hex. lock nut (D131-370)	8
	1/8" NPT straight grease fitting (Lincoln #5000)	4
D23252	Cylinder - swing, hydraulic (L.H.) Has 2-7/8" O.D. tube - See page 27 for breakdown	1
D23253	Cylinder - swing, hydraulic (R.H.) Has 2-7/8" O.D. tube - See page 27 for breakdown	1
D23740	Bushing - lockhead pin retaining bolt (Used on 35031 and D21331 pins)	6

(Con't. on next page)