



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Operator's Manual

4694

purchase full manual at

Operator's Manual

JENSALES.COM

or Call **800-443-0625**

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-O-4694

TABLE OF CONTENTS

TO THE OWNER	III
SAFETY	IV-XVIII
Safety Rules	IV
Before Starting	IV-V
Operation	VI-XIV
Service	XV-XVIII
HAND SIGNALS	XIX-XX
DECALS	XXI-XXIV
SERIAL NUMBERS	1
DIESEL ENGINE SPECIFICATIONS	2,3
GENERAL SPECIFICATIONS	4-7
APPROXIMATE TRACTOR SPEEDS	8,9
APPROXIMATE OVER ALL MEASUREMENTS	10
APPROXIMATE TRANSPORT WEIGHT	10
OPERATORS CAB	10
TIRE AND WHEEL EQUIPMENT	11-14
WHEEL TREAD POSITIONS	15-19
TIRE PRESSURE	19
DUAL WHEELS	20
FUEL SPECIFICATIONS	21,22
LUBRICATION	23-36
Engine Hourmeter	23
Diesel Engine	24,25
Lubrication Chart	26,27
Engine Oil Change	28,29
Engine Oil Filters	29
Rear Steering Valve Filter	30
Rear Steering Hydraulic Oil Filter	31
Transmission Oil Level Check & Change	32
Hydraulic Oil Filters	32,33
Planetary Oil Level Check & Change	34
Differential Oil Level Check & Change	35
Tractor Brakes	36
ALTERNATOR CHARGING SYSTEM	37
TOWING	37
OPERATING INSTRUCTIONS	38-155
Run-In Procedure	38
Before Starting the Engine	39
Digital Instrument Cluster	40-65
Programming Tire Size	43-45
Programming Static Loaded Radius	46
Programming Dynamic Loaded Radius	47,48

Digital Instrument Cluster	
True Ground Speed	49
True Ground Speed Sensor	49,50
Programming Attachment Width	53,54
Programming Rear Wheel Position Monitor	55,56
English/Metric Selection	57
Operating Service Monitors and Bar Indicators	58-65
Automatic Shutdown System (If Equipped)	64
Instrument Cluster Functional Checks	65
Operating Controls	66-102
Steering Console	66-73
Steering Column Tilt	74
Moving the Telescopic Steering Column	75
Operators Console	76-85
Park Brake Control	86
Heater Stop Valve	87
Fuel Tank Water Traps	87
Cab Headliner Controls	88,89
Cab Air Flow Control	90
Cab Defroster Control	90
Cab Air Flow Arrangements	91-93
Air Conditioner Operation	94
Cab Door Lock	94
Ash Tray	94
Rear View Mirrors	95
Cab Window Lever	95
Operators Seat	96-97
Seat Belts	98
Amber Warning Lamps, Direction Turn Signals & SMV	99,100
Implement Warning Lamps & SMV Symbol	101
Auxiliary Outlet Socket	102
Starting Procedure	103-105
Stopping The Engine	105,106
Cold Temperature Operation	106
Preparing Tractor For Operating in Cold Temperatures	107
Cold Temperature Starting	108-111
Coolant Heater	108
Operating Ether Starting Attachment	109,110
Starting Fluid	
Container Replacement	111

or call 800-435-0625

TABLE OF CONTENTS

OPERATING INSTRUCTIONS

Power Shift Transmission	112,113
Power Takeoff	114-116
Operating PTO	114
Guards	115
PTO Operating Safety	116
Drawbar	117-119
Three Point Hitch System	120
Hitch System Adjustments	121-123
Hitch Operation	124-128
Hitch Control Lever	124
Electronic Hitch System	125,126
Controlling Maximum Depth	127
Stationary Depth Operation	127
Hydraulic Float Control	128
Anti-Sway Chain	128
Hitch Coupler - Category III	129
Remote Hydraulic Control	130-137
Remote Control Levers	130,131
Variable Flow Control	132,133
Operating the Remote System	134
Remote Valve Lock	135
Hydraulic Hose Couplers	136
Hydraulic Hose Coupling	137
Remote Cylinder	138
Hydraulic Cylinder Jack Pads	139
Wheel Rim Adjustment & Mounting	140
Wheel Spacing and Clamp Adjustment	141
Power Adjustable Wheel Mounting	142,143
Dual Wheel Mounting	144
Tire Mounting	145
Loads Matched to Tractor	145
Tractor Ballast	146-153
Tractor Weight Distribution	146-148
Tractor and Equipment Weight	149
Front End Weights	150
Tire Liquid Weight	151,152
Measuring Slip	153
Hood and Side Panels	154
PREVENTIVE MAINTENANCE	155-206
Cooling System	156-164
Pressure Cooling System	156
Coolant Solutions	157
Radiator Cleaning	157
Cooling System Service	158
Thermostat Check	159
Thermostat Replacement	159-161
Fan Belt Adjustment	162
Fan Belt Replacement	163
Water Filter and Conditioner	164

PREVENTIVE MAINTENANCE

Fuel System	165-170
Service Intervals	165
Fuel Filter Replacement	166,167
Fuel Strainer	169,170
Air Removal	169,170
Air Induction System	171-180
Air Filter Service Interval	172
Final Air Filter Service	173-176
Aspirated Strata Tube Service	177-179
Tubes and Hoses	180
Neutral Start Switch Adjustment	181,182
Parking Brake Adjustment	183
Electrical System	184-187
Head Lamps	184
Flood Lamps	184
Flashing Amber Warning Lamps	185
Rear Flood and Tail Lamp	185
Instrument Cluster Lamps	186
Fuse Panel	186
Head Lamp Adjustment	187
Batteries	188-190
When Batteries Are Not in Use	188
Battery Cables and Terminals	188
Battery Water	189
Vent Caps	189
Removal & Installation of Batteries	189
Auxiliary Battery Connections	190
Roll Over Protective Structure (ROPS)	191,192
Tractor Roll Over	192
Safety Rules	192
Maintenance and Inspection	192
Operators Cab	193-206
Preventive Maintenance	194
Air Filter Service	195-197
Seat Belt Inspection and Maintenance	197
Operators Seat	198,199
Compressor Belt Adjustment	200
Compressor Belt Replacement	201
Compressor Belt Alignment	202
Refrigerant Check	203,204
Dome Lamp	205
Tool Box	205
Console Lamp	206

CASE TECHNICAL MANUALS

208

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can assist you with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

Figure 1

NOTE: When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right and left hand.

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS