



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J. I. Case

Parts Manual

4994

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.


CA-P-4994

CLICK ANYWHERE FOR MORE DETAILS

ILLUSTRATION AND TEXT
The arrangement of this parts catalog is for easy identification of Case parts. All parts are illustrated in "Exploded Views". This places each part in normal reference to each other. Reference numbers are used in the illustrations. These numbers are in reference to those on the text pages. The text pages list reference.

GENERAL

1

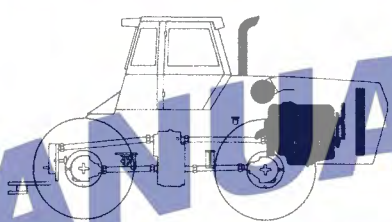

ENGINE

2

FUEL

3

ELECTRICAL

4

STEERING

5

POWER TRAIN

6

BRAKES

7

HYDRAULIC

8

CHASSIS

9

NUMERICAL

10

INDEX

0

PART NO.	PAGE	REF
A 141680	93	14
A 141684	297	18
A 141686	297	16
A 141692	189	1

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

4994 TRACTOR
Parts Catalog

Rac 8-2350

JENSALES®

purchase full manual at

JENSALES.COMor Call **800-443-0625**

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

A

Acoustical Covers, Cab 9-361
 Adapters, Hydraulic Coupling 8-303
 Air Cleaner 2-15
 Air Conditioning Compressor Clutch .. 9-387
 Air Conditioning, Cab 9-381,385
 Air Conditioning Hoses 9-381,385
 Air Conditioning Evaporator 9-381
 Air Conditioning Condenser 9-385
 Air Conditioning Compressor 9-387
 Air Conditioning Blower Assembly 9-373
 Air Conditioning Receiver-Drier 9-385
 Air Conditioning Switches 9-95
 Air Filter, Cab 9-371
 Air Induction System 2-15
 Air Restriction Switch 4-89
 Alternator Assembly 4-111
 Alternator Mounting 4-105
 Arm, Steering 5-131
 Aspirator, Exhaust 2-15
 Automatic Shutoff, Engine 4-119
 Auxiliary Electric Outlet 4-91
 Axle, Front 6-193 through 6-201
 Axle, Rear 6-203 through 6-211

B

Battery 4-103
 Battery Cables 4-103
 Battery Holder 4-103
 Bearing, Engine Main 2-39
 Belt, Fan 2-11
 Belt, Seat 9-333
 Block, Cylinder 2-39
 Blower Assembly, Cab Air 9-373
 Brake Assembly, Transmission 7-237
 Brake Caliper 7-237,239
 Brake, Master Cylinder 7-243
 Brake, Park 7-241
 Brake Pedals 7-235
 Brake, PTO 6-225,227
 Breather, Engine 2-41

C

Cab Assembly 9-347
 Cab Mounts and Supports 9-345
 Cable, Battery 4-103
 Cable, Fuel Shutoff 3-81
 Caliper, Disc Brake 7-237,239
 Camshaft, Engine 2-37
 Camshaft, Bushings 2-37
 Cap, Main Bearing 2-39

C

Chassis 9-311
 Charge System, Hydraulic 8-259,261
 Check Valve, Rear Steering 5-147
 Cigar Lighter 4-85
 Circuit Breaker 4-101
 Cleaner, Engine Oil 2-31
 Cluster, Instrument 4-99
 Clutch, Air Compressor 9-387
 Clutch, 7 inch Lower 6-165,167
 Clutch, 7 inch Upper 6-161,163
 Clutch, 8 inch 6-175,177
 Clutch, 9 inch 6-171,173
 Clutch Housing, PTO 6-229
 Clutch, PTO 6-225,227
 Clutch, Foot Pedal 6-149
 Column, Steering 5-123
 Compressor, Air 9-387
 Compressor Mounting, Air 9-383
 Condenser, Air Conditioning 9-385
 Connecting Rod 2-47
 Connecting Rod Bearing 2-47
 Console, Operator 9-317
 Control Console 9-365
 Control Valve, Rear Steering 5-141
 Cooler, Hydraulic Oil 8-245
 Core, Evaporator 9-381
 Core, Heater 9-379
 Couplings, Hydraulic 8-303
 Cover, Cylinder Head 2-33
 Cowl, Instrument 9-315
 Crankshaft, Engine 2-43
 Cylinder Assembly, Remote Hydraulic . 8-307
 Cylinder Assembly, Front Steering 5-139
 Cylinder Assembly, Rear Steering 5-139
 Cylinder Block, Engine 2-39
 Cylinder Block Heater 2-39
 Cylinder, Brake Master 7-243
 Cylinder Head, Engine 2-33

D

Decals, French Language 9-341,343
 Decals, Safety 9-343
 Decal, SMV Emblem 9-341
 Decals, Tractor 9-341
 Deck, Rear 9-313
 Differential Assembly, Front 6-199,201
 Differential Assembly, Rear 6-209,211
 Dipstick, Engine Oil 2-53
 Dipstick, Transmission 6-151

ALPHABETICAL INDEX

D
 Door, Cab 9-351,353
 Drawbar and Supports 9-309
 Drawbar Yoke 9-309
 Drive, Fuel Injection Pump 3-71
 Drive Shaft, Front Axle 6-195
 Drive Shaft, Rear Axle 6-205
 Drive Shaft, PTO 6-233

E
 Electric Controls, Rear Steering 5-129
 Electrical Harness, Cab Headliner 4-95
 Electrical Harness, Cab Lower 4-85
 Electrical Harness, Cab Rear 4-97
 Electrical Harness, Electric Shift 4-93
 Electrical Harness, Engine 4-89
 Electrical Harness, Transmission 4-91
 Electrical Outlet, Auxiliary 4-91
 Engine Block Heater 2-39
 Engine Cylinder Block 2-39
 Engine Cylinder Head 2-33
 Engine Crankshaft 2-43
 Engine Mounts 9-41
 Engine Shutoff 4-119
 Engine Stop Control 3-81
 Ether Starting 2-17
 Evaporator, Air Conditioning 9-381
 Exhaust Manifold 2-21
 Exhaust System 2-23

F
 Fan 2-11
 Fan Belt 2-11
 Filter, Cab Air 9-371
 Filter, Engine Fuel 3-69,77
 Filter, Hydraulic Oil 8-247
 Filter, Rear Steering 5-135
 Flasher Switch 4-85
 Flasher Warning Lamp 4-113
 Flood Lamp, Front 4-115,117
 Flood Lamp, Rear 4-115,117
 Flood Lamp, Upper 4-117
 Floor Mats, Cab 9-363
 Flywheel, Engine 2-45
 Flywheel Housing 2-45
 Frame, Cab 9-347
 Front Hood 9-329
 Fuel Filter 3-69,77
 Fuel Filter System 3-69
 Fuel Injection Pump 3-71

F
 Fuel Injection Pump Drive 3-71
 Fuel Injection Pump Lube Tubes 3-63
 Fuel Injection System 3-67
 Fuel Injector 3-73,75
 Fuel Lines 3-63
 Fuel Lines, Return 3-65
 Fuel Shutoff Control 3-81
 Fuel Tank 3-83
 Fuel Tank Level Sender 3-83
 Fuses, Cab 4-87
 Fuses, Tractor 4-87
 Fuse Holder 4-87

G
 Gasket Kits, Engine 2-55 through 2-59
 Glass, Cab 9-357,359
 Grille, Front Lower 9-319
 Grille, Front Upper 9-329
 Ground Speed Attachment 4-119
 Guide, Engine Valve 2-35

H
 Hand Rails 9-313
 Harness, Cab Headliner 4-95
 Harness, Cab Lower 4-85
 Harness, Cab Rear 4-97
 Harness, Electric Shift 4-93
 Harness, Engine 4-89
 Harness, Rear Steering Control 5-129
 Harness, Transmission Electrical 4-91
 Head Lamp 4-113
 Headliner, Cab 9-367
 Heater, Cab 9-379
 Heater, Cylinder Block 2-39
 Holder, Fuse 4-87
 Hood, Engine Front 9-329
 Hood, Engine Rear 9-331
 Hood Hinge and Lift 9-321
 Hood Latch 9-329
 Hood Lift Cylinder 9-327
 Hood Lift Pump 9-323,325
 Hoses and Adapters, Remote 8-305
 Hoses, Cab Air Conditioning 9-381,385
 Housing, Front Axle 6-193
 Housing, Rear Axle 6-203
 Housing, Transmission Front 6-153
 Housing, Transmission Rear 6-155
 Hub, Front Wheel 6-195
 Hub, Rear Wheel 6-205

ALPHABETICAL INDEX

H		M	
Hydraulic Coupling Adapters	8-303	Master Brake Cylinder Linkage	7-235
Hydraulic Charge Gear Pump	8-265	Mats, Floor	9-363
Hydraulic Dual Piston Pump	8-267,271	Mirrors, Cab	9-389
Hydraulic Oil Filter	8-247	Mounting, Steering Valve	5-125
Hydraulic Oil Cooler	8-245	Mounts, Engine	2-41
Hydraulics, Front Steering	5-127	Muffler, Exhaust	2-23
Hydraulics, Rear Steering	5-131,133		
Hydraulic Valve, Remote	8-283	N	
I		Nozzle, Ether Injector	2-17
Indicator, Rear Steering	4-99	Nozzle, Fuel Injector	3-73,75
Indicator, Transmission	4-99	Nozzle, Piston Cooling	2-39
Injection Pump, Fuel	3-71		
Injection System, Fuel	3-67	O	
Injector Nozzle	3-73,75	Oil Cleaner, Engine	2-31
Input Shaft, PTO	6-231	Oil Cooler, Engine	2-29
Instrument Cluster	4-99	Oil Cooler, Hydraulic	8-245
Instrument Panel	9-315	Oil Filter, Hydraulic	8-247
Intake Manifold	2-19	Oil Filter, Transmission	8-255
K		Oil Pan, Engine	2-53
Key, Engine Start and Cab Door	4-85	Oil Pan Gasket	2-53
L		Oil Pump, Engine	2-51
Lamp, Cab Mounted Flood	4-117	Oil Reservoir Tank	8-257
Lamp, Flasher Warning	4-113	Operator Console	9-317
Lamp, Head	4-113	Operators Manual Box	9-315
Lamp, Instrument Cluster	4-99	Output Shaft, PTO	6-231
Lamp Assembly, Cab Courtesy	9-367		
Lamp Assembly, Cab Dome	9-367	P	
Latch, Hood Lock	9-329	Pan, Engine Oil	2-53
Lift Cylinder, Hood	8-327	Pan, Evaporator	9-381
Lift Pump, Hood	9-323,325	Panel, Cab Controls	9-365
Lifter, Push Rods	2-35	Panel, Instrument	9-315
Lighter, Cigar	4-85	Panels, Side Front	9-329
Liners, Connecting Rod Bearing	2-47	Park Brake Control	7-241
Liners, Main Bearing	2-39	Pedals, Brake	7-235
Linkage, Clutch Pedal	6-149	Piston, Engine	2-47
Linkage, Master Brake Cylinder	7-235	Piston Rings	2-47
Linkage, Parking Brake	7-241	Planetary, Front Axle	6-197
Louvers, Cab Air	9-367	Planetary, Rear Axle	6-207
Lubrication System	2-49	Plenum, Cab Air	9-369
Lubrication Tubes, Injection Pump	3-63	Precleaner, Air Induction	2-15
Lubrication Tubes, Turbocharger	2-45	Priority Valve, Rear Steering	5-145
M		PTO Control Linkage	6-223
Manifold, Exhaust	2-21	PTO Cover and Shields	6-229
Manifold, Intake	2-19	PTO Clutch and Brake	6-225,227
Master Brake Cylinder	7-243	PTO Gears and Input, Output Shafts ..	6-231
		PTO Drive Shaft	6-233
		PTO Housing	6-229
		PTO Regulator Valve	8-253
		Pulley, Air Compressor Drive	9-387

ALPHABETICAL INDEX

P		S	
Pulley, Fan Drive	2-11	Side Window, Cab	9-349
Pulley, Crankshaft	2-43	Sleeve, Cylinder	2-47
Pump Drive, Hydraulic	8-259	Sensor, Front and Rear Axle	5-129
Pump, Engine Oil	2-51	Solenoid, Cab Electrical	4-101
Pump, Fuel Injection	3-71	Solenoid, Intermediate	4-101
Pump, Front Steering and Valve	5-137	Solenoid, Starter	4-109
Pump, Hydraulic Charge Gear	8-265	Speakers, Radio	9-121
Pump, Hydraulic Dual Piston	8-267,271	Spindle, Front Wheel	6-195
Pump, Transmission Hydraulic	6-157	Spindle, Rear Wheel	6-205
Pump, Water	2-9	Starter Assembly	4-107,109
Push Rod, Engine	2-35	Starting Key	9-89
Pyrometer Thermocouple	4-87	Starter Mounting	4-105
R		Starter Solenoid	4-109
Radiator and Hoses	2-5	Starting Switch	4-89
Radiator Supports and Seals	2-3	Steering Column	5-123
Radio, Cab	4-121	Steering Cylinder, Front	5-139
Radio Speakers	4-121	Steering Cylinder, Rear	5-139
Rail, Hand	9-313	Steering Filter, Rear	5-135
Range Selector Valve	6-179	Steering Hydraulics, Front	5-127
Rear Deck	9-313	Steering Hydraulics, Rear	5-131,133
Rear Hood	9-331	Steering, Rear Electrical Control	5-129
Rear Window, Cab	9-355	Steering Wheel	5-123
Rear Window Wiper	9-377	Steering System, Front	5-127
Receiver-Drier, Air Conditioning	9-385	Steering Tie Rod, Front and Rear	5-133
Regulator Valve, Hyd. Pressure	6-181	Steering Valve	5-137
Remote Cylinder Attachment	8-307	Steering Valve Mounting	5-125
Remote Hydraulics, 2 Circuit	8-275	Steps, Cab	9-313
Remote Hydraulics, No. 3 Circuit ..	8-285,287	Stop Control, Engine	3-81
Remote Hydraulics, No. 4 Circuit ..	8-289,291	Switch, Air Restriction	4-89
Remote Hydraulic Controls	8-275	Switch, Blower Control	4-95
Remote Hydraulic Couplings	8-303	Switch, Engine Oil Pressure	4-89
Reservoir Tank, Oil	8-257	Switch, Engine Temperature	4-89
Rings, Piston	2-47	Switch, Light	4-85
Rocker Arm, Engine	2-35	Switch, Rear Steering Control	5-129
Rod, Connecting	2-47	Switch, Starting	4-85
Rod, Push	2-35	Switch, Transmission Oil Filter	4-91
Roof, Cab	9-347	Switch, Transmission Oil Pressure	4-91
Roof Cap	9-347	Switch, Transmission Temperature	4-91
S		Switch, Windshield Wiper	4-95
Seat Assembly	9-333 through 339	T	
Seat Belts	9-333	Tail light	4-113
Sender, Fuel Tank Level	3-83	Tank, Fuel	3-83
Shroud, Fan	2-5	Tie Rod, Front and Rear Steering ..	6-193,203
Shutoff, Engine Automatic	4-119	Timing Gears	2-37
Shutoff, Fuel	3-119	Timing Gear Cover	3-61
Side Operator Console	9-317	Thermocouple, Pyrometer	4-87
Side Plates	9-329	Thermostat, Engine Temperature	2-7
		Throttle Control Linkage	3-79

ALPHABETICAL INDEX

CLICK ANYWHERE FOR MORE DETAILS

T	
Transmission Brake	7-237
Transmission Dipstick	6-151
Transmission Filter	6-151
Transmission Harness, Electrical	4-91
Transmission Housing, Front	6-153
Transmission Housing, Rear	6-155
Transmission Hydraulic Pump	6-157
Transmission Indicator	4-99
Transmission Oil Filter	8-255
Transmission Supports	6-185
Trunnion and Spindle, Front Axle	6-195
Trunnion and Pivot, Rear Axle	6-213
Trunnion and Spindle, Rear Axle	6-205
Turbocharger Assembly	2-27
Turbocharger Lubricating System	2-25

V	
Valve, Exhaust	2-35
Valve, Front Steering	5-137
Valve, Front Steering Priority	5-143
Valve, Intake	2-35
Valve, Pressure Regulator	8-181
Valve, PTO and Regulator	8-253
Valve, Range Selector	6-179
Valve, Rear Steering Check	5-147
Valve, Rear Steering Control	5-141
Valve, Rear Steering Priority	5-145
Valve, Remote	8-283
Valve, Remote Hydraulics	8-275
Valve, Steering	5-137
Valve Mechanism, Engine	2-35
Valve Mounting, Steering	5-125

W	
Water Filter	2-13
Water Manifold	2-7
Water Pump	2-9
Weight, Front End	6-221
Wheel, Dual	6-217, 219
Wheel Hub, Front Axle	6-195
Wheel Hub, Rear Axle	6-205
Wheel Rims and Clamps	6-215, 217
Wheel, Single	6-215
Wheel, Steering	5-123
Window, Cab Rear	9-355
Window, Cab Side	9-349
Wiper, Rear Window	9-377
Wiper, Windshield	9-375

CLICK ANYWHERE FOR MORE DETAILS