



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Parts Manual

530 Construction King

Forklift Only

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-P-530FLCK

CLICK ANYWHERE FOR MORE DETAILS

MODEL 530

CONSTRUCTION KING FORK LIFT

MANUAL PREVIEW
CASE

JENSALES[®]
Purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS



J. I. CASE COMPANY
Racine, Wisconsin, U.S.A.

2 **MODEL 530 CONSTRUCTION KING FORK LIFT**
ALPHABETICAL INDEX

Accessory Attachments - Optional	21-33
Accessory Hydraulics - Loader Bucket (Standard 10' 6" and 14' 3" Masts)	53
Accessory Hydraulics - Loader Bucket (Standard 21' 6" Mast)	55
Accessory Hydraulics - Log Clamp	25,27
Accessory Hydraulics - Side Shifter (Standard 10' 6" and 14' 3" Masts)	21
Accessory Hydraulics - Side Shifter (Standard 21' 6" Mast)	23

Blade - Dozer	31
Boom - Crane	31
Bucket - Cement	33
Bucket - Loader	33
Brake - Pedals and Linkage	37

Chain - lift	9-19
Clutch - Pedal and Linkage	39
Control Tower	35
Counterweight - Fork Lift	5
Counterweight - Hydraulic Hose	23,55
Cylinder - Lift (10' 6" Mast)	57
Cylinder - Lift (12' Mast)	57
Cylinder - Lift (14' 3" Mast)	59
Cylinder - Lift (21' 6" Mast)	59
Cylinder - Loader Bucket	61,71
Cylinder - Log Clamp	65-69,77,79
Cylinder - Side Shifter	63,75
Cylinder - Tilt	61,65,71,73

Decal Kit	88
Drive - Pump	45

Filter - Hydraulic Oil	45
Forks - Cement Block	29
Forks - Logging	29
Forks - Pallet	29
Frame - Fork Lift Sub	5

Guard - Overhead	7
------------------	---

Hose and Fitting Conversion Part Numbers	89
Hydraulics - Fork Lift Primary	45,47
Hydraulics - Lift Cylinder	49
Hydraulics - Loader Bucket (Standard 10' 6" and 14' 3" Masts)	53
Hydraulics - Loader Bucket (Standard 21' 6" Mast)	55
Hydraulics - Log Clamp	25,27
Hydraulics - Side Shifter (Standard 10' 6" and 14' 3" Mast)	21

Hydraulics - Side Shifter (Standard 21' 6" Mast)	23
Hydraulics - Steering	41
Hydraulics - Tilt Cylinder	51

Index - numerical	89
Instruments and Wiring	43

Lamps - Head	43
Lever - Accessory Control	21-25,53-55
Levers - Fork Lift Control	35
Linkage - Brakes	37
Linkage - Clutch	39
Linkage - Foot Throttle	37-39
Linkage - Shuttle	39

Mast and Related Parts (Standard 10' 6")	9
Mast and Related Parts (Heavy Duty 12')	17
Mast and Related Parts (Standard 14' 3")	11
Mast and Related Parts (Heavy Duty 14' 3")	19
Mast and Related Parts (Standard 21' 6")	13-15

Numerical Index	89
-----------------	----

Pedals - Foot	37-39
Pump - Drive	45
Pump - Hydraulic	81-83

Seat - Fork Lift, Operator's	41
Shuttle - Lever, Control	35
Shuttle Linkage	39
Side Shifter (Standard 10' 6" and 14' 3" Masts)	21
Side Shifter (Standard 21' 6" Mast)	23
Steering - Hydraulics	41
Subframe - Fork Lift	5

Tanks - fuel	41
Tool Box	37
Tower - Control	35
Truss Rod Parts	7

Valve - Hydraulic Control	85-87
---------------------------	-------

PICTORIAL INDEX

CLICK ANYWHERE FOR MORE DETAILS

CONTROL LEVERS... 35

CONTROL TOWER ... 35

MAST ASSEMBLY... 9 - 19

STEERING HYDRAULICS ... 41

OVERHEAD GUARD ... 7

OPERATOR'S SEAT ... 41

LIFT CYLINDER... 57 - 59

COUNTERWEIGHT ... 5

EQUIPMENT CYLINDERS ... 61 - 79

FUEL TANKS... 41

SUBFRAME ... 5

CARRIAGES ... 9 - 19

ELECTRICAL SYSTEM ... 43

PALLET FORKS ... 29

FORK LIFT HYDRAULICS ... 45

JENSALES.COM
or Call **800-443-0625**

For Models With Hydraulically Operated Attachments See Pages 21,

23, 25, TOP OF 33, 53 AND 55.

For Models With Mechanically Operated Attachments See Pages 29,


31 AND BOTTOM OF 33.

680093

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

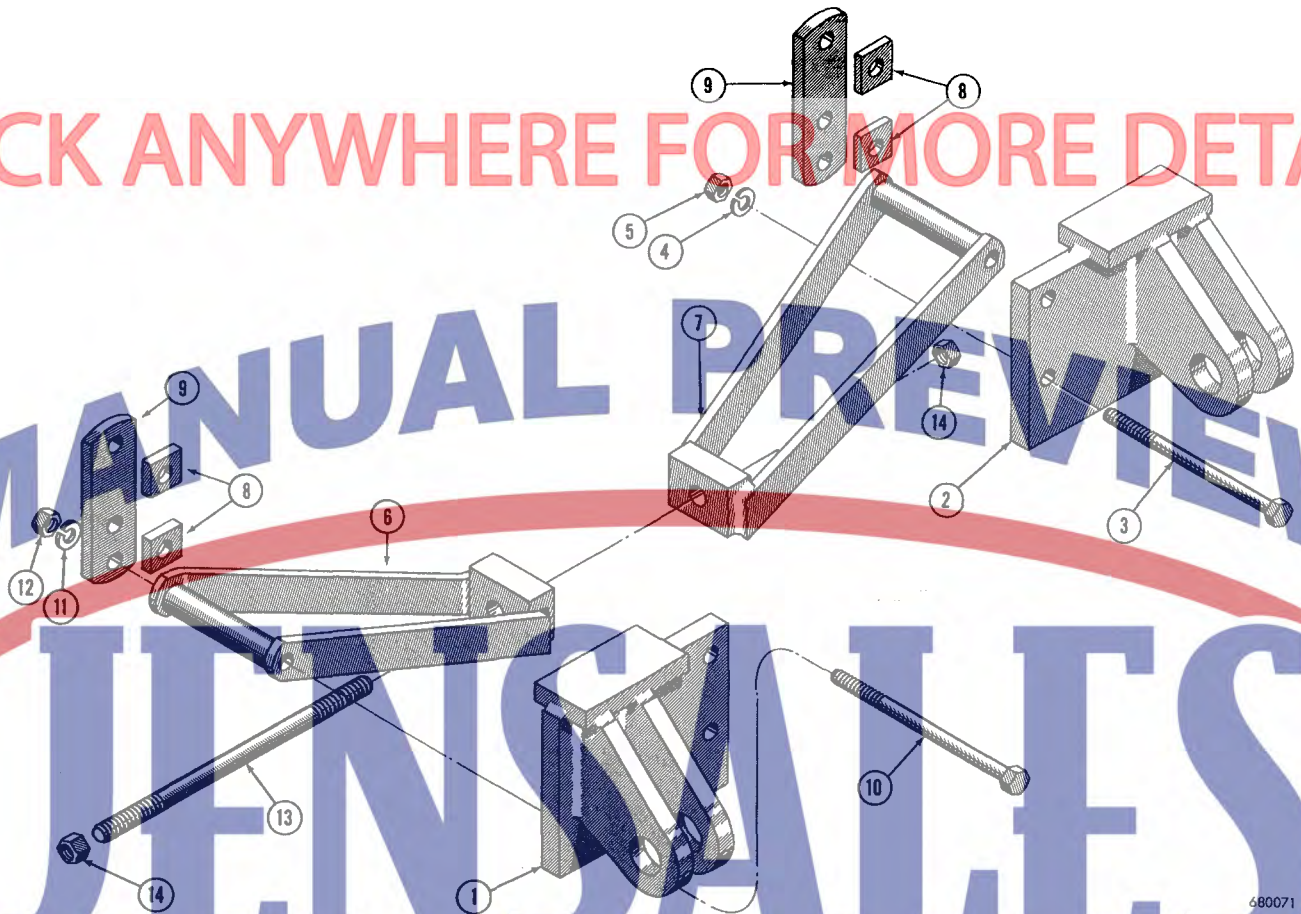

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS



TRUSS ROD PARTS

REF.	PART NO.	DESCRIPTION	REQ'D.
1 D	29629	BRACKET - subframe to axle housing, R.H.	1
2 D	29630	BRACKET - subframe to axle housing, L.H.	1
3 13-	10128	HHCS - 5/8" - 11 NC x 8"	8
4 92-	10	WASHER - med. sect. lock (5/8")	8
5 25-	1010	NUT - hex. (5/8" - 11 NC)	8
6 D	29552	BRACKET - truss rod, R.H.	1
7 D	29553	BRACKET - truss rod, L.H.	1
8 D	24059	SPACER - bolt	4
9 D	29556	BRACKET - truss rod mounting	2
10 13-	10136	HHCS - 5/8" - 11 NC x 8-1/2"	2
11 92-	10	WASHER - med. sect. lock (5/8")	2
12 25-	1010	NUT - hex. (5/8" - 11 NC)	2
13 D	29555	ROD - truss	1
14 131-	357	NUT - hex., lock (3/4" - 10 NC)	2

OVERHEAD GUARD

REF.	PART NO.	DESCRIPTION	REQ'D.
15 D	24152	GUARD - overhead	1
16 13-	820	HHCS - 1/2" - 13 NC x 1-1/4"	4
17 92-	8	WASHER - med. sect. lock (1/2")	4
18 25-	108	NUT - hex. (1/2" - 13 NC)	4
19 D	33172	SUPPORT - overhead guard, R.H.	1
20 D	33171	SUPPORT - overhead guard, L.H.	1
21 13-	852	HHCS - 1/2" - 13 NC x 3-1/4"	4
22 92-	8	WASHER - med. sect. lock (1/2")	4
23 25-	108	NUT - hex. (1/2" - 13 NC)	4
24 13-	1024	HHCS - 5/8" - 11 NC x 1-1/2"	4
25 92-	10	WASHER - med. sect. lock (5/8")	4

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS