



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Operator's Manual

580D Construction King

Loader Backhoe

Operator's Manual

JENSALES.COM

or Call 800-443-0625

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-O-580D TLB

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENSALES®

purchase full manual at

580D Construction King

Loader Backhoe

JENSALES.COM

or Call **800-443-0625**

Operators Manual

9-6621

CASE

CLICK ANYWHERE FOR MORE DETAILS

Reprinted

TABLE OF CONTENTS

Introduction	2	Four Wheel Drive Operation	99
To the Owner	2	Procedure to Move a Disabled Machine	100
After Delivery Check	3	Procedure to Transport the Machine	100
Safety	4	Operating in Cold Temperatures	102
Safety Rules	4	Operating in Hot Temperatures	102
Before You Start the Engine	5	Loader Operation	103
Operation	9	Safety When You Work	103
Loader Operations	12	Clutch Cutout	104
Backhoe Operations	13	Return-To-Dig	104
Service	16	Job Layout	105
Spark Arrestor	22	Loose Material	105
Roll-Over Protective Structure	23	Backhoe Operation	107
Location of Product Identification Number and Serial Numbers	28, 29	Safety When You Work	107
Specifications	30	General Information	107
Engine	30	Stabilizer Pads	108
Cooling System	31	Backhoe Bucket Digging Positions	108
Electrical System	31	Before You Dig With the Backhoe	109
Hydraulic System	31	Moving Backhoe Out of Transport Position	110
Capacities	32	Digging With the Backhoe	110
Tire Air Pressures	33	Moving Forward When You Dig	112
Operating Weights	34	Digging Next to a Fence or Building	114
Travel Speeds	34	Lifting With the Backhoe	115
Buckets	35	Frost Point	116
Loader	36	Procedure to Put the Backhoe in the Transport Position	116
580D Backhoes	37 to 45	Backhoe Removal	118
580 Super D Backhoe	46 to 51	Backhoe Installation	121
Operating Instructions	52	Fuels and Lubricants	122
Fast Reference for Instruments and Controls	52	Diesel Fuel	122
Instrument Cluster	54	Diesel Fuel Specifications	122
Machine Controls	56	Fuel Storage	122
Foot Pedals	58	Fuel, Fluids and Lubricants Chart	123
Parking Brake	60	Maintenance and Lubrication	124
Differential Lock	60	Introduction	124
Clutch Cutout	61	Maintenance Chart for the First Period of Operation with a New Machine	125
Cab Controls	63	Maintenance Chart for Regular Intervals	125 to 128
Cab Control Settings and Air Flow	65	Safety Before Servicing	129 to 131
Cab Door and Door Windows	66	Grease Fittings	132 to 140
Rear Cab Windows	67	Engine Lubrication System	141
Operators Seat	69	Air Cleaner Systems	144
Operators Seat Belts	70	Engine Cooling System	151
Loader Controls	75	Diesel Fuel System	154
Backhoe Controls	79	Electrical System	158
Three-Point Hitch Controls	84	Hydraulic System	170
Engine Operation	85	Power Shuttle Transmission	175
First Period of Operation with a New Engine	85	Four-Speed Transaxle	178
Service and Checks Before You Start	86	Front Drive Axle	180
Procedure to Start the Engine	87	Transfer Case	182
Engine Without Turbocharger	87	Front Wheel Bearings	183
Engine With Turbocharger	87	Wheels and Tires	185
Engine Speed	89	Spark Arrestor Muffler	186
Procedure to Stop the Engine	89	Brakes	187
Methods to Help Start the Engine	90	Loader Adjustments	189
Ether Starting Aid	90	Bucket Teeth	192
Cold Starting Fluid	92	Drive Belts	193
Coolant Heater	93	Cab Service	196
Booster Battery	94	Procedure to Put Machine in Storage	200
Machine Operation	95	Procedure to Remove Machine from Storage	202
Adjusting the Seat	95	After Delivery Check of a New Machine	203
Starting	96		
Selecting Transaxle Gears and Machine Direction	96		
Differential Lock	97		
When You Operate on a Hill	98		

INTRODUCTION TO THE OWNER

CLICK ANYWHERE FOR MORE DETAILS

This manual is your guide to safe, efficient operation. Before you operate this machine, read this manual.

MANUAL PREVIEW

JENSALES®

Purchase full manual at

If you need more information, call us.

Your Case Dealer

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

The CASE CORPORATION can make changes in design or specifications of the machine at any time with no obligation for these changes.