



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case
Parts Manual

800

Crawler

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-P-800CRWLR

ALPHABETICAL INDEX

-A-

Accelerator.....	97
Adapter-hydraulic pump.....	11
Air Cleaner.....	51
Ammeter.....	95
Angledozer-hydraulic.....	221
Angledozer-mechanical.....	213

-B-

Balancer Assy. - Lanchester.....	29
Battery.....	69
Battery Box.....	181
Bearings - engine.....	21
Bracket - pump mtg.....	7
Brake - hydraulic.....	125
Brake Lines.....	143
Brake Pedals.....	133
Brake Mounts - transmission.....	113
Brush Guard.....	187
Brush Screen.....	187
Bulldozer - hydraulic.....	231
Bulldozer - mechanical.....	209
Bumper - front.....	7

-C-

Camshaft - engine.....	23
Clamp-on Grousers.....	173
Clutch - hydraulic.....	123
Cold Starting - engine.....	99
Connecting Rods - engine.....	21
Control Levers.....	137
Control Tower.....	137
Control Valve.....	
Control Valve-transmission.....	295, 297
Counterweight.....	193
Cowl & Dash.....	179
Crankshaft - engine.....	21
Cylinder - dozer angling.....	221
Cylinder - dozer lift.....	209
Cylinder - dozer strut.....	231
Cylinder - Terraload'r hyd. dump.....	197
Cylinder - Terraload'r hyd. lift.....	197
Cylinder - Scarifier.....	249

-D-

Decals.....	191
Digging Teeth - Terraload'r.....	197
Drawbar.....	189

-E-

Electrical System.....	69
Engine Cooling System.....	65
Engine - external parts.....	9
Engine - crankshaft & pistons.....	21
Engine - fuel injection.....	37

-E-

Engine - fuel system.....	61
Engine - gaskets.....	15
Engine - head & camshaft.....	23
Engine - injection pump.....	39
Engine - oil pump & balancer.....	27
Engine Control.....	97
Exhaust Pipe.....	51

-F-

Fan.....	47
Fan Belt.....	47
Fenders.....	181
Filter - engine oil.....	55
Filter - final stage fuel.....	61
Filter - full flow.....	59
Filter - hydraulic tank.....	185
Filter - primary fuel.....	61
Filter - secondary fuel.....	61
Filter - transmission hyd.....	155
Final Drive.....	129
Floor Mat.....	179
Floor Plate.....	179
Flywheel Assy. Engine.....	21
Flywheel Housing.....	11
Frame - main.....	157
Frame Assy. - engine.....	7
Fuel Injection Lines.....	37 ^R
Fuel Lines.....	61
Fuel Tank.....	181

-G-

Gaskets - engine.....	15
Gauge Stick - hydraulic.....	115
Gauge Stick - oil.....	13
Generator.....	81
Grease Gun.....	191
Grousers.....	173
Guard Assy. - bottom.....	7

-H-

Head Assy. - cylinder.....	23
Head Lights.....	93
Heat Indicator.....	95
Hood - engine.....	187
Hook - pull.....	7
Hour Meter.....	95
Hydraulic System - dual pull behind.....	261
Hyd. system - hyd. angledozer.....	225
Hyd. system - hyd. bulldozer.....	235
Hyd. system - mech. bulldozer & angledozer.....	217
Hyd. system - primaries for dozers.....	243
Hyd. system - primaries for Terraload'r.....	205
Hyd. system - scarifier & hyd. angle-dozer.....	259
Hyd. system - scarifier & hyd. bulldozer.....	255

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

-H-

Hyd. system - scarifier & mech. dozer.....	257
Hyd. system - scarifier & Terraload'r.....	253
Hyd. system - Terraload'r.....	201
Hydraulic Tank.....	181
Hydraulics - standard tractor.....	143

-P-

Pump - water.....	47
Pump Assy. - allied equipment.....	287
Pump - converter.....	101
Pump - fuel injection.....	39
Pump - trans. hyd.....	285

-I-

Idler Guards.....	175
Ignition Switch.....	95
Injection Pump - fuel.....	39

-R-

Radiator.....	65
Radiator - tropical.....	67
Radiator Guard.....	187
Radiator Hoses.....	65
Rain Cap.....	51
Rake - brush.....	271
Range Shift Lever.....	137
Recoil Spring Housing.....	161
Relief Valve - Terraload'r.....	283
Ring Gear - flywheel.....	21
Rings - piston.....	21
Ripper.....	251
Rock Guards.....	175

-J-

Journal Kit - universal.....	107
------------------------------	-----

-K-

Knobbed Valve.....	269
--------------------	-----

-L-

Lift Valve Kits.....	265
Lifting - tank.....	181
Lights.....	98
Liner.....	9

-S-

Seat Assy.....	181
Seat Cushions.....	181
Scarifier.....	249
Shroud - radiator.....	187
Side Panels - engine.....	179
Solenoid Switch.....	95
Sprocket - tractor drive.....	157
Starter.....	87
Starter Switch.....	87
Support - engine.....	7

-M-

Manifold.....	51
Master Cylinder - brake.....	183
Mounts - engine.....	7
Muffler.....	51

-T-

Tail Lights.....	93
Tank - hydraulic.....	181
Tank - fuel.....	181
Tappets - valve.....	23
Terraload'r.....	197
Thermostat.....	65
Throttle - hand.....	97
Tool Box.....	181
Tools & Equipment.....	191
Torsion Bar.....	157
Torque Converter.....	101
Track Chain.....	171
Track Frame.....	161
Track Front Idler.....	169
Track Rollers.....	165
Track Shoes.....	173
Track Support Idler.....	167
Transmission - brake shaft parts.....	121
Transmission - clutch shaft parts.....	119
Transmission - drive & 2 speed shift.....	117
Transmission - external parts.....	113
Transmission Control - hyd.....	133
Transmission Control - tower.....	137

-O-

Oil Filter - engine.....	55
Oil Filter - transmission.....	155
Oil Lines - engine lube.....	55
Oil Pan.....	27
Oil Pressure Gauges.....	95
Oil Pump - engine.....	27

-P-

Parking Brake.....	137
Pistons - engine.....	21
Pre-cleaner.....	53
Pressure Switch.....	95
Pulley - fan.....	47

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW
JENSALLES®
Purchase full manual at

JENSALLES.COM

or call 800-443-0625

ALPHABETICAL INDEX

-U-

Universal Shaft..... 107

-V-

Valve - hyd. angledozer..... 225
Valve - hyd. bulldozer..... 235
Valve - mechanical dozers..... 217
Valve - scarifier & hyd. angle
dozer comb..... 259
Valve - scarifier & hyd. bulldozer comb... 255
Valve - scarifier & mech. dozers comb... 257
Valve - scarifier & Terraload'r comb... 253
Valve - trans.control..... 295, 297
Valve Guides - engine..... 23
Valve Levers - trans.control..... 137
Valve Sections - hydraulic..... 305
Valves - engine..... 23
Voltage regulator..... 81

-W-

Water Pump..... 47
Wiring Harness..... 69

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENSALES®


purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

ENGINE FRAME INSTALLATION
ENGINE FRAME, MUD PANS, ENGINE MOUNTS

CLICK ANYWHERE FOR MORE DETAILS

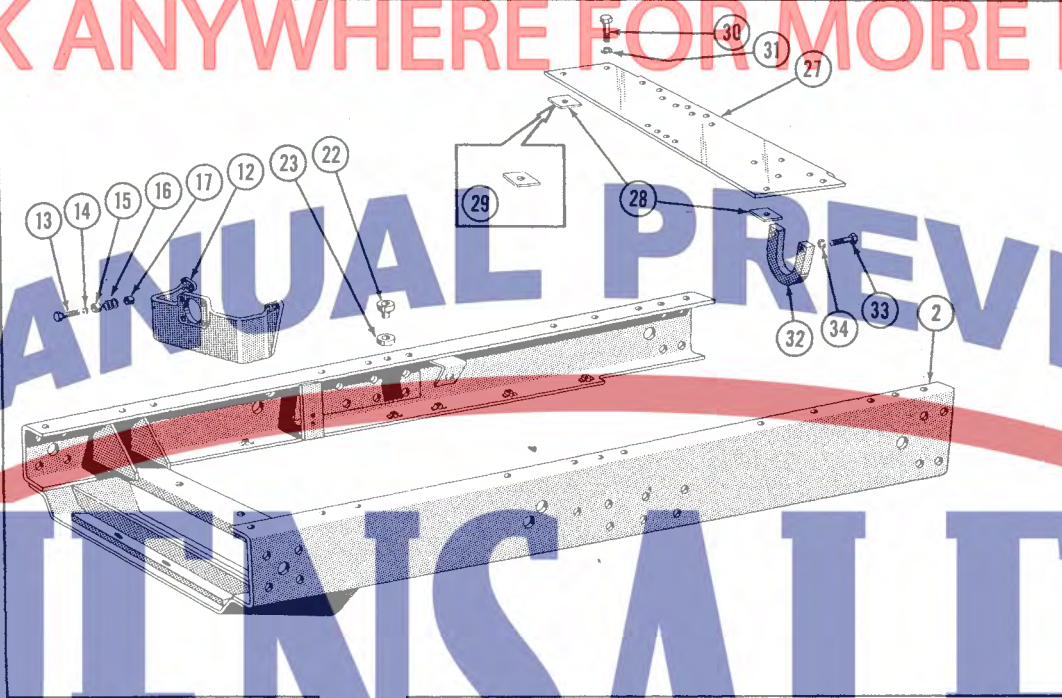

CLICK ANYWHERE FOR MORE DETAILS

ENGINE FRAME INSTALLATION

ENGINE FRAME, MUD PANS, ENGINE MOUNTS

7

REF.	PART NO.	DESCRIPTION	REQ'D.
1	70163	FRAME ASS'Y. - engine (used up to serial #7081201)	1
2	R13236	FRAME ASS'Y. - engine (used from serial #7081201)	1
3	70963	BUMPER - front	1
4	14-1224	HHCS 3/4-16 NF x 1-1/2 (70963 mtg.)	4
5	92-12	WASHER - med. sec. lock	4
6	72194	GUARD ASS'Y. - front bottom	1
7	72192	GUARD ASS'Y. - rear bottom (used up to serial #7081201)	1
	R13797	GUARD ASS'Y. - rear bottom (used from serial #7081201)	1
8	14-824	HHCS 1/2-20 NF x 1-1/2 (bottom guard mtg.)	14
9	95-8	WASHER - plain	14
10	92-8	WASHER - med. sec. lock	14
11	70215	BRACKET - pump mtg. (used up to serial #7080972)	1
12	R12544	BRACKET - pump mtg. (used from serial #7080972)	1
13	13-644	HHCS 3/8-16 NC x 2-3/4 (R12544 mtg.) (used from ser. #7080972)	2
14	92-6	WASHER - med. sec. lock (used from serial #7080972)	2
15	R13822	SPACER - pump bracket (used from serial #7080972)	2
16	R12645	SHIM - pump bracket (used from serial #7080972)	6
17	R12644	SPACER - pump bracket (used from serial #7080972)	2
18	70121	MOUNT - engine rear	2
19	13-824	HHCS 1/2-13 NC x 1-1/2 (70121 mtg.)	8
20	92-8	WASHER - med. sec. lock	8
21	R2528	KIT - engine mount (used up to serial #7080592)	1
22	74038	MOUNT - engine, upper (used from serial #7080592)	4
23	71948	WASHER - vibration (used from serial #7080592)	4
24	95-12	WASHER - plain	4
25	14-1252	HHCS 3/4-16 NF x 3-1/4 (engine mtg.)	4
26	131-368	NUT - lock (3/4-16 NF)	4
27	R13370	ANGLE ASS'Y - valve (used from serial #7081201)	1
28	35245	SPACER - square (used from ser. #7081201 and up to #1-2-59)	2
29	R14526	SPACER - square (used from 1-2-59)	2
30	14-832	HHCS 1/2-20 NF x 2 (R13370 mtg. (used from serial #7081201 and up to serial #1-2-59)	4
	14-832	HHCS 1/2-20 NF x 2 (R13370 mtg.) (used from ser. #1-2-59)	2
31	92-8	WASHER - med. sec. lock (used from ser. #7081201 and up to serial #1-2-59)	4
	92-8	WASHER - med. sec. lock (used from serial #1-2-59)	2
32	R14116	BRACKET - safety (used from serial #7081201)	1
33	14-832	HHCS 1/2-20 NF x 2 (R14116 mtg.)	2
34	92-8	WASHER - med. sec. lock	2
	6337	HOOK INSTALLATION - pull (optional equipment)	1
35	71671	HOOK - pull	1
36	14-1240	HHCS 3/4-16 NF x 2-1/2 (71671 mtg.)	4
37	92-12	WASHER - med. sec. lock	4
38	25-1112	NUT - reg. SF hex (3/4-16 NF)	4
39	14-936	HHCS 9/16-18 NF x 2-1/4 (engine mtg.)	2
40	131-157	NUT - lock (9/16-18 NF)	2
41	40581	SHIM - engine mtg.	1
	8498	FRONT MOUNTED WEIGHT (optional)	1
42	73431	WEIGHT - front mounted	1
43	78432	COVER - front mounted weight	1
44	14-16216	HHCS 1-14 NF x 13-1/2 (73432 mtg.)	2
45	92-16	WASHER - med. sec. lock	2
46	25-1116	NUT - reg. SF hex (1-14 NF)	2
47	14-1288	HHCS 3/4-16 NF x 5-1/2 (73431 mtg.)	4
48	14-1280	HHCS 3/4-16 NF x 5 (73431 mtg.)	4
49	92-12	WASHER - med. sec. lock	8
50	25-1112	NUT - reg. SF hex (3/4-16 NF)	8
51	71671	HOOK - pull	1
52	14-1280	HHCS 3/4-16 NF x 5 (71671 and 73431 mtg.)	4
53	92-12	WASHER - med. sec. lock	4
54	25-1112	NUT - reg. SF hex (3/4-16)	4

UAR

or Call 800-413-0625