



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case
Parts Manual

850B

Crawler

Parts Manual

JENSALES.COM
or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-P-850B CRLR

REVISION RECORD LOG

REVISION NO	DATE INSERTED
1	
2	
3	
4	
5	

1

850B CRAWLER TRACTOR
Parts Catalog C1338

Note: Discard parts catalog B1338.

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW



JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

850B CRAWLER TRACTOR PICTORIAL INDEX

CLICK ANYWHERE FOR MORE DETAILS

	CODE	PAGES
GENERAL	1	1-11

ENGINE	2	12-63
--------	---	-------

FUEL SYSTEM	3	64-79
-------------	---	-------

ELECTRICAL	4	80-131
------------	---	--------

CRAWLER UNDERCARRIAGE	5	176-191
--------------------------	---	---------

POWER TRAIN	6	133-175
-------------	---	---------

BRAKES	7	192-195
--------	---	---------

HYDRAULIC SYSTEM	8	196-323
---------------------	---	---------

CHASSIS/ MOUNTED EQUIPMENT	9	
----------------------------------	---	--

Loader Lift Frame	9	324-325
----------------------	---	---------

CLICK ANYWHERE FOR MORE DETAILS

CODE PAGES

Loader Buckets 9 326-331

Dozer Frame 9 333, 337

Dozer Blades 9 335, 339, 341

Ripper 9 342-343

Drawbars and Counterweights 9 344-347

Main Frame/Sheet Metal 9 348-367

Seat 9 368-377

Canopy and Screens 9 378-385

Cab/Miscellaneous 9 386-406

NUMERICAL INDEX 10 407-

ALPHABETICAL INDEX

A

Air Cleaner	55-59
Alternator	81-85, 123
Adjusting Strap	123
Pulley	123
Mounting Parts	123

B

Backup Alarm	127
Battery and Cables	113-117
Beam - C-frame or dozer push	333, 337
Belts	

Alternator	51
Fan	51
Seat	369

Blades	
Angle Tilt Dozer	339, 341
Tilt Dozer	335

Block - engine cylinder	31
Block Heater	31

Brakes	
Hydraulic	167
Manual (Parking)	195
Power	193

Brush Guard - ROPS Canopy	379
---------------------------------	-----

Brush Screens	381
---------------------	-----

Buckets	
---------------	--

1-1/2 cu yd	327
-------------------	-----

1-3/8 cu yd	327
-------------------	-----

Clam (4-In-1)	329
---------------------	-----

Indicator (bucket position)	331
-----------------------------------	-----

Teeth	327
-------------	-----

C

Cab	387-419
-----------	---------

Camshaft - engine	29
-------------------------	----

Carrier Roller	181, 183
----------------------	----------

C-Frame - dozer	337
-----------------------	-----

Chain - track	187, 189
---------------------	----------

Clutches - transmission	157-163
-------------------------------	---------

Cold Starting Aid	131
-------------------------	-----

Connecting Rods - engine	37
--------------------------------	----

Controls	
----------------	--

Brake - manual and power	193, 195
--------------------------------	----------

Engine Shut-Off	105
-----------------------	-----

Engine Throttle	65
-----------------------	----

Equipment Control - one lever	257
-------------------------------------	-----

Equipment Control - two lever	259, 261
-------------------------------------	----------

Equipment Control - three lever	263, 265
---------------------------------------	----------

Forward, Reverse, and Steering	133
--------------------------------------	-----

Control Tower - transmission	133
------------------------------------	-----

Control Valve - equipment	267-289
---------------------------------	---------

Cooling System - transmission	137
-------------------------------------	-----

Counterweights	347
----------------------	-----

Couplings - hydraulic, quick disconnect	233
---	-----

C

Crankshaft - engine	33
---------------------------	----

Cushions - seat	371, 375, 377
-----------------------	---------------

Cylinders - hydraulic	
-----------------------------	--

Dozer Angle	249, 251
-------------------	----------

Dozer Lift	241, 243
------------------	----------

Dozer Tilt	245, 247
------------------	----------

Loader Bucket - tilt	237
----------------------------	-----

Loader Bucket - clam	239
----------------------------	-----

Loader Lift	235
-------------------	-----

Ripper Lift	253
-------------------	-----

Cylinder Sleeves - engine	37, 39
---------------------------------	--------

D

Decals	
--------------	--

Engine Data	25
-------------------	----

Kit - tractor	421, 423
---------------------	----------

Defroster - cab	399, 407
-----------------------	----------

Dipsticks	
-----------------	--

Engine Oil	31
------------------	----

Transmission Oil	151
------------------------	-----

Dome Lamp - cab	399, 401
-----------------------	----------

Dozers - mechanical	
---------------------------	--

Angle Tilt Dozer	337-341
------------------------	---------

Tilt Dozer	333, 335
------------------	----------

Drive - final	169
---------------------	-----

Drive Shaft	149
-------------------	-----

Drawbars	345
----------------	-----

E

Electrical System	
-------------------------	--

Cab	399, 415
-----------	----------

Tractor	109-121
---------------	---------

Engine Frame	349, 351
--------------------	----------

Engine Mounting	49
-----------------------	----

Engine Components	
-------------------------	--

Alternator	81-85
------------------	-------

Camshaft	29
----------------	----

Crankshaft and Flywheel	33
-------------------------------	----

Cylinder Block	31
----------------------	----

Cylinder Head and Cover	25
-------------------------------	----

Fuel Injection System	71
-----------------------------	----

Gasket Kits	43, 45
-------------------	--------

Injection Nozzle	79
------------------------	----

Injection Pump and Drive	75, 77
--------------------------------	--------

Manifolds	21
-----------------	----

Oil Filter and Cooler	19
-----------------------------	----

Oil Pump and Pan	41
------------------------	----

Pistons and Connecting Rods	37, 39
-----------------------------------	--------

Starter and Solenoid	87-103
----------------------------	--------

Timing Gear Cover	47
-------------------------	----

Turbocharger System	23
---------------------------	----

Valve Mechanism	27
-----------------------	----

Water Pump	15, 17
------------------	--------

Exhaust - stack and mufflers	61, 63
------------------------------------	--------

ALPHABETICAL INDEX

F

Fan - radiator	51
Filters	
Air Cleaner	55, 57
Fuel	73
Oil - engine	19
Oil - hydraulic	197
Oil - transmission	135, 139
Final Drive	169
Floor Mats	387, 389
Floor Plates	367
Flywheel - engine	35
Frames	
Dozer C-frame	337
Dozer - push beams	333
Loader Lift	325
Main	349, 351
Rear (Seat and Tank)	355
Seat	371, 373, 377
Track	177
Fuel Injection System	71
Fuel Lines	69
Fuel Tank	67

G

Gaskets - engine (Service Kits)	43, 45
Gauges - instruments	105-111
Glass - cab	395, 397
Grilles	359
Grousers (Track Shoes)	191
Guards	
Brush Screens	379, 381
Canopy Extension - dozer models	381
Hydraulic Lines	205, 207, 215-225
Roll Over Protection Structure	379
Side Shields	365
Track Guides	185
Transmission - rear	357
Undercarriage	353

H

Head - engine cylinder	25
Head Lamps	125
Heaters	
Cab	407-413
Engine Block	31
Hood	363
Hook - pull	349, 351
Horn	129
Hose and Fitting Chart	424
Hose - see fuel lines, hydraulic circuits, or radiator	

H

Hydraulic Circuits	
Backhoe	229, 231
Dozer Angle	215, 219, 221
Dozer Lift	211, 213
Dozer Tilt	215, 217, 219, 223
Dual Pull Behind	227
Equipment Pump to Reservoir and	
Control Valve	199
Loader Clam Bucket	209
Loader Bucket (Tilt)	205
Loader Lift	203
Ripper	225
Torque Converter to Transmission	135
Transmission Control Valve	171, 173
Transmission Cooling	137
Hydraulic Reservoir	197

I

Idler - track	177, 179
Index - numerical	425
Indicator - bucket position	331
Instrument Panel	105, 107
Instruments - gauges	59, 105, 107

L

Lamps	125
Levers - see controls	
Loader	
Buckets	327, 329
Lift Frame	325
Return-To-Dig	331

M

Manifold	
Exhaust	21
Intake	21
Water	13
Moldboards - see blades	
Mounts	
Engine	49
Torque Converter	49
Muffler - exhaust	61, 63

N

Noise Reduction pads	
Cab	419
Tractor	383, 385
Nozzle - fuel injector	79
Numerical Index	425

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

ALPHABETICAL INDEX

O

Oil Cooler - engine	19
Oil Pan - engine	41
Oil Pump - engine	41
Overhaul Kit - transmission	175

P

Pads - noise reduction	383, 385, 419
Parking Brake (Manual)	195
Pedals - brake	193, 195
Pedal - throttle control	65
Pistons - engine	37, 39
Plates - floor	367
Plates - track shoes	191
Product Identification Number Location	4
Pulleys	

Alternator	123
Crankshaft	33
Fan Mounting	15, 17
Pump - water	15, 17
Pull Hook	349, 351
Pumps	
Fuel Injection	77
Fuel - hand (primer)	77
Oil - engine	41
Oil - hydraulic	199, 201
Oil - torque converter	135, 147
Water - engine	15, 17

R

Radiator	51, 53
Recoil System - track	179
Regulator - voltage	83, 85
Reservoir - hydraulic	197
Return-To-Dig - loader	331
Rings - piston	37, 39
Ripper - mechanical parts	343
Rocker Arms - engine	27
Rods - connecting	37, 39
Rods - push, engine	27
Roll Over Protection Structure	379
Rollers - track	181, 183

S

Safety Strut - loader	325
Screens	
Antisandblast - radiator	51
Brush	381
Cab	391
Radiator	361
Seat Assemblies	371-377

S

Seat Belts	369
Serial Number Location	4
Shoes - track	191
Side Shields - engine	365
Sleeves - piston	37, 39
Solenoid - starter	95
Sprocket - track drive	177
Starter - engine	87-103
Strainer - fuel	67
Strut - tilt dozer	383

T

Tank - fuel	67
Teeth - bucket	327
Thermostat - water temperature	13
Timing Gear and Cover - engine	47
Tool Box	67
Torque Converters	141-145
Track	
Adjuster - hydraulic	179
Carrier Roller	181, 183
Chain	187, 189
Chain Service Kits	187, 189
Frames	177
Guides (Rock Guards)	185
Idler	179
Recoil System	179
Rollers	181, 183
Shoes	191
Sprocket	177
Transmission	
Bevel Pinion Shaft and Gear	165
Brakes	167
Clutches and Clutch Shafts	157-163
Control Valve	173
Final Drive	169
Transmission Case and Covers	151, 153
Transmission Hydraulic Lines	171
Turbocharger System	23

U

Undercarriage Guards	353
----------------------	-----

V

Valve	
Anticavitation	321, 323
Equipment Control	267-289
Levers	257-265
Mounting	255
Sections	291-319
Transmission Control	173

ALPHABETICAL INDEX

W

Winch - see parts catalog 1126
Windshield Wipers - cab 417

W

Wiring
Cab 399, 415
Instrument Panel 109, 111
Tractor 113-131

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS