



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Operator's Manual

420B Gasoline

Crawler

S/n 3012301 & Up

JENSALES.COM

or Call 800-443-0625

JENSALES

Operator's Manual

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. **J.I. CASE** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-O-420B&C

FOREWORD

Incorporated into every product of J. I. Case Company are years of engineering experience, skilled manufacturing methods, and the finest materials available. With proper care and operation, your Case Crawler will perform years of dependable and economical service.

It is the purpose of this book to assist you in getting efficient, economical operation through proper care of your Crawler.

In the event that you need information not given in this manual, or require the services of a factory-trained, Case Serviceman, we recommend you use the facilities offered by the authorized Case Industrial Dealer or Branch in your locality. They are kept informed on the latest service procedures and are well equipped to supply your service requirements. All authorized Case Industrial Dealers stock genuine Case parts which should always be used to assure the utmost in economy and life for your Crawler.

When ordering parts, always specify the Crawler and engine serial numbers; also allied equipment serial numbers.

It is the policy of J. I. Case Company to make continuous improvements at all times, without incurring any obligation to make such changes on Crawlers previously sold.

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

TABLE OF CONTENTS

SECTION I CRAWLER	4
-----------------------------	---

INTRODUCTION	4
------------------------	---

CRAWLER SERIAL NUMBERS	6
----------------------------------	---

SPECIFICATIONS — DRAWBAR CRAWLER	7
--	---

Engine	8
------------------	---

Clutch	9
------------------	---

Transmission	9
------------------------	---

Fuel System	9
-----------------------	---

Cooling System	9
--------------------------	---

Electrical and Ignition Systems	9
---	---

Approximate Capacities	10
----------------------------------	----

Physical Dimensions	10
-------------------------------	----

Shipping Weight	10
---------------------------	----

LUBRICATION AND HYDRAULIC SYSTEM — DRAWBAR CRAWLER	11
--	----

Lubrication Times	12
-----------------------------	----

Recommended Lubricants	13
----------------------------------	----

Pressure Fittings	14
-----------------------------	----

Engine Lubrication	15
------------------------------	----

Air Cleaner	19
-----------------------	----

Generator	19
---------------------	----

Distributor	19
-----------------------	----

Transmission-Differential	20
-------------------------------------	----

Final Drives	21
------------------------	----

Hydraulic Reservoir	22
-------------------------------	----

Reservoir Breather	24
------------------------------	----

Hydraulic Oil Filter	24
--------------------------------	----

OPERATING INSTRUCTIONS — DRAWBAR CRAWLER	25
--	----

Pre-starting Check List	26
-----------------------------------	----

Instruments	27
-----------------------	----

Operating Controls	28
------------------------------	----

Engine Starting Procedure	30
-------------------------------------	----

Stopping Engine	31
---------------------------	----

Engine Run-In Procedure	31
-----------------------------------	----

Operating Procedure	32
-------------------------------	----

Drawbars (Agricultural and Industrial)	33-34
--	-------

Cold Weather Operation	35
----------------------------------	----

Hot Weather Operation	37
---------------------------------	----

Operating Precautions - General	37
---	----

TABLE OF CONTENTS - CONTINUED

Personal Safety Precautions	38
Important Checks During Operation	39

CLICK ANYWHERE FOR MORE DETAILS


PREVENTIVE MAINTENANCE — DRAWBAR CRAWLER	41
Lubrication	42
Cooling System	42
Air Cleaner	47
Crankcase Breather	48
Fuel System	48
Governor and Engine Speed	51
Valve Adjustment	52
Testing Engine Compression	53
Engine Oil Pump	53
Ignition and Electrical Equipment	55
Clutch	63
Brakes	64
Track	66
Crawler Storage	69

SERVICE DIAGNOSIS — DRAWBAR CRAWLER	71
Engine Will Not Start	72
Engine Misfiring	73
Lack of Power	74
Engine Knocks	74
Engine Continues to Run After Switch is Turned Off	75
Engine Overheating	75
Engine Uses Too Much Fuel	76
Low Oil Pressure	76
Automatic Voltage Regulator and Generator	77
Battery	77
Transmission-Differential	77
Trouble Shooting Chart — Hydraulic System	78

SECTION II LOADER	79
SECTION III BACKHOE	99
SECTION IV P. T. O. AND BELT PULLEY	121
SECTION V MECHANICAL WINCH	127
SECTION VI HYDRAULIC WINCH	135
SECTION VII SCARIFIER	141
SECTION VIII THREE POINT HITCH	149
SECTION IX PULL BEHIND HYDRAULICS	159
SECTION X DOZERS	165
INDEX	181
WARRANTY	(Inside Back Cover)

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

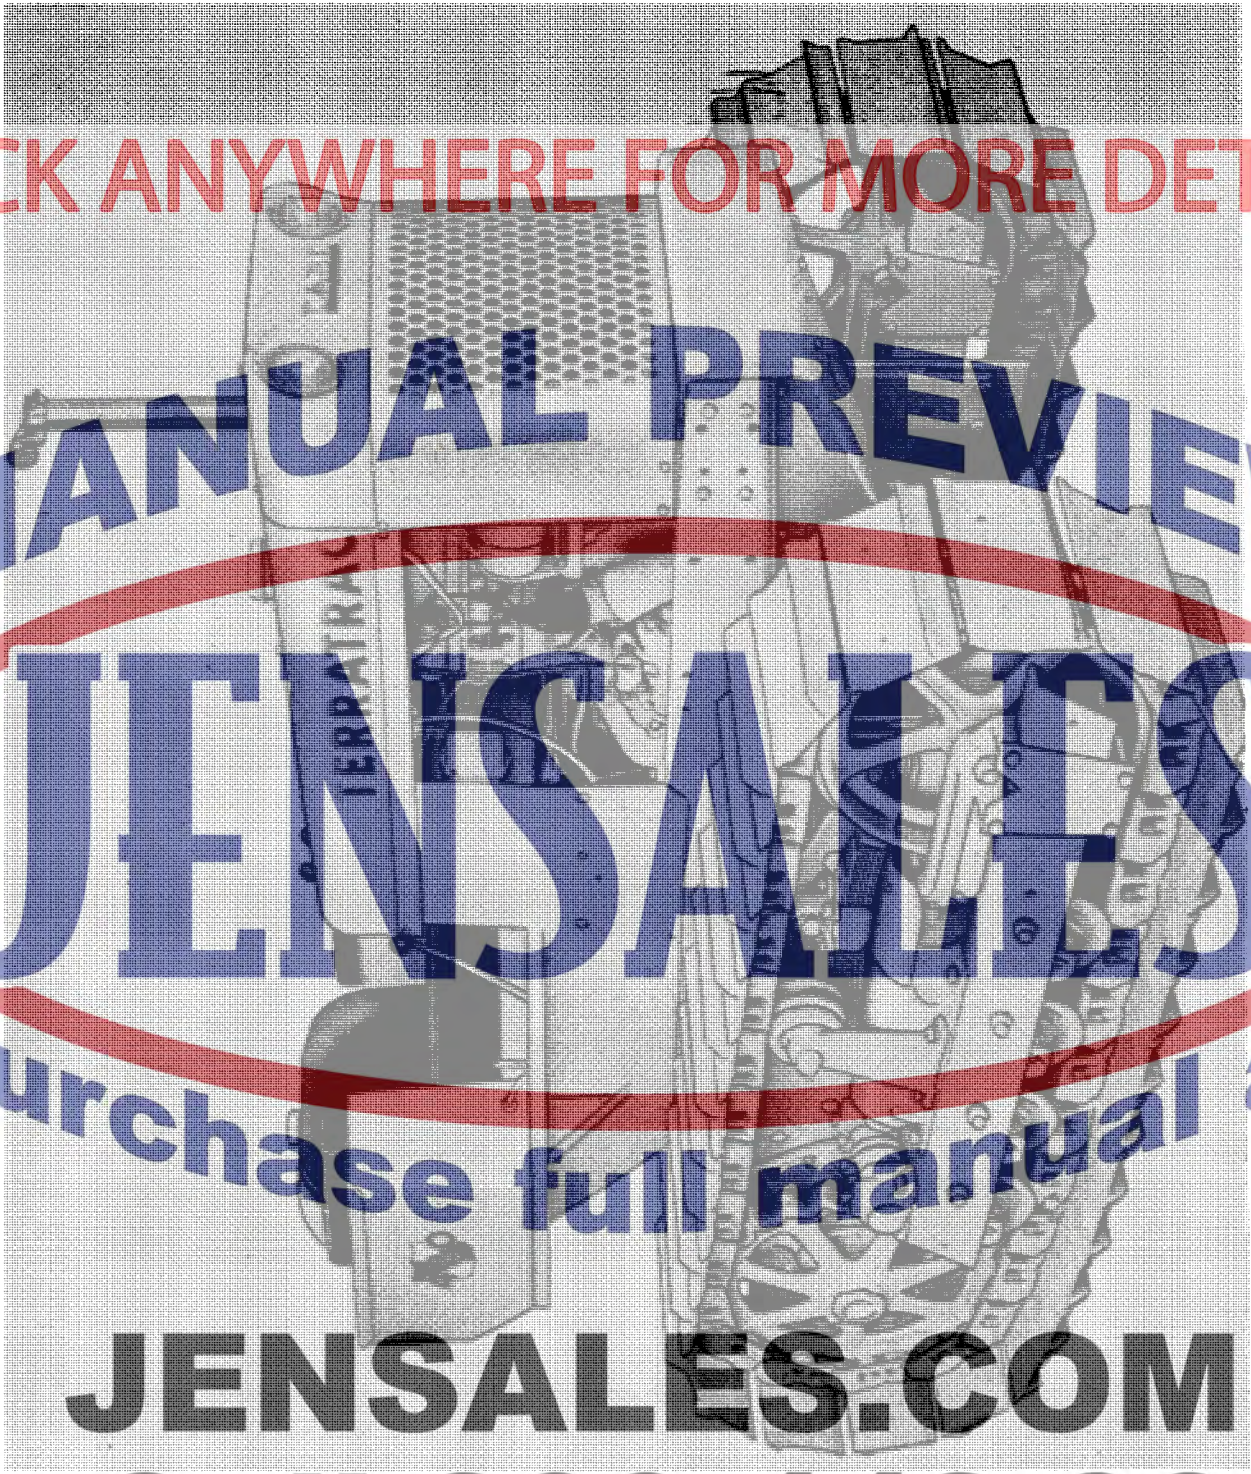

MANUAL PREVIEW

JENSALES

purchase full manual at

JENSALES.COM

or Call 800-443-0625

Figure 1 - Right Hand Front View Drawbar Model

CLICK ANYWHERE FOR MORE DETAILS

INTRODUCTION

1. "POWER-TORQ" ENGINE. A high-compression, heavy-duty power plant with an extremely high torque that operates on regular grade gasoline.
2. HEAVY DUTY CLUTCH. New clutch design with 50% more "torque carrying" capacity, smooth long life operation.
3. STEERING. Controlled planetary differential with power to both tracks while turning.
4. BRAKES. Bands on drums in differential for steering Crawler or for stopping and holding on grades. Actuated by hand or foot levers.
5. TRANSMISSION. Three speed sliding gear type transmission.
6. HYDRAULIC ATTACHMENTS. Several types of hydraulic operated Allied Equipment can be installed. It is engineered for the Crawler.
7. SUSPENSION. Leaf type springs for track oscillation prevent undue shock to the Crawler.
8. TRACK AND TRACK FRAME. Heavy-duty steel channel, with side frames securely tied together by rigid transverse torque tube, which supports engine, dozer mounting brackets, etc. All track rollers mounted on anti-friction bearings. Frame is spring-mounted to absorb shocks, keeps stress from damaging power train.
9. UNIVERSAL JOINTS. Universal joints provide a flexible connection between transmission and clutch.
10. SEAT. Stationary-type comfortable back, seat, and arm rests of foam rubber covered with durable synthetic leather. Roomy tool chest under the left arm rest.
11. LIGHTS. Seal-beam headlights recessed in streamlined hood, and recessed tail lights.
12. TRACK PLATES. A large variety of track plates are offered to fit any particular need. Grousers, open mud grouser, ice and snow grousers, and steel ribbed street plates, heat treated or non-heat treated are offered as optional equipment. Rubber pads can be added to 11 and 12 inch Grousers for use in street.
13. MUFFLER. An underhood type muffler is available as optional equipment for installation on the Crawler.
14. PRE-CLEANER (OPTIONAL). A pre-cleaner, with settling bowl, is available for installation on Crawlers. This tube, which elevates the air intake level above the hood, is recommended for use in dusty operating conditions.