



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case
Operator's Manual
Hydraulic Control
Unit For
S, D & LA Series

Operator's Manual

JENSALES.COM
or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CA-O-HYD UNIT

OPERATOR'S

INSTRUCTION MANUAL

For the Operation and Care of...

MANUAL PREVIEW
CASE

Est. 1842

**HYDRAULIC
CONTROL UNIT**

purchase full manual at
for
MODELS

"S", "D" and "LA"

SERIES TRACTORS

JENSALES.COM
or Call 800-443-0625 *First Edition*

J. I. CASE CO.

RACINE - WISCONSIN - U.S.A.

CLICK ANYWHERE FOR MORE DETAILS

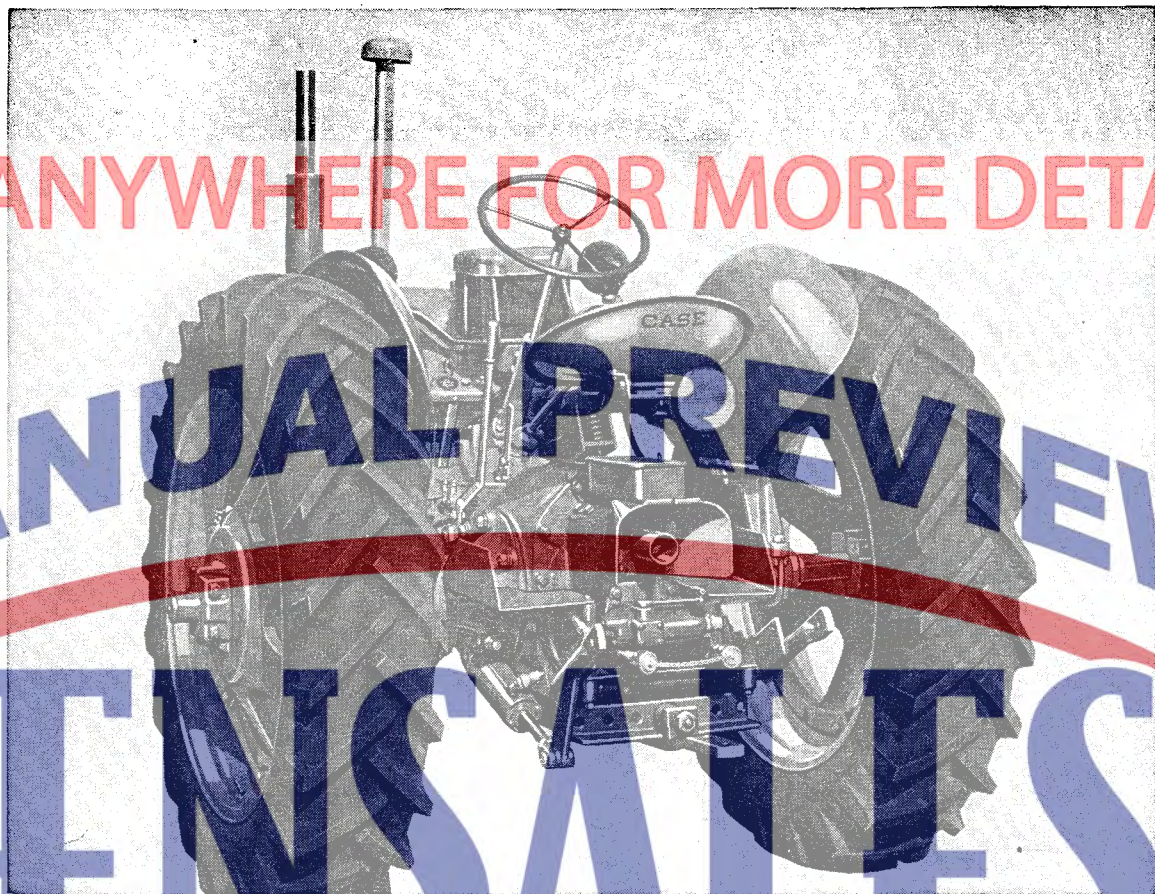


Figure 1. Model "DC" Tractor Equipped with Hydraulic Control Unit and Breakaway Couplings

purchase full manual at

JENSALES.COM

or Call **800-443-0625**

CLICK ANYWHERE FOR MORE DETAILS



Figure 2. Model "DO" Tractor Equipped with Hydraulic Control Unit and Breakaway Couplings

CLICK ANYWHERE FOR MORE DETAILS



Figure 5. Model "LA" Tractor Equipped with Hydraulic Control Unit and Breakaway Couplings

Your tractor is equipped with the Case Hydraulic Control Unit for easy operation and convenient control of your implements. This unit has been thoroughly serviced and put in operating condition by the dealer from whom it was purchased.

The Hydraulic Control Unit is adapted to the various models of Case tractors, as is illustrated in Figures 1 through 5.

Even though your dealer has serviced this unit completely, you will obtain greater satisfaction from the use of it by carefully reading and studying this manual.

INDEX

Page No.

Breakaway Couplings.....	15
Depth Control of Drawn Implements	18
Description.....	7
Dust Plugs.....	16
Filtering System.....	12
Hand Control Lever.....	13
Magnetic Drain Plug.....	13
Mounted Cylinder.....	9
Oil Capacity.....	11
Oil Filler Plug.....	11
Oil Specifications.....	11
Operating the Unit.....	13
Operating the Control Valve.....	13
Portable Cylinder.....	15

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

It is important to note that when refilling the hydraulic system, the oil should be rechecked after the pump has operated a few times, and the sump refilled to level plug level.

When a portable cylinder with hose lines is first placed in operation it will drain a quantity of oil out of the sump. Therefore, the main housing oil sump must be **immediately** refilled to the level of the level plug opening.

FILTERING SYSTEM

The Case Hydraulic Control Unit is provided with an edge wound paper cylinder oil filter, Figure 13, which is located on the right hand side of the main



Figure 13

housing, Figure 14. It may be easily removed for cleaning or replacement by removing the three nuts holding the filter cover on the main housing.



Figure 14