



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

J.I. Case

Parts Manual

T22-40 & T25-45

Cross Motor

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CLICK ANYWHERE FOR MORE DETAILS

No. 108

REPAIR PARTS


LIST

MANUAL PREVIEW

MODEL "T"

TRACTOR

JENSALES®

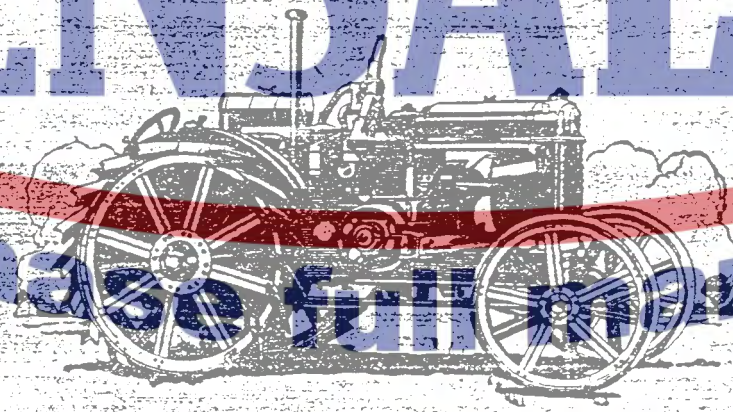

purchase full manual at

JENSALES.COM

Add 10% to prices listed herein to cover freight charges on parts delivered from Salt Lake City, Spokane, Portland, Oakland, Fresno and Los Angeles.

or Call 800-443-0625

J. I. Case Threshing Machine Co.,

(INCORPORATED)

RACINE, WISCONSIN, U. S. A.

CLICK ANYWHERE FOR MORE DETAILS

547-0-28

Printed in U. S. A.

ALPHABETICAL INDEX

	Page
A	
Air Washer	16
Axle, front	28-29
Axle, rear	30-31-32

B	
Brake (plate)	25
Box of Tools	37

C	
Carburetor	13
Carburetor Repair Parts	42
Clutch (list)	21
Clutch (plate)	19-20

D	
Drawings, Shafts, Rods, Pins, Etc.	38

F	
Fan	17-18
Fan Drive Gear (plate)	10
Frame	37

G	
Governor	16
Governor (plate)	10
Grouters Tabulated List	33

H	
Hood	37

L	
Lubricator, Madison-Kipp	14
Lubricator, Detroit	14
Lubricator (plate)	6
Lubricator Repair Parts	39-40-41
Lugs (Tabulated List)	33

M	
Magneto	14
Magneto Repair Parts	13-17
Miscellaneous	37
Motor	11-17
Motor Lubrication (plate)	6

P	
Priming Cup	12

R	
Radiator	35

S	
Seat	37
Seat Spring	37
Steering (list)	29
Steering (plate)	28
Self Steering Device	36

T	
Tanks, Gasoline, Kerosene, Water	34
Tools	37
Transmission (list)	26-27
Transmission (plate)	22-23-24
Transmission Control (plate)	23
Tubes, Fuel	34
Tubes, Oil	13-14-15-16

W	
Water Pump (Plate)	10
Wheel, Front (list)	29
Wheel, Front (plate)	28
Wheel, Rear (list)	31-32
Wheel, Rear (plate)	30-31
Wheel Grouter and Lugs	33
Whistle, Exhaust	36
Wires	14
Wrenches	37

ALPHABETICAL INDEX

	Page
A	
Air Washer	16
Axle, front	28-29
Axle, rear	30-31-32

B	
Brake (plate)	25
Box of Tools	37

C	
Carburetor	13
Carburetor Repair Parts	42
Clutch (list)	21
Clutch (plate)	19-20

D	
Drawings, Shafts, Rods, Pins, Etc.	38

F	
Fan	17-18
Fan Drive Gear (plate)	10
Frame	37

G	
Governor	16
Governor (plate)	10
Grouters Tabulated List	33

H	
Hood	37

L	
Lubricator, Madison-Kipp	14
Lubricator, Detroit	14
Lubricator (plate)	6
Lubricator Repair Parts	39-40-41
Lugs (Tabulated List)	33

M	
Magneto	14
Magneto Repair Parts	43-47
Miscellaneous	37
Motor	11-17
Motor Lubrication (plate)	6

P	
Priming Cup	12

R	
Radiator	35

S	
Seat	37
Seat Spring	37
Steering (list)	29
Steering (plate)	28
Self Steering Device	36

T	
Tanks, Gasoline, Kerosene, Water	34
Tools	37
Transmission (list)	26-27
Transmission (plate)	22-23-24
Transmission Control (plate)	23
Tubes, Fuel	34
Tubes, Oil	13-14-15-16

W	
Water Pump (Plate)	10
Wheel, Front (list)	29
Wheel, Front (plate)	28
Wheel, Rear (list)	31-32
Wheel, Rear (plate)	30-31
Wheel Grouter and Lugs	33
Whistle, Exhaust	36
Wires	14

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS


22-40 AND 25-45 TRACTOR

CLICK ANYWHERE FOR MORE DETAILS



MOTOR

CLICK ANYWHERE FOR MORE DETAILS

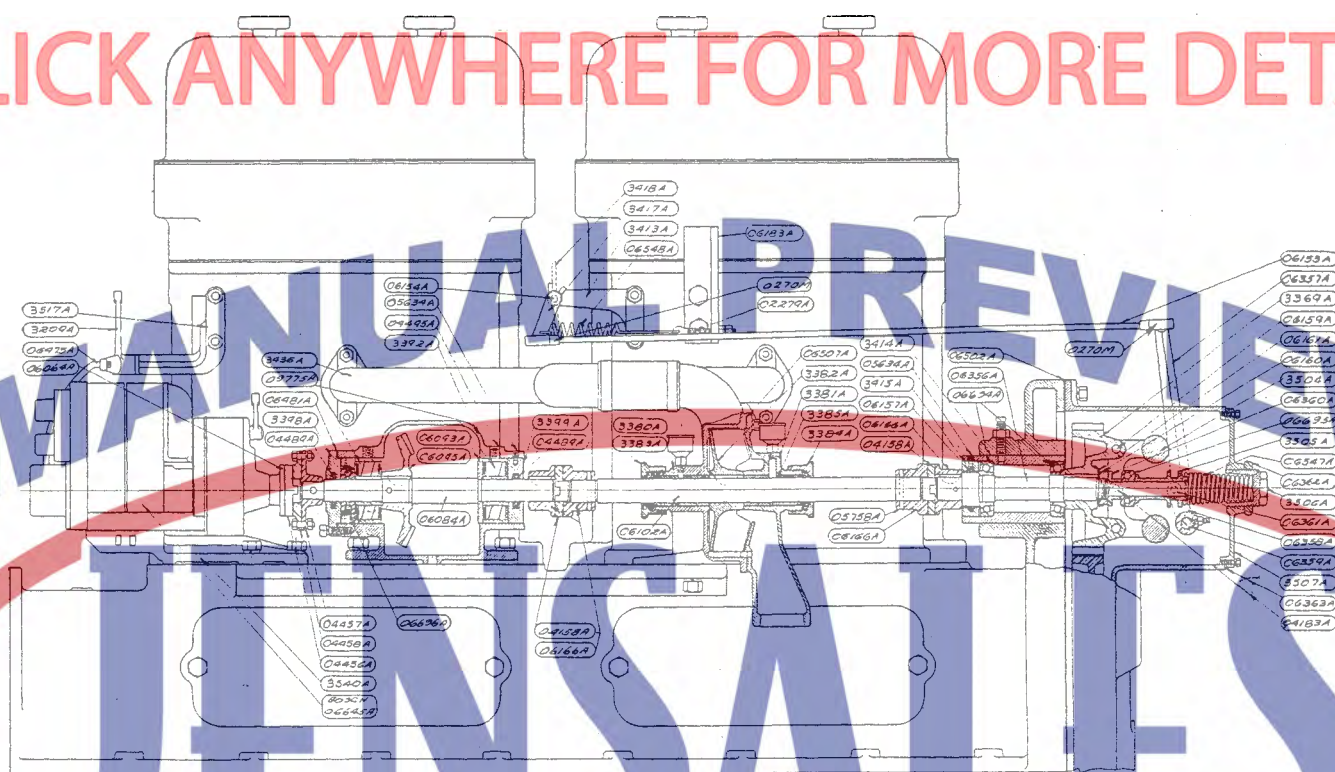

Purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

MOTOR

Telegraph Cipher	Number of Part	NAME OF PART
Permute	173 A	Bevel channel washer
Pointing	1572 A	Bevel channel washer
Commentary	2695 A	Knob for cylinder head cover
Etiolated	2907 A	Bell crank for throttle control rods
Cuscuta	2961 A	Guide for breather valve
Cushite	2962 A	Housing for breather valve
Cushitic	2967 A	Breather valve
Aqada	3126 A	Flange for Case air washer drain plug
Lesson	3128 A	Catch for Case air washer hook bolt
Mileage	3209 A	Bell crank for magneto control rods, used with 06645A and 06645A1
Impilled	A3209 A	Bell crank for magneto control, used with Robert Bosch magneto F.U.4C. 125
Madden	3258 A	Filler cover for crank case filler elbow (used after 45180)
Heuristic	3320 A	Valve guide
Molding	3330 A	Wrench for spark plug
	3350 A	Cylinder jacket, R. H. (Use 09642A prior to 67199, 09642A1 after 67198)
	3351 A	Cylinder jacket, L. H. (Use 09643A prior to 67199, 09643A1 after 67198)
Hewed	3352 A	Cylinder barrel, prior to 67199
Adore	A3352 A	Cylinder barrel, after tractor 67198
Hewn	3353 A	Piston
	3354 A	Cylinder head (Use 09763A)
	A3354 A	Cylinder head, use 09763A1
Hexabasic	3355 A	Crank case, upper (prior to 45181)
Aqaka	A3355 A	Crank case, upper (after 45180)
	3356 A	Crank case, lower (Use 09652A) (prior to 45181)
	A3356 A	Crank case, lower (Use 09652A1)
Hexabiose	3357 A	Cover for crank case, R. H. end prior to 42388 (See Note)
Gradation	A3357 A	Cover for crank case, R. H. end, used regularly after 42387 Note: A few tractors prior to No. 42388, also have been equipped with A3357A. In ordering you must give number on old cover.
Hexacanth	3358 A	Cover for crank case, L. H. end
Hexacid	3359 A	Cap for crank shaft end bearing (prior to 45181)
Aqala	A3359 A	Cap for crank shaft end bearing (after 45180)
Hexade	3360 A	Cap for crank shaft center bearing (prior to 45181)
Aqama	A3360 A	Cap for crank shaft center bearing (after 45180)
Hexasemic	3367 A	Bushing for connecting rod, piston end
Hexaseme	3369 A	Governor gear
Hexastich	3370 A	Gear for cam shaft
Hiation	3380 A	Body for water pump
Hiatus	3381 A	Cover for water pump
Hibernacle	3382 A	Impeller for water pump
Hibernal	3383 A	Stuffing box for water pump, R. H.
Hibernate	3384 A	Stuffing box for water pump, L. H.
Hibernian	3385 A	Bushing for water pump
Hidden	3392 A	Housing for fan gear
Hidrotic	3398 A	Retainer for fan gear housing, magneto side
Hielaman	3399 A	Retainer for fan gear housing, water pump side
Hielmal	3400 A	Bracket for valve rocker arm
Hieracium	3401 A	Bushing for valve rocker arm
Hierapicra	3402 A	Spacer for valve rocker arm, replaced by 0934AB
Hierarchal	3403 A	Guide for push rod lifter
Hierarchy	3404 A	Crab for push rod lifter guide
Hieratic	3405 A	Piston ring set 8—3405A and 4—3752A—see 4277A—3585—6A
	3406 A	Bearing for cam shaft, L. H. (Use 09645A)
	A3406 A	Bearing for cam shaft, L. H. (Use 09645A1)
Hierocracy	3407 A	Bushing for cam shaft, L. H. (prior to 45181)
Aqapa	A3407 A	Bushing for cam shaft, L. H.
Hierodule	3408 A	Bushing for cam shaft, R. H.
Hierogram	3409 A	Bushing for cam shaft, center
Hierograph	3410 A	Gland for cam shaft packing, R. H. end
Hierolaty	3411 A	Hand hole cover for crank case (prior to 45181) see 3749A-3750A
Hierology	3413 A	Bracket for governor shaft
Hieron	3414 A	Bushing for governor shaft
Hierophant	3415 A	Retainer for governor shaft bearing
Hierotheca	3417 A	Arm for throttle valve
Higgle	3418 A	Throttle valve
Highbinder	3419 A	Liner for connecting rod, upper or lower half (prior to 45181)
Aqapa	A3419 A	Liner for connecting rod, upper half or lower half
Higher	3420 A	Liner for crank shaft end bearing, upper half (prior to 45181)
Aqara	A3420 A	Liner for crank shaft end bearing, upper half
Highest	3421 A	Liner for crank shaft end bearing, lower half (prior to 45181)
Aqasa	A3421 A	Liner for crank shaft end bearing, lower half
Highlander	3422 A	Liner for crank shaft center bearing, upper half (prior to 45181)
Aqava	A3422 A	Liner for crank shaft center bearing, upper half
Highland	3423 A	Liner for crank shaft center bearing, lower half (prior to 45181)
Aqawa	A3423 A	Liner for crank shaft center bearing, lower half
Highly	3427 A	Oil retainer for crank shaft, R. H.
Highness	3428 A	Oil retainer for crank shaft, L. H.
	3429 A	Exhaust and inlet manifold (Use 09830A)
Highway	A3429 A	Exhaust and inlet manifold
Hilarious	3430 A	Exhaust elbow, cylinder head and manifold (prior to 52980)
Hilarity	3431 A	Flange for exhaust pipe
Hildebrand	3432 A	Heater, carburetor air intake (prior to 52980)
Aroga	A3432 A	Heater, carburetor air intake
Hilled	3433 A	Elbow for air heater, upper
Hillock	3434 A	Elbow for air heater, lower
Hilly	3435 A	Elbow for carburetor air inlet
Hilsa	3436 A	Water manifold, pump to cylinder

MOTOR

Telegraph Cipher	Number of Part	NAME OF PART
Hilt	3437 A	Water manifold, cylinder to radiator.
	3489 A	Oil retainer for crank case, R. H. (Use 09790A).
Aqeba	A3489 A	Oil retainer for crank case, inner.
Hoax	3491 A	Bracket for Detroit lubricator (prior to 45181).
Aqeca	A3491 A	Bracket for Detroit lubricator.
Hoaxing	A3492 A	Pulley on cam shaft for lubricator (prior to 38385).
Aqefa	B3492 A	Pulley on cam shaft for lubricator (after 45180) (see 3599A sprocket).
Hobbesian	3493 A	Pulley for lubricator (prior to 38385).
Aqeca	A3493 A	Pulley for lubricator (used after 45180) (see 09845A).
Hobbism	3494 A	Fly wheel.
Hobby	3496 A	Bracket for oil tube (prior to 45181).
Hockod	3501 A	Washer on crank shaft, fly wheel end.
Hocus	3502 A	Sleeve on fly wheel for starting lever.
Hodograph	3503 A	Pawl for starting lever.
	3504 A	Governor weight (Use 09897A).
Hoggery	3505 A	Sleeve for governor.
Hoggish	3506 A	Adjusting screw for governor spring.
Hoiden	3507 A	Hand hole cover for governor.
Hoist	3508 A	Bracket for fly wheel stop block.
Hoisted	3509 A	Plunger for fly wheel stop block.
	3510 A	Stop block for fly wheel (Use 09733A).
Holcad	3512 A	Quadrant for spark and throttle levers.
Holcodont	3513 A	Spark lever and throttle lever.
Holcus	3516 A	Spacer for spark and throttle lever, replaced by 0578AB.
Holding	3517 A	Bracket for spark control bell crank.
Holiness	3520 A	Outlet elbow for air washer.
	3534 A	Hot and cold air pipe, use 09684A.
Hollow	3535 A	Ball for hot and cold air shutter handle.
Homager	3540 A	Bracket for Bosch magneto 06645A.
Iqusa	A3540 A	Bracket for 06645A1 and 06645A2 Robert Bosch magneto.
Homaloid	3542 A	Housing for throttle valve.
Epoxa	3545 A	Adjusting clamp for governor spring, after tractor 52994.
Homarus	3580 A	Brass washer for clutch pulley (discarded).
Home	3585 A	Special piston ring (1/64" oversize in width) (see 4277A-3405A).
Homelike	3586 A	Special piston ring (1/32" oversize in width) (see 4277A-3405A).
	3598 A	Drive sprocket for lubricator (Use 09845A) (Used from 38385 to 45180).
Aqela	A3598 A	Sprocket for lubricator (Used after 45180) (see A3493A).
Aqema	B3598 A	Lubricator pulley, discarded.
Hyrax	3599 A	Sprocket on cam shaft for lubricator (38385 to 45180) (see A3492A).
	3600 A	Drive hub for lubricator (Use 09845A).
Hyson	3601 A	Crank for lubricator (prior to 45181).
Aqepa	3706 A	Oil pan—after 45180 (see 09593A).
Aqepa	3707 A	Drain cap for oil pan (after 45180).
Aqera	3708 A	Body for oil pump (after 45180).
Aqesa	3709 A	Cover for oil pump body (after 45180).
Aqepa	3710 A	Body for oil pump screen (after 45180).
Aqewa	3711 A	Bushing for oil pump shaft, upper (after 45180).
Acuba	3712 A	Bushing for oil pump shaft, lower (after 45180).
Aqexa	3713 A	Gear for oil pump without keyway (after 45180).
Adaca	3741 A	Cap for pressure valve body.
Aqeya	3742 A	Base for pressure valve.
Aqeza	3743 A	Body for pressure valve.
Aqiba	3745 A	Cap for oil distributor pipe (after 45180).
Adada	3746 A	Tee for oil distributor tube (after 45180).
Aqica	3749 A	Hand hole cover for crank case, L. H. (after 45180) (see 3411A).
Aqifa	3750 A	Hand hole cover for crank case, R. H. (after 45180) (see 3411A).
Aqiga	3752 A	Piston ring with relief (see 3405A).
Grade	3814 A	Bracket for lubricator chain tightener.
Gradient	3815 A	Sprocket for lubricator chain tightener.
Aqija	4041 A	Bushing for L. H. crank case cover.
Axifa	4073 A	Base for Case air washer sight glass.
Aqila	4083 A	Oil retainer for crank case (outer) (used after 46480).
Esuza	4096 A	Cover for crank case, R. H. end—skid engine only (see A3357A).
Esaga	4160 A	Elbow for Simplex air cleaner.
Esaka	4277 A	Special piston ring .015 oversize in diameter (see 3405A-3585A).
Aduve	4312 A	Wrench for water pump stuffing nut.
Popgun	02279 A	Eye bolt for speed regulating spring (prior to 52995).
Homely	04021 A	Dowel for magneto.
Concenter	04158 A	Center piece for water pump shaft coupling.
Concerted	04168 A	Retainer for valve spring washer.
Nucha	04172 A1	Lock washer for piston pin screw.
Concessive	04173 A	Screw for piston pin.
Magnetize	04183 A	Pin, governor weight to sleeve.
Anora	04367 A	Stud for oil filler cover.
Concretion	04389 A	Priming cup.
Conductor	04456 A	Cross piece for magneto coupling, prior to 62109, see 07049A.
Conduirite	04457 A	Magneto coupling, drive shaft side.
Condyle	04458 A	Adjusting piece for magneto coupling.
Cyriote	04489 A	Felt washer for fan gear shaft.
Hysteresis	04495 A	Dowel for fan gear housing bearing.
Layorage	05171 A	Inner race for 09110A.
Laying	05173 A	Cage for 09110A.
Layman	05174 A	Outer race for 09110A.
Lignite	05489 A	Flared tube union $\frac{1}{8}$ " x $\frac{1}{8}$ " (used after 45180).
Homicide	05499 A	Dowel for connecting rod cap.
Ligula	05500 A	Hook bolt for Case air washer.
Aqima	05521 A	Sight glass for Case air washer.
Eloma	05522 A	Packing for Case air washer sight glass.