

CLICK ANYWHERE FOR MORE DETAILS



MANUAL PREVIEW

**J.I. Case**

Service Manual

1190, 1290, 1390,

1194, 1294, 1394

Volume 1 of 4

**JENSALES.COM**

**or Call 800-443-0625**

**JENSALES**

Service Manual

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF  
J.I. CASE OR IT'S SUCCESSORS. J.I. CASE AND IT'S SUCCESSORS  
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,  
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

**CA-S-1190+**

1190, 1290, 1390, 1194, 1294, 1394, Tractors

## Table of Contents

|                                                                                     | SECTION NO. | FORM NO. |
|-------------------------------------------------------------------------------------|-------------|----------|
| <b>2 ENGINE</b>                                                                     |             |          |
| Separating the Tractor .....                                                        | 2010        | 9-43508  |
| Cylinder Head and Valves -1190 and 1194 Tractors.....                               | 2015        | 8-23810  |
| Cylinder Block, Crankshaft and Pistons - 1190 and 1194 Tractors.....                | 2025        | 8-23840  |
| Lubrication System - 1190 and 1194 Tractors .....                                   | 2045        | 8-24240  |
| Engine Removal - 1290,1390,1294 and 1394 Tractors Without Cab.....                  | 2110        | 8-24380  |
| Cylinder Head, Valves and Rocker Arm -<br>1290, 1390, 1294 and, 1394 Tractors ..... | 2115        | 8-24100  |
| Cylinder Block - 1290, 1390, 1294 and 1394 Tractors .....                           | 2120        | 8-24110  |
| Crankshaft, Flywheel and Oil Seals - 1290, 1390, 1294 and 1394 Tractors.....        | 2135        | 8-24400  |
| Lubrication System - 1290, 1390,1294 and1394 Tractors.....                          | 2145        | 8-24120  |
| Cooling System - 1290, 1390, 1294 and 1394 Tractors.....                            | 2155        | 8-24080  |
| <b>3 FUEL SYSTEM</b>                                                                |             |          |
| Fuel System and Thermostart System .....                                            | 3110        | 8-56020  |
| Fuel Injection Pumps .....                                                          | 3112        | 8-56040  |
| Fuel Injectors .....                                                                | 3113        | 8-56030  |
| <b>4 ELECTRICAL</b>                                                                 |             |          |
| Electrical System Troubleshooting.....                                              | 4001        | 8-24130  |
| Wiring Diagram - Tractor .....                                                      | 4112        | 9-43597  |
| Wiring Diagram - 94 Series Tractors With Cab.....                                   | 4114        | 8-85800  |
| Wiring Diagram - 94 Series Tractors Without Cab.....                                | 4117        | 8-85810  |
| Electrical Equipment .....                                                          | 4205        | 9-43571  |
| <b>5 STEERING</b>                                                                   |             |          |
| Steering Hand Pump.....                                                             | 5010        | 8-24040  |
| Steering System Oil Pump - 1190 and 1194 Tractors .....                             | 5010        | 8-56240  |
| Steering System Oil Pump- - 1290, 1390, 1294, and 1394 Tractors .....               | 5110        | 8-56250  |
| Steering Cylinder - (Side Mounted) - 1394 Tractors .....                            | 5120        | 8-56420  |
| Front Axle (MFD) David Brown .....                                                  | 5130        | 8-23290  |
| Front Axle (MFD) Carraro 709/19).....                                               | 5260        | 8-56290  |

# JENSALES.COM

## or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

**6 POWER TRAIN**

|                                                                       |      |         |
|-----------------------------------------------------------------------|------|---------|
| Troubleshooting the Powershift Transmission.....                      | 6000 | 8-59740 |
| Continuouse Clutch (Borg and Beck) 1190 and 1194 Tractors .....       | 6020 | 8-23850 |
| Synchromesh Transmission.....                                         | 6040 | 8-23880 |
| Single Speed PTO - 1190, 1290, 1194, and 1294 Tractors .....          | 6045 | 8-23990 |
| Differential .....                                                    | 6060 | 8-23940 |
| Final Drives - Synchromesh Transmission .....                         | 6070 | 8-23950 |
| Synchromesh Transmission - 1394 Tractor PIN 11139846 and after.....   | 6140 | 8-23540 |
| 12/12 Inch Independant Clutch (Laycock) .....                         | 6141 | 8-24420 |
| Transfer Gearbox (David Brown) -1290 and 1390 Tractors.....           | 6142 | 8-23340 |
| Transfer Gearbox - Mechanical Front Drive .....                       | 6150 | 8-59780 |
| Separating the Tractor to Service the Front of the Transmission ..... | 6200 | 8-59770 |
| Powershift Hydraulic Pump.....                                        | 6225 | 8-23680 |
| Powershift.....                                                       | 6230 | 8-23550 |
| Powershift Control Valve .....                                        | 6235 | 8-23660 |
| Powershift Sequence Valves.....                                       | 6236 | 8-23670 |
| Three Speed Transmission - Powershift.....                            | 6240 | 8-23640 |
| Reversible PTO Shaft - 1390 and 1394 Tractors .....                   | 6245 | 9-43555 |
| Differential Powershift Transmission.....                             | 6260 | 8-23650 |
| Creeper Gearbox - 1394 Tractors.....                                  | 6280 | 8-85980 |
| Multi Speed PTO - 1394 Tractors.....                                  | 6445 | 8-59830 |

**7 BRAKES**

|                                           |      |         |
|-------------------------------------------|------|---------|
| Brakes - Drum, Shoes and Adjustments..... | 7040 | 8-23970 |
|-------------------------------------------|------|---------|

**8 HYDRAULIC SYSTEM**

|                                                                       |      |         |
|-----------------------------------------------------------------------|------|---------|
| Filters, Pumps and Relief Valves .....                                | 8010 | 9-43572 |
| Rockershaft, Lift Cylinder and removal of the                         |      |         |
| Selectamatic Control Valve -1194,1294 and1394 Tractors.....           | 8020 | 8-85970 |
| Selector Dial Mechanism .....                                         | 8045 | 9-43550 |
| Draft Sensing Units .....                                             | 8085 | 9-43553 |
| Remote Valves and Couplers.....                                       | 8190 | 8-23590 |
| Hydraulic Adjustments .....                                           | 8204 | 9-43565 |
| Hydraulic System Specifications, How It Works and Fault Finding ..... | 8205 | 9-43566 |
| Selectamatic Valve .....                                              | 8235 | 9-43574 |

**9 CHASSIS**

|                                                         |      |         |
|---------------------------------------------------------|------|---------|
| Rear Platform and Fenders.....                          | 9040 | 8-23870 |
| Air Conditioning Troubleshooting and System Checks..... | 9240 | 8-59810 |
| Air Conditioning System Service.....                    | 9340 | 8-59820 |


# JENSALES.COM

## or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

## SEPARATING THE TRACTOR


Put the tractor on a hard level surface. Apply the hand brake and put blocks in front and behind the rear wheels. Make sure you have enough space to move the front half of the tractor far enough forward to do the job.

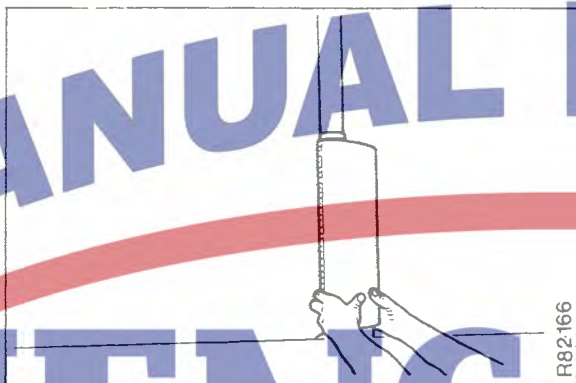

**STEP 1.** Remove the engine exhaust silencer.




**WARNING:** If the engine has been running the exhaust will be hot. Use protective gloves to remove the exhaust or you will burn your hands.

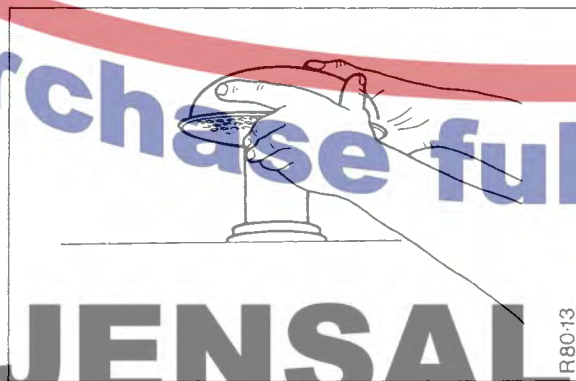


**STEP 2.** Remove the precleaner from the engine air intake pipe.



**STEP 3.** Open the engine cover.

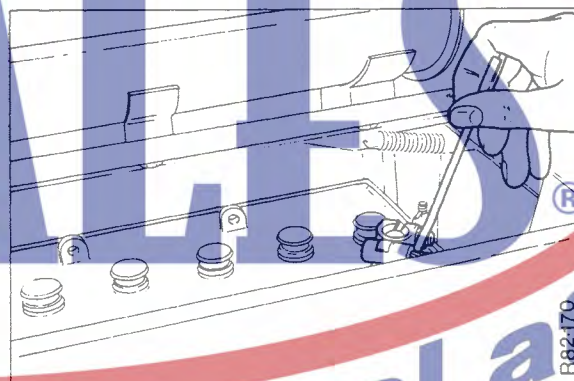

**STEP 4.** Disconnect the battery cables, ground cable first.

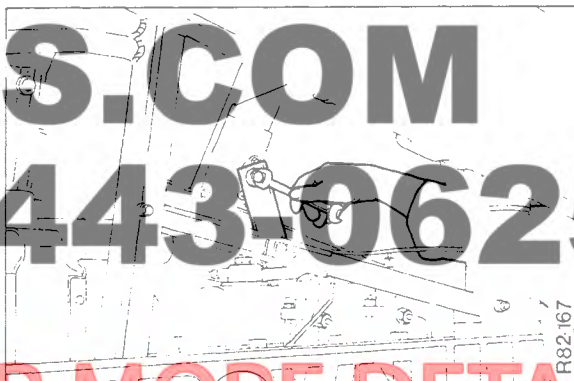


**STEP 5.** Remove the two upper bolts from the engine cover rear supports and push the cover forward.




**STEP 6.** Make a note of which terminal each wire fits on. Disconnect the wires from the fuel tank sender unit.



**STEP 9.** Drain the fuel from the tank and disconnect the pipe to the supply pump.

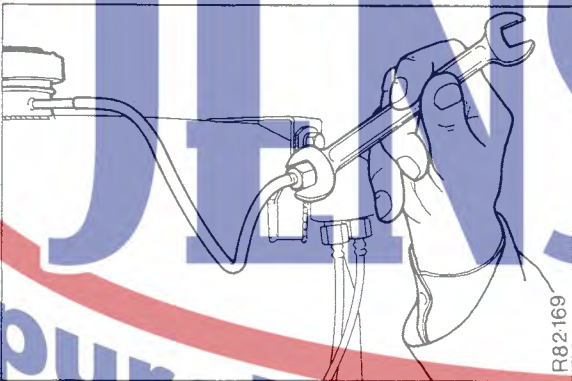

**STEP 7.** Disconnect the fuel pipe which goes to the fuel tank from the fuel leak-off reservoir.

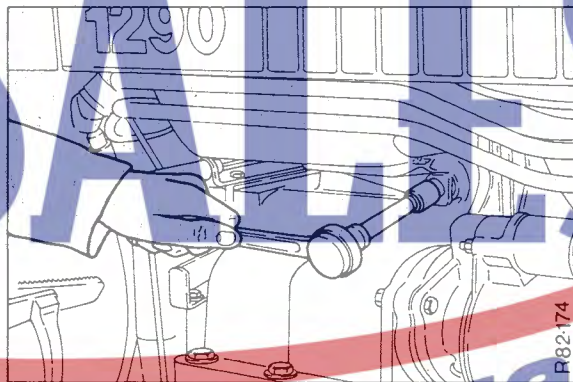

**STEP 10.** Remove the fuel tank mounting bolts, one each side.

1190, 1290 and 1390 only, steps 8 to 11



**STEP 8.** Disconnect the fuel leak-off reservoir from the fuel tank.



**STEP 11.** Move the fuel tank forward off the rear mounting and remove the tank.