



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Caterpillar

Service Manual

3160 Engine

S/N 68P1 & Up

Service Manual

purchase full manual at

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS


THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
CATERPILLAR OR IT'S SUCCESSORS. CATERPILLAR AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CT-S-3160 ENG

Shop
REG00788
3160

CLICK ANYWHERE FOR MORE DETAILS

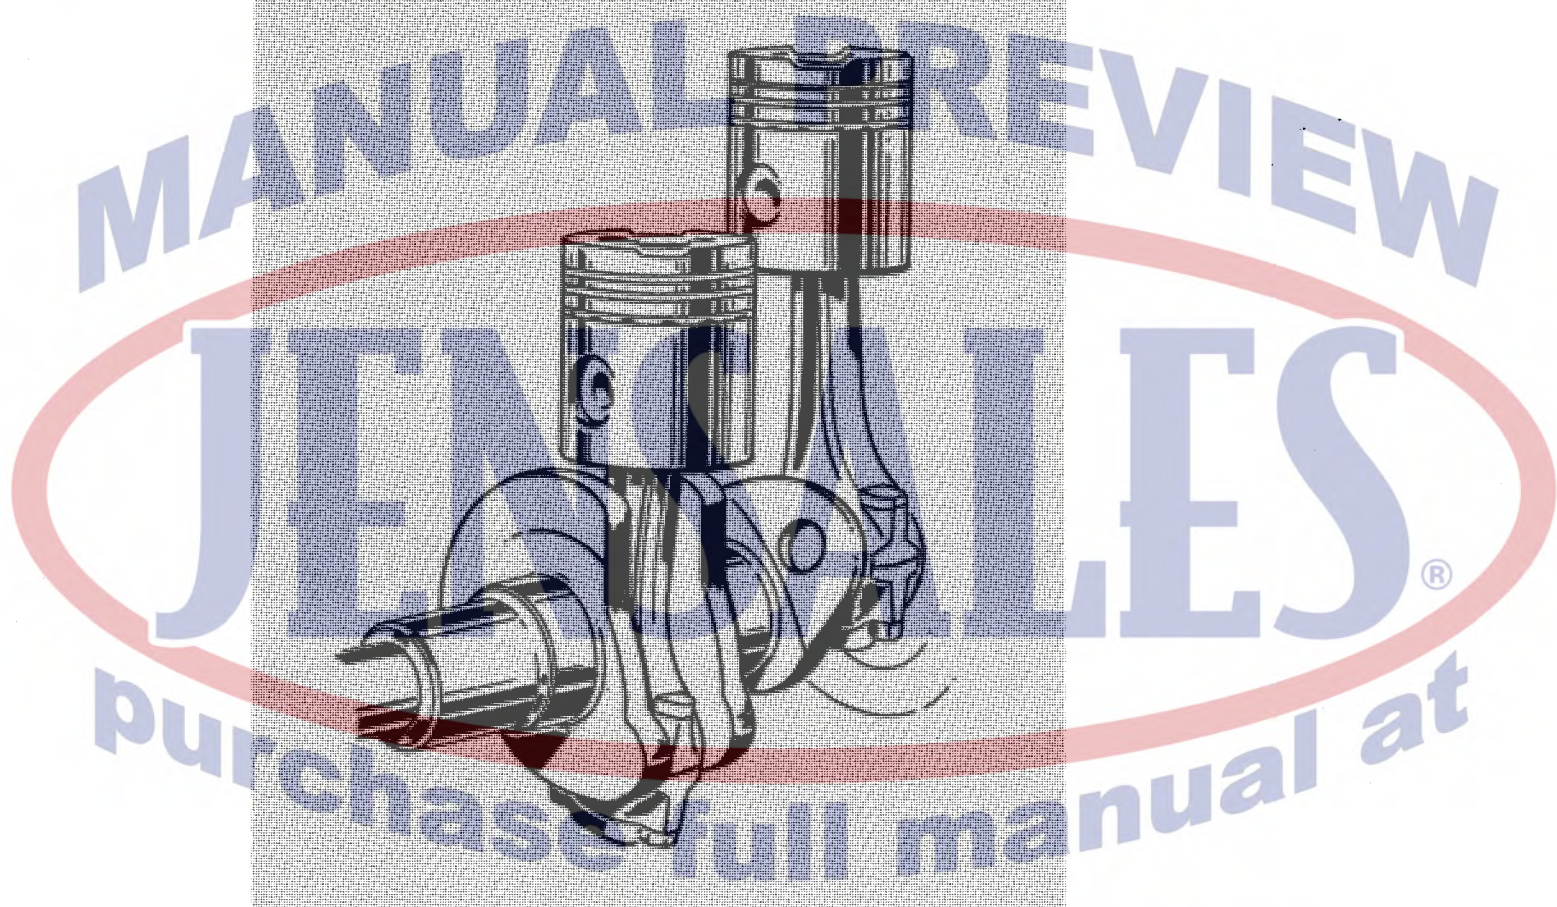

SERVICE MANUAL

JENSALES.COM

3160

or Call 800-443-0625

MARINE ENGINE

SERIAL NUMBERS 68PI-UP

CLICK ANYWHERE FOR MORE DETAILS

SYSTEMS OPERATION

Air Induction and Exhaust	7	Injection Nozzle Operation	5-6
Alternator	14	Lubrication System	9
Automatic Timing Advance Unit Operation	6	Regulator	14
Cooling System	11	Starter Solenoid	14
Cylinder Head and Valves	8	Starting Motor	14
Electrical System	13	Wiring Diagram	13
Fuel Injection Pump Operation	6		
Fuel System	4		
Governor Operation	4		


TESTING AND ADJUSTING

Cylinder Head and Valves	47	Fuel Flow Method of Engine Timing (Engines with Taper Drive for Fuel Injection Pump)	32
Checking Valve Lash Adjustment	47	Fuel Flow Method of Engine Timing (Engines with Bolt On Drive for Fuel Injection Pump)	34
Compression	47	Fuel Injection Pump Camshaft Timing (Engines with Taper Drive for Fuel Injection Pump)	35
Procedure For Measuring Camshaft Lobes	48	Fuel Injection Pump Camshaft Timing (Engines with Bolt On Drive for Fuel Injection Pump)	36
Cooling System	49	Fuel Pump Timing Dimension Setting (Engines with Taper Drive for Fuel Injection Pump)	38
Cooling System Test Tools	49	Fuel Pump Timing Dimension Setting (Engines with Bolt On Drive for Fuel Injection Pump)	39
Dynamometer Test Precaution	52	Governor Linkage Adjustment	46
Inspect Rebuilt Water Pumps	51	Hydraulic Governor Adjustments	43
Pressure Cap	50	Locating Top Center Compression Position For No.1 Cylinder	31
Temperature Gauge	50	Nozzle Assembly Troubleshooting Guide	26-30
Testing Cooling System	49	Removing and Installing Fuel Injection Pumps (Off Engine)	41
Visual Inspection	49	Removing and Installing Fuel Injection Pumps (On Engine)	41
Water Pump Pressure Check	51	Testing 9L9263 Fuel Injection Nozzles	24
Water Temperature Regulator (Thermostat)	50	Testing 9L7883 Fuel Injection Nozzles	27
Electrical System	53	Problem Solving	15
Battery	53		
Charging System	53		
Starting System	56		
Fuel System	24		
Checking and Adjusting Fuel Rack Setting	44		
Checking Fuel Injection Pump Lifter Washer and Pump Plunger	40		
Fuel Flow Check of Timing Using 2P8256 Engine Timing Decal	31		

SPECIFICATIONS

NOTE: For Specifications with illustrations, make reference to ENGINE SPECIFICATIONS FOR 3160 MARINE ENGINE Form No. REG01431. If the Specifications in Form No. REG01431 are not the same as in the Systems Operation and the Testing and Adjusting, look at the printing date on the back cover of each book. Use the Specifications given in the book with the latest date.

FUEL SYSTEM

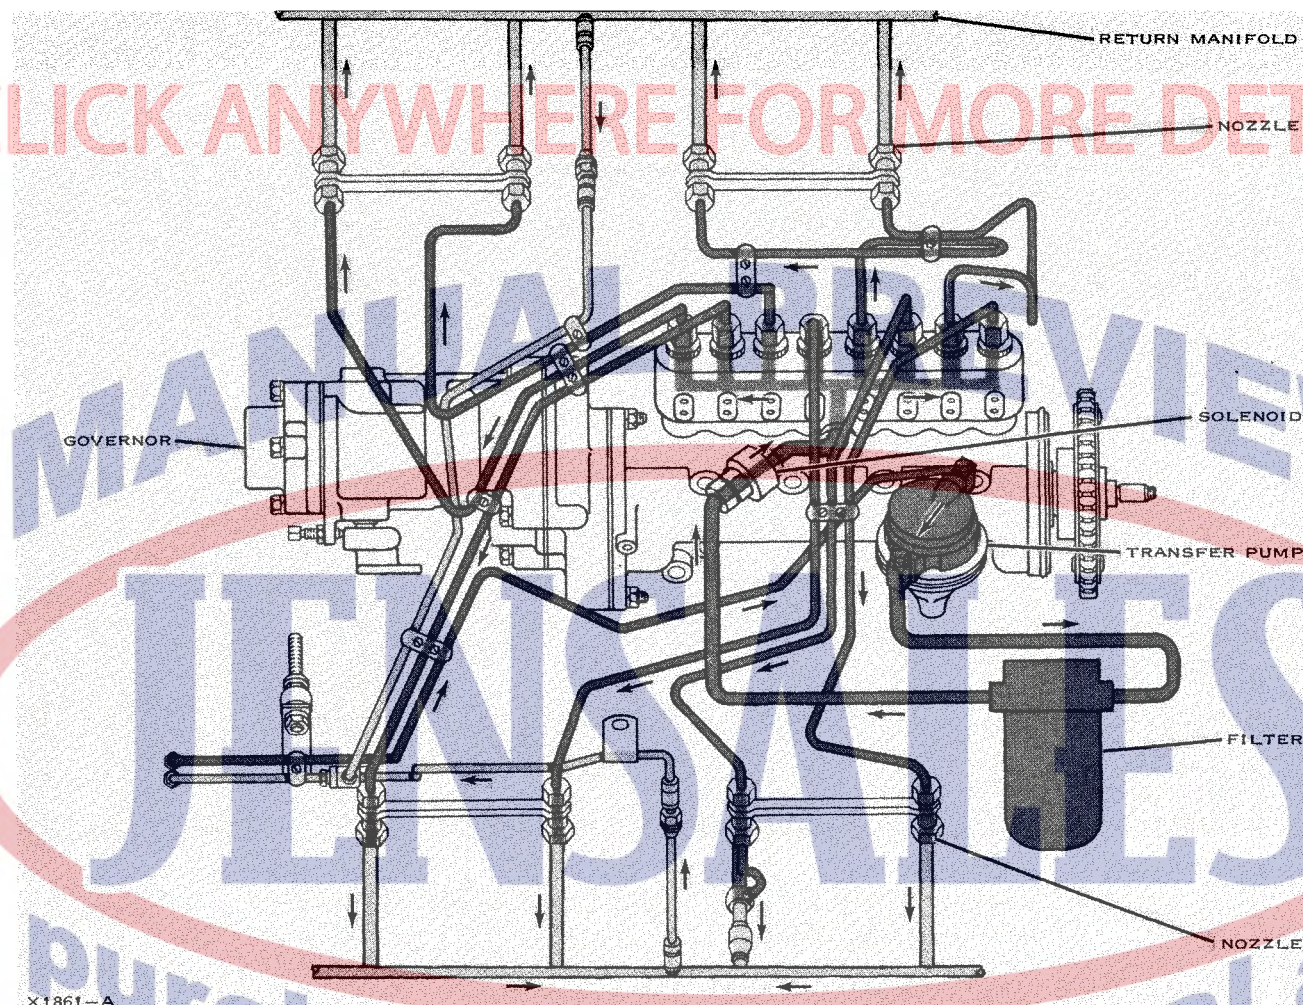

X1861-A

The diaphragm-type fuel transfer pump mounts on the fuel injection pump housing and is driven by a lobe on the injection pump camshaft. The pump draws fuel from the tank and delivers it to a spin-on throw-away type filter. The filter has a combination primary-secondary type construction. A primary fuel filter attachment can be installed between the fuel supply and the transfer pump to strain larger particles from the fuel.

Filtered fuel flows through a shutoff solenoid, mounted on the fuel injection pump housing, into a fuel manifold. The solenoid operates electrically and stops fuel flow when the engine electrical system is shut off.

Fuel in the manifold flows through the barrel assembly inlet port into the area above the injection pump plunger. During injection, the camshaft forces the plunger upward in the barrel. The end of the plunger closes the inlet port and forces the fuel out through high pressure injection lines to the nozzles.

The injection nozzles are located under the valve

cover and are held in place by clamps. The nozzle tip projects from the head into the cylinder bore. Atomized fuel is sprayed in a cone-shaped pattern through four .0128 in. (0.325 mm) orifices into the cylinder.


During injection, a small amount of fuel leaks past the valve guide in the nozzle body to lubricate its moving parts. Any excess leakage flows from the nozzle to a fuel return manifold under the valve cover of each cylinder head. External lines connect the manifolds and return the fuel to the tank.

GOVERNOR OPERATION

The hydraulic governor maintains speed at the rpm selected.


When the engine is operating, the balance between the centrifugal force of the revolving weights and the force of the governor spring controls the movement of the valve. The valve directs pressure oil to either side of a rack-positioning piston. Depending upon the position of the

valve, the rack is moved to increase or decrease the amount of fuel to the engine to compensate for load variation.

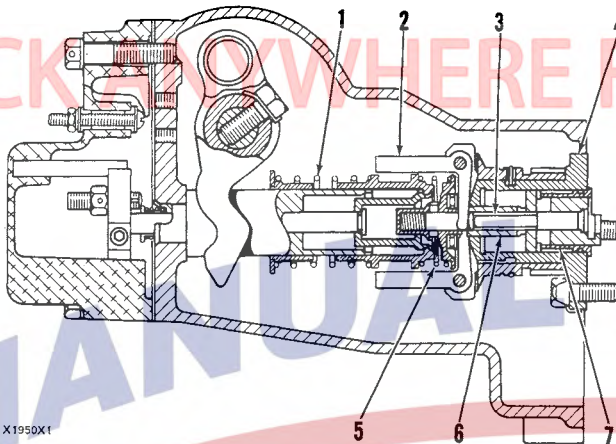

GOVERNOR
(Earlier Governor)

1. High idle spring. 2. Weights. 3. Valve. 4. Cylinder. 5. Low idle spring. 6. Piston. 7. Sleeve.

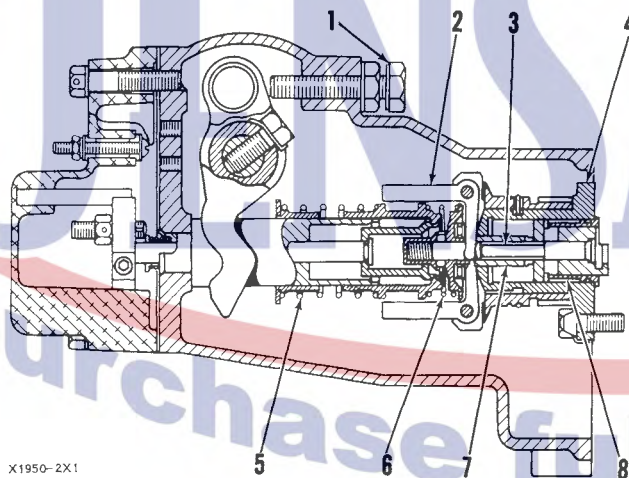

GOVERNOR
(Later Governor)

1. Low idle screw. 2. Weights. 3. Valve. 4. Cylinder. 5. High idle spring. 6. Low idle spring. 7. Piston. 8. Sleeve.

Pressurized lubrication oil, directed through passages in the fuel injection pump housing, enters a passage in the governor cylinder. The oil encircles a sleeve within the cylinder. This oil is then directed through a passage in the piston, where it contacts the valve.

When engine load increases, the revolving weights slow down. The weights move toward each other and allow the governor spring to move the valve forward. As the valve moves, a small passage in the piston opens to pressure oil. Oil flows through this passage and fills the chamber behind the piston. The pressure forces the piston and rack forward, increasing the amount of fuel to the engine. Engine rpm increases until the revolving weights rotate fast enough to balance the force of the governor spring.


When engine load decreases, the revolving weights speed up and the toes on the weights move the valve rearward, allowing oil behind the piston to flow through a drain passage opened at the rear of the piston. At the same time, pressure oil between the sleeve and the piston forces the piston and rack rearward. This decreases the amount of fuel to the engine and the engine slows down. When the force of the revolving weights balances governor spring force, engine rpm will be the same as before.

At engine shut down, a low idle spring returns the valve guide and valve to the full load position. This moves the fuel rack to the full travel position, and assures full fuel flow through the fuel injection pump at engine start up.

INJECTION NOZZLE OPERATION 9L9263 NOZZLES

The nozzle is an inward opening, differential hydraulically-operated, hole-type nozzle.

The nozzle body incorporates the inlet fitting, tip and valve guide. The inward opening valve is spring-loaded. Spring preload is adjusted through the pressure adjusting screw; valve lift is controlled by the adjustable lift screw. Both adjusting screws are secured by the locknut. A nylon compression seal under the inlet fitting "banjo" prevents cylinder compression leakage. The carbon dam at the lower end of the body prevents carbon accumulation in the cylinder head bore.

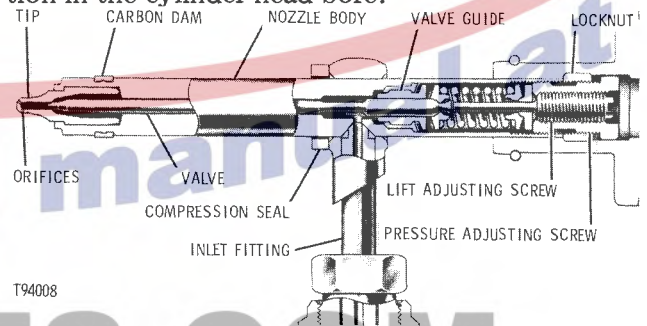


Fuel, under pressure from the injection pump, flows through the inlet, around the valve, filling the nozzle body. When the pressure acting on the differential area overcomes the spring force, the nozzle valve lifts off its seat. Fuel under high pressure sprays through four .0128 in. (0.325 mm) orifices into the cylinder. When delivery to the nozzle ends and pressure drops to the predetermined closing pressure, the spring returns the valve to its seat.

Positive sealing is maintained by line contact of the interference angle between valve and tip seat.

During injection, a small quantity of fuel leaks through a controlled clearance at the valve guide, lubricating all moving parts. This fuel flows through a leak off boot at the top of the nozzle body and returns to the fuel tank.

CYLINDER HEAD AND VALVES

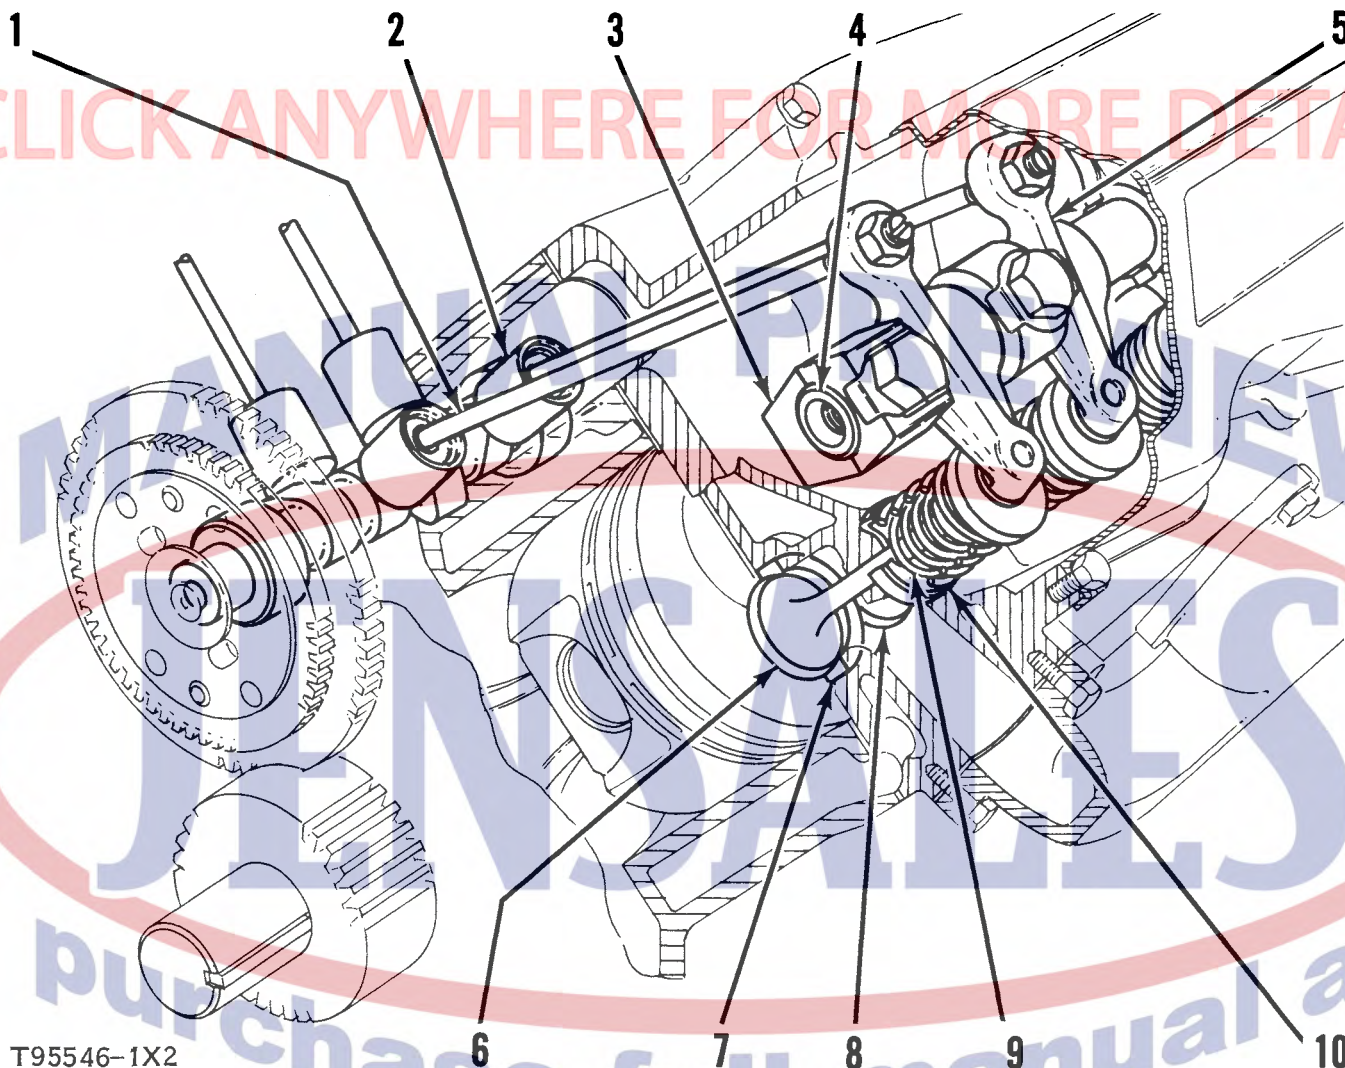

T95546-1X2

CYLINDER HEAD AND VALVES

1. Push rod. 2. Cam follower. 3. Guide support. 4. Rocker arm shaft. 5. Rocker arm. 6. Exhaust valve. 7. Valve seat insert. 8. Intake valve. 9. Inner valve spring. 10. Outer valve spring.

The cylinder heads can be used on either the right or left bank by installing a core plug in the unused water outlet in the end of the head. The air inlet manifold is cast into the head.


The camshaft actuates the valve mechanism. A drive gear is secured to the end of the camshaft and driven at one-half engine speed by the crankshaft gear. Five bearings in the cylinder block support the camshaft. A thrust pin, which locates in a groove in the camshaft adjacent to the rear support bearing, positions the shaft and absorbs any thrust.

Solid-type cam followers are located in the cylinder block and follow the cam lobe profile. The push rods transmit the lifting motion to the rocker arms.

The rocker arms mount on the rocker arm shaft. There is a single rocker shaft for each head. The shaft mounts in a guide support which spaces the rocker arms. The entire guide, shaft and rocker arm assemblies can be removed and replaced as a unit. The valve lash must be checked and adjusted, if necessary, after installing the unit.

Each cylinder has one intake and one exhaust valve. The exhaust valve uses a replaceable valve seat insert which is pressed into the cylinder head. The intake valve seat is machined in the head. The air inlet port design above the intake valve seat gives the proper swirl to the incoming air. The valve guide bores are cast integrally and machined in the cylinder head. There are two springs, an inner and outer, per valve. The springs are interchangeable between the intake and exhaust valves.

LUBRICATION SYSTEM

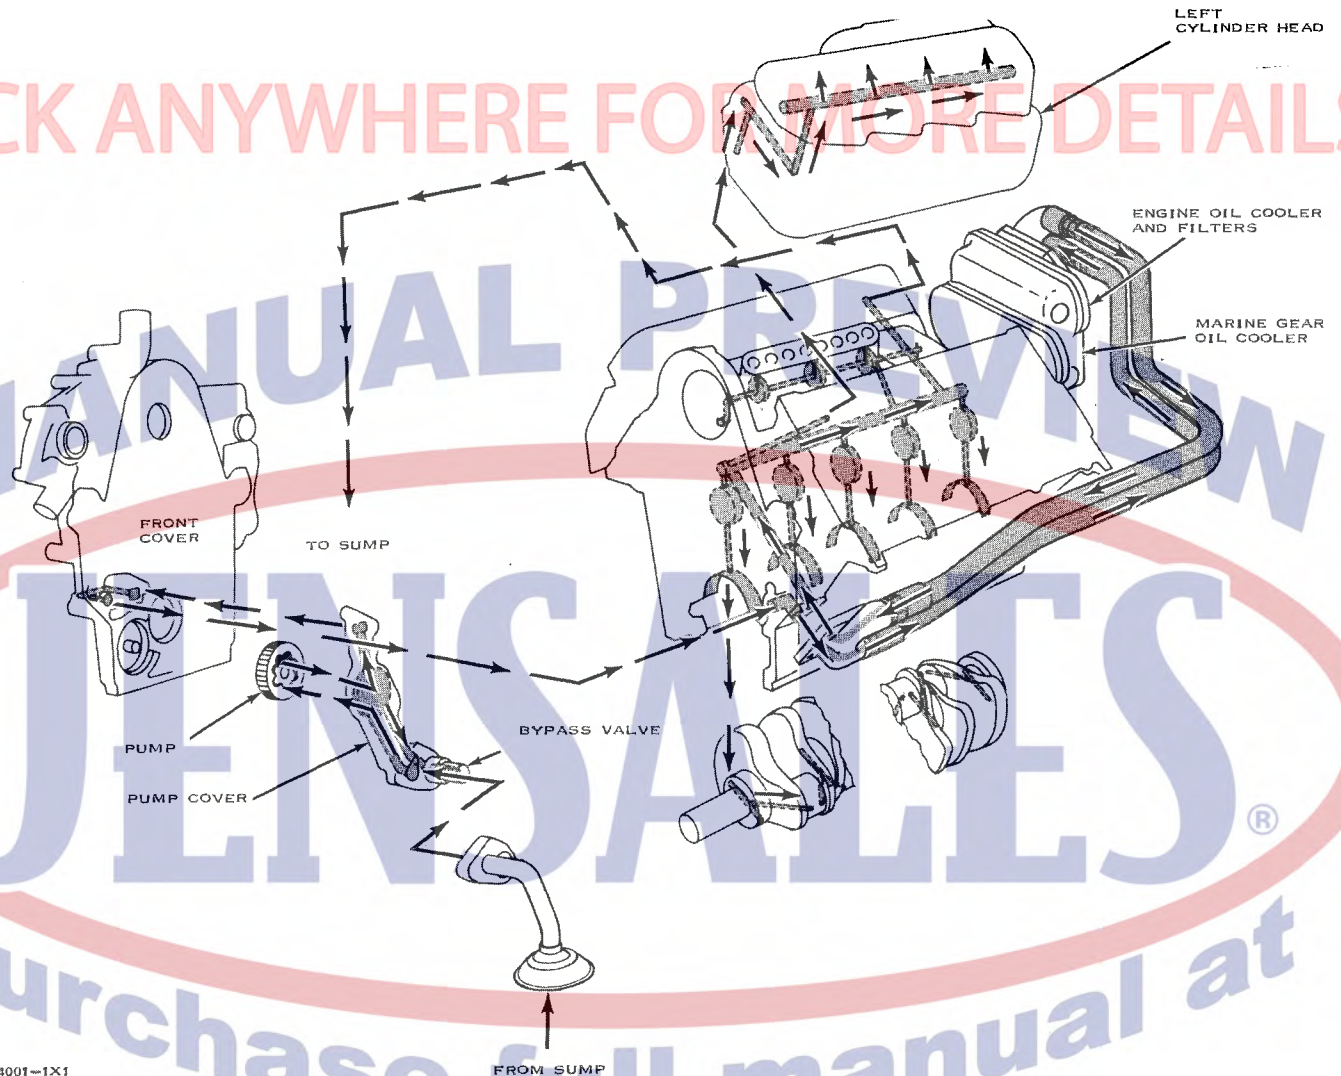

T94001-1X1

Oil moves through the screen and suction tube to the inlet passage in the oil pump cover. The oil pump cover bolts to the back of the engine front cover. The inlet passage directs oil to the pump.

The oil pump is a six lobe, rotor-type. The crankshaft gear drives the outer rotor which rotates in a bearing in the front cover. The inner rotor mounts on a stub shaft in the front cover and is driven by the outer rotor.

A bypass valve in the pump cover senses pump outlet pressure. The valve opens at approximately 75 psi (5.3 kg/cm²) and bypasses oil back to the inlet side of the pump.

Oil from the pump flows through a passage in the front cover to the cylinder block and on to the oil cooler base. The base mounts on the top rear of the engine. A valve in the base bypasses oil around the cooler when the oil is cold or the oil cooler restriction is higher than the rest of the system. A 14 to 22 psi (0.9 to 1.6 kg/cm²) pressure differential opens the valve.

Oil from the cooler flows to two spin-on, throw-away filters mounted on the oil cooler base. Each filter contains a bypass valve. If the filters become clogged, oil is bypassed around them. An 18 to 20 psi (1.3 to 1.4 kg/cm²) pressure differential opens the valves.