



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Caterpillar

Service Manual

35 Crawler

S/n 5C1 & Up

Service Manual

JENSALES.COM
or Call 800-443-0625

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
CATERPILLAR OR IT'S SUCCESSORS. CATERPILLAR AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CT-S-35

INDEX

A	Page
Air cleaner, care of.....	20

B	
Bevel gear, sectional view.....	36
Brakes, use of.....	16
Brake adjustment, steering clutch.....	29
Brake mechanism, sectional view.....	33

C	
Carburetor adjustment.....	23
Chart, lubrication.....	8
Chart, dimension.....	7
Clearance adjustment of valves.....	28
Clutch, washing flywheel.....	20
Clutches, washing steering.....	21
Cold weather operation.....	19
Cooling system, care of.....	18
Crank case, washing.....	20
Clutch, adjustment of steering.....	28
Clutch, adjustment of flywheel.....	30

D	
Daily inspection.....	20
Diaphragm, fuel pump.....	22
Dimension chart.....	7
Do not lubricate track.....	17
Draining radiator.....	30
Driving tractor.....	16

E	
Engine, starting.....	15
Engine, sectional view.....	39
Engine, stopping at end of run.....	17

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

INDEX—Continued

F	Page
Final drive cases, washing.....	21
Final drive, sectional view.....	36
Firing order.....	6
Flywheel clutch adjustment.....	30
Flywheel clutch, washing.....	20
Flywheel clutch, sectional view.....	37
Front idler, sectional view.....	34
Fuel pump and strainers.....	22
Fuel pump diaphragm.....	22
G	
Gear shifting, directions for.....	16
General maintenance information.....	20
General operating instructions.....	15
Governor adjustment.....	22
H	
Heat control, manifold.....	17
Hill, operation down.....	18
I	
Inspection, daily.....	20
L	
Lubrication.....	9-14
Lubrication chart.....	8
M	
Maintenance information, general.....	20
Magneto.....	24
Manifold heat control.....	17
Mud or water, operation in deep.....	18
O	
Obstruction, operating over an.....	18
Operating instructions, general.....	15
Operation, cold weather.....	19
Operation down hill.....	18
Operation in deep mud or water.....	18

JENSALES.COM
or Call 800-443-0625

INDEX—Continued

P		Page
Plug adjustment, spark.....		27
Preparing tractor for use.....		5
Pump adjustment, water.....		31
Pump, fuel and strainers.....		22
R		
Radiator, draining.....		30
S		
Shifting gears, directions for.....		16
Spark plug adjustment.....		27
Specifications		6
Starting engine.....		15
Steering		16
Steering clutch, sectional view.....		36
Steering clutch brake adjustment.....		29
Steering clutch brake, sectional view.....		33
Steering clutches, washing.....		21
Steering clutch control adjustment.....		28
Stopping engine at end of run.....		17
Stopping tractor.....		17
Strainers, fuel pump and.....		22
T		
Track adjustment.....		31
Track, sectional view.....		32
Track carrier roller, sectional view.....		32
Track, do not lubricate.....		17
Track roller frame, sectional views.....		35
Track roller, sectional view.....		33
Transmission, washing.....		21
Transmission, sectional view.....		37
V		
Valve clearance adjustment.....		28
W		
Water, operation in deep mud or.....		18
Water pump packing nut adjustment.....		31
Water pump and governor, sectional view.....		38

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

Specifications

ENGINE.....Bore, $4\frac{7}{8}$ " ; stroke, $6\frac{1}{2}$ " ; R.P.M., 850
under full load.

Firing order—1-2-4-3.

FUEL.....Gasoline. (In countries where gasoline is
unobtainable or where its price is unduly
high in comparison with other locally ob-
tainable fuels, distillate, kerosene, alcohol,
etc., can be used. Information regarding
the use of such fuels furnished by dealer
on request).

Fuel tank of 50 U. S. Standard gallons
capacity.

TRACK.....Width of standard track shoe, 14".
Special shoes may be obtained for special
purposes.

HORSEPOWER...Maximum drawbar, second speed, 37.
Maximum belt, 41.

SPEEDS.....1st1.7 M.P.H. 2nd2.5 M.P.H.
3rd3.2 M.P.H. 4th4.6 M.P.H.
Reverse....1.9 M.P.H.

DIMENSIONS.....Shown on page 7.

NET WEIGHT.....(Approximate)—12,220 lbs.

SHIPPING WEIGHT...(Approximate)—12,280 lbs.

JENSALES.COM
or Call **800-443-0625**

CLICK ANYWHERE FOR MORE DETAILS