



Caterpillar
Operator's Manual
60 Crawler

S/N 101A1 & PA1 & Up

JENSALES.COM

or Call 800-443-0625



THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
CATERPILLAR OR IT'S SUCCESSORS. CATERPILLAR AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CT-O-60 101A

Operator's Manual

Operator's Instruction Book

CLICK ANYWHERE FOR MORE DETAILS

for

CATERPILLAR

Reg. U. S. Pat. Off.

SIXTY

TRACTOR

Effective with

Tractor No.

101A - up

PA1 - up

JENSALES.COM

or Call 800-443-0625

CATERPILLAR TRACTOR CO.

PEORIA, ILLINOIS, U.S.A.

Track-Type Tractors . . . Road Machinery

. . . Diesel Engines

THERE IS A "CATERPILLAR" DEALER NEAR YOU

CLICK ANYWHERE FOR MORE DETAILS

Index

CLICK ANYWHERE FOR MORE DETAILS

	Page
Air Cleaner, Care of the.....	25
Carburetor Adjustment	27
Cooling System, Care of the.....	26
Crankcase, Washing	35
Daily Care	22
Do Not Lubricate the Tracks.....	7
Driving the Tractor.....	20
Final Drive Cases, Washing.....	35
Final Drive Pinion Packing Gland Adjustment.....	34
Flywheel Clutch Adjustment.....	31
Flywheel Clutch, Washing.....	35
Fuels	18
Fuel System, Care of the.....	26
Lubricating Instructions	6
Magneto	27
Maintenance Instructions.....	25
Manifold Heat Control.....	19

CLICK ANYWHERE FOR MORE DETAILS

INDEX—Continued

	Page
Operating in Cold Weather.....	22
Operating in Deep Mud or Water.....	21
Operating Instructions.....	18
Operating Over an Obstruction.....	21
Packing Nut Adjustment.....	33
Preparing the Tractor for Use.....	18
Spark Plug Adjustment.....	30
Sprocket Hub Packing Gland Adjustment.....	33
Starting the Engine.....	18
Stationary Drive Attachment.....	36
Steering Clutch Brake Adjustment.....	32
Steering Clutch Control Adjustment.....	31
Steering Clutches, Washing.....	35
Steering the Tractor.....	21
Stopping the Engine.....	22
Stopping the Tractor.....	21
Storage.....	24
Track and Front Idler Adjustment.....	32
Transmission, Washing the.....	36
Valve Clearance Adjustment.....	30

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Transmission Oil: A pure mineral transmission oil, that will flow freely and will not channel at existing operating temperatures, should be used. For temperatures above 32°F., (0°C.) use either S.A.E. 90 or S.A.E. 110 oil. In extremely cold weather an oil of lower viscosity than S.A.E. 90 may be required, and if it cannot be obtained the available oil should be diluted with kerosene.

Track Rollers, Track Carrier Rollers and Idlers with Bronze Bushings: For temperatures above 32°F., (0°C.) use S.A.E. 90 or S.A.E. 110 transmission lubricant. In hot summer weather it will be necessary to use transmission lubricants of higher viscosities, namely: S.A.E. 160 or S.A.E. 250. In extremely cold weather, crankcase lubricating oil may be used in these assemblies.

DO NOT LUBRICATE THE TRACKS

Under no circumstances should the tracks be lubricated. The stiffness noted between the links of a new machine is not caused by a lack of clearance between the track pins and bushings, and it will disappear as the tracks wear in.

All time intervals given in the lubrication chart are for hours of machine operation.



purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS



Chart Reference No. 1—WASHING THE BREATHER



Chart Reference No. 2—WASHING THE AIR CLEANER