



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Caterpillar

Operator's Manual

D4, D4D, D5, D6 & D6C

Crawler

S/n 73A1, 76A1, 83A1, 96A1, 22C1,
47H1, 52H1, 83H1, 84H1, 56J1, 58J1,
59J1-1280, 69J1-2538, 83J1-2176,
10K1-7952, 7R1-507, 24U1-367,

69U1-315 & 74U1-382
or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
CATERPILLAR OR IT'S SUCCESSORS. CATERPILLAR AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CT-O-D4D 22C1+

Operator's Manual

CLICK ANYWHERE FOR MORE DETAILS

TABLE OF CONTENTS

Safety	7
Symbols	4
Tractors	9
Operator's Compartment	12
Controls	14
Before Starting	18
Starting the Engine	
Direct Electric Starting	21
Gasoline Engine (In-seat) Starting	25
Gasoline Engine (Manual) Starting	28
After Starting	31
Moving the Tractor	32
Parking the Tractor	36
Stopping the Engine	37
Operating Adjustments	38
Operating Techniques	51
Shipping Hints	59

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

D4 TRACTOR

BEVEL GEAR COMPARTMENT
OIL LEVEL GAUGE

TRANSMISSION AND TORQUE
CONVERTER OIL LEVEL GAUGE

MANUAL PREVIEW

JENSALES®

purchase full manual at

BRAKE LOCK

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Steering on Steep Downgrade



Gradual RIGHT turn — release left steering clutch.



Sharp RIGHT turn — release right steering clutch and apply right brake.



Gradual LEFT turn — release right steering clutch.



Sharp LEFT turn — release left steering clutch and apply left brake.




WARNING

When load is pushing tractor, put gear selector in FIRST speed before starting downhill.



WARNING


DO NOT RELEASE CLUTCH OR SHIFT TRANSMISSION WHILE MOVING.

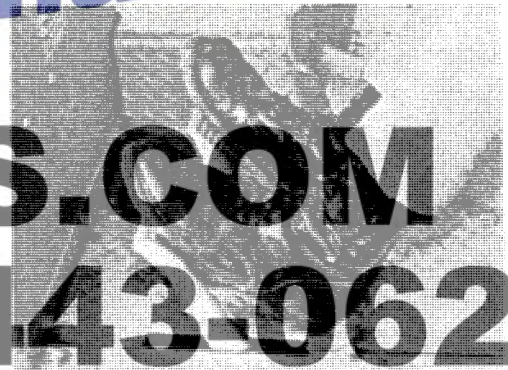

If engine starts to overspeed, depress both brake pedals.

REMOVING TOOL BAR BEAM ASSEMBLY

CLICK ANYWHERE FOR MORE DETAILS

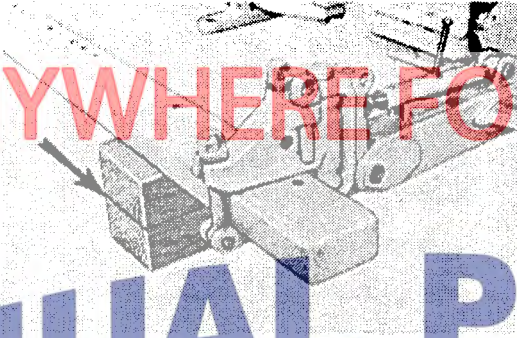

Put 18 inch (45 cm) blocks
under beam assembly

MANUAL PREVIEW



Remove adjusting screw
cotter and pin (one on
each side)



Remove draft member
cotter and pin (one on
each side)

purchase full manual at

JENSALES.COM

or Call **800-443-0625**



Drive tractor away


CLICK ANYWHERE FOR MORE DETAILS

SHIPPING HINTS

CLICK ANYWHERE FOR MORE DETAILS



Always block trailer or rail car wheels before loading tractor.

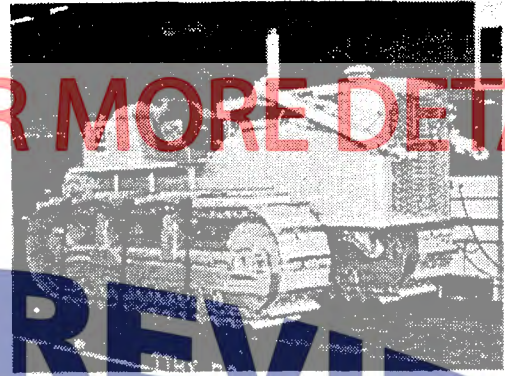


Install tie-downs at several locations.

CAUTION

Remove ice, snow or other slippery material from shipping vehicle and loading dock.



Apply brake lock and place transmission in NEUTRAL.

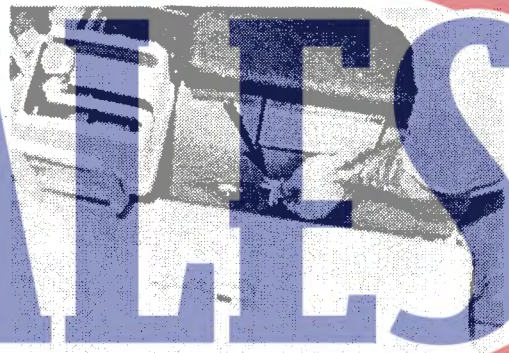

Shut off engine and remove disconnect switch key.


purchase full manual at

JENSALLES.COM

or Call **800-443-0625**



Cover engine exhaust opening to prevent turbocharger wind-milling in transit.

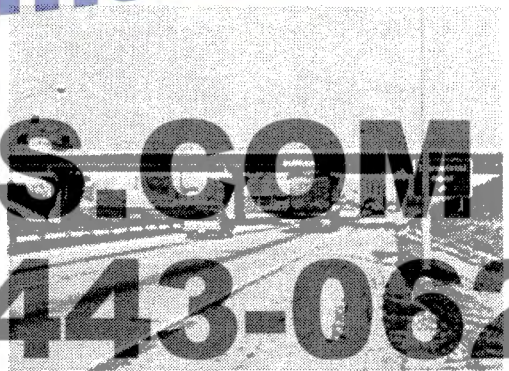

Check travel route for weight limits and overpass clearances. Check state and local laws governing weight, width and length of load.

CLICK ANYWHERE FOR MORE DETAILS