



Caterpillar

Parts Manual

D5 Crawler

S/n 95J421 & Up

96J5262 & Up

JENSALES.COM

or Call 800-443-0625

JENSALES

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF CATERPILLAR OR IT'S SUCCESSORS. CATERPILLAR AND IT'S SUCCESSORS ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS, AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CT-P-D5 95J421

Parts Manual

CONTENTS

ALPHABETICAL INDEX OF GROUPS...	3
CONVERSION EQUIVALENT TABLES	INSIDE BACK COVER
ORDERING PARTS.....	2
QUICK REFERENCE CHART	INSIDE FRONT COVER
USING THE PARTS BOOK.....	2



PARTS BOOK

D5

**TRACTOR
POWER SHIFT**

SERIAL NUMBER

95J421-UP (VEHICLE)

96J5262-UP (VEHICLE)

3N30872-UP (ENGINE)

REVISION PUBLISHED AUGUST 1977
CATERPILLAR TRACTOR CO.
PUBLICATIONS DIV.—SERVICE G.O.
PEORIA, ILL. U.S.A.
COMPILED BY SYLVIA GAY

QUICK REFERENCE GUIDE TO MAJOR SECTIONS

BASIC ENGINE

LUBRICATION SYSTEM

COOLING SYSTEM

INTAKE AND
EXHAUST SYSTEM

FUEL SYSTEM
AND GOVERNOR

STARTING AND
ELECTRICAL SYSTEM

POWER TRAIN—POWER
TRANSMISSION UNIT

STEERING CLUTCHES
AND BRAKES

CHASSIS AND
UNDERCARRIAGE

CAB, GAUGES &
ACCESSORIES

SERVICE EQUIPMENT
AND SUPPLIES

CLICK ANYWHERE FOR MORE DETAILS

INDEX

Name	Page
Adapter — Fuel Pump & Governor Support to Cylinder Block	50
Adapter — Heat Indicator	159
Air Cleaner	39
Air Cleaner Extension Pipe	40
Air Cleaner Extension Inlet	40
Air Conditioner	196
Air Conditioner Arrangement	192
Air Conditioner Mounting Modification	200
Air Filter Service Indicator	204
Air Lines	41
Alternator — 24 Volt, 19 Ampere	74
Alternator — 24 Volt, 50 Ampere	72
Alternator Arrangement — 24 Volt, 50 Ampere	70
Alternator Mounting Bracket	71
Alternator Wiring — 24 Volt, 19 Ampere	71
Alternator Wiring — 24 Volt, 50 Ampere	70
Ammeter — 19 Ampere	56

B


Back-Up Warning	80P
Baffles—Radiator	32 & 33
Band—Cylinder Liner	6
Battery Box	187
Battery & Wiring—24 Volt	56
Basic Engine Arrangement	4
Bearing Caps—Crankshaft Main	7
Bearings—Connecting Rods	11
Bearings—Crankshaft	8
Bearings—Crankshaft Replacement	9
Bell-Oil Pan	25

Name	Page
Bellcrank — Governor Control	42
Bevel Gear and Shaft	110
Blower Fan	36
Brace — Muffler & Air Cleaner Extension	40
Brakes	102
Brake Band and Lining	101
Brake Pedal Return Spring	103 & 105
Breather — Engine Crankcase Oil	28
Brush Guard	133 & 134

C

Cab Heater	188
Cab Liner	182
Cab Wiring	180
Cables — Battery, Starting Motor and Disconnect Switch	57
Camshaft	11
Cap — Radiator	32
Cap — Radiator Pressure Relief	32
Circuit Breaker — 50 Ampere	56
Circuit Breaker — 60 Ampere	70
Compressor — Refrigerant	194
Connecting Rod and Piston	11
Console — Return Air — Air Conditioner	199
Control — Heater & Air Director — Air Conditioner	199
Control — Governor	42
Control — Governor Torque	44 & 49H
Control Console — Air Conditioner	199
Core — Radiator	32
Core — Torque Converter Oil Cooler	37
Cover — Cylinder Head	13
Cover — Flywheel Housing	100
Cover — Fuel Pump Housing	45
Cover — Timing Gear Housing	16

CLICK ANYWHERE FOR MORE DETAILS

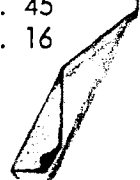

Name	Page
Cover — Valve Mechanism	15
Covers — Cylinder Block	6
Crankcase Guard	125 through 132
Crankshaft	8
Crankshaft Seals	10
Cylinder Block	7
Cylinder Block Covers	6
Cylinder Head	13
Cylinder Head Fastener	14

D

Damper	19
Dash	160
Decelerator Control	43
Defroster Duct — Air Conditioner	195
Dipstick — Engine Oil	23
Door — Condenser Service	195
Drawbar — Fixed	137
Drawbar — Swinging	137

E

Elbow — Radiator Top Tank Hose to Cylinder Head	34
Element — Oil Filter — Engine	26
Element — Primary & Secondary — Air Cleaner	39
Element — Transmission Filter	99
Engine Enclosure	158
Engine Gauges	159
Engine Mounting Hardware	14
Engine Oil Pressure Gauge	159
Equalizer Spring	146
Exhaust Manifold	37
Exhaust Manifold Fastener	38
Exhaust Manifold Shield	38
Exhaust Pipe — Manifold	38
Exhaust Pipe — Muffler	39

F

Fan — Defrosting	191
Fan Drive	20
Fan Drive Bracket	20
Fastener — Exhaust Manifold	38
Fastener — Front Housing	17
Fastener — Oil Pan	22

Name	Page
Fenders	138
Filter — Air Conditioner	196
Filter — Fuel	51
Filter — Return Air Console	199
Filter — Transmission	99
Final Drive	94
Final Drive Guard	93
Flexible Drive Coupling	100
Flood Lamp	75
Flywheel	21
Flywheel Housing	21
Frame and Case	117
Front Housing	16
Front Housing Cover	17
Front Idler	142 & 144
Front Pull Hook	144
Fuel Filter	51
Fuel Filter Base and Support	51
Fuel Injection Lines	50
Fuel Lines	52
Fuel Pressure Indicator	159
Fuel Priming Pump	51
Fuel Tank	54
Fumes Disposal — Engine — Crankcase Breather	29
Fuse — Air Conditioner Mounting Modifications	201
Fuse — Electric Horn	162A
Fuses — Lighting — 7.5 Ampere	77 through 80

G

Gasket — Air Cleaner to Air Pipe	39
Gasket — Fuel Priming Pump to Fuel Filter Base	51
Gasket — Cylinder Head to Block	12
Gasket — Valve Cover to Cylinder Head	15
Gasket — Water Lines to Water Lines Pipe	30
Gasket — Water Lines to Water Pump	29
Gasket Kits	205
Gauge — Engine Oil Pressure	159
Gauge — Transmission	163
Gauge — Water Pressure	163
Gear — Camshaft	18
Gear — Crankshaft	18
Gear — Fuel Pump Drive	18

Name	Page
Gear—Fuel Pump Idler	18
Gear—Oil Pump Drive	23
Gear—Oil Pump Idler	18
Gears—Planetary Transmission	86 & 87
Glow Plug	75
Governor Control	42
Governor and Fuel Injection Pump	44 & 49B
Governor and Fuel Injection Pump Support Bracket	50
Governor Spring	49B
Grease Gun	205
Grommet—Battery Box	187
Guard—Blower Fan	36
Guard—Brush	133 & 134
Guard—Crankcase	125 through 132
Guard—Final Drive	93
Guard—Precleaner	136
Guard—Radiator	135
Guard—Recoil Mechanism	152A
Guard—Track Guiding	151
Guard—Track Roller	151
Guard—Track Roller Frame	152
Guard—Track Roller Dirt	153

H

Hand Tool	206
Hardware — Cylinder Head	13
Hardware — Engine Mounting	14
Hardware — Exhaust Manifold	38
Harness — Air Conditioner to Control Console	199
Harness — Main	58 & 59
Heat Indicator Adapter	159
Heater — Hot Water	190
Hinged Plate — Heavy Duty	136
Hinged Plate — Radiator Grill	135
Hood	160
Hook — Front Pull	144
Horn — Electric — Forward Warning	162A
Hose — Radiator Inlet and Outlet	32
Hoses — Air Conditioner to Compressor	201 through 203
Hoses — Air Conditioner to Heater Lines	196
Hoses — Heater to Torque Converter Oil Cooler	188
Hour Meter	162
Housing and Regulator	34

Name	Page
Hydraulic Tank Cap Protection Cover	204
Indicator — Air Filter Service	204
Indicator — Converter Temperature — Transmission Gauge	163
Indicator — Fuel Pressure	159
Indicator — Water Temperature	159
Instrument Panel Protection Cover	164

J

Jacket Water Heater	34
---------------------------	----

K

Key — Disconnect Switch	58
Kit — Refrigerant Compressor Repair	193
Kit — Water Pump Rebuild	31
Kits — Alternator Repair — 24 Volt, 19 Ampere	74
Kits — Alternator Repair — 24 Volt, 50 Ampere	72
Kits — Gasket	205
Kits — Solenoid Switch Repair	59
Kits — Starting Motor Repair	62 through 68

L

Lamp — Flood	75
Lever — Steering Clutch Hydraulic Control	107 & 109
Lever — Transmission Selector	98
Lifting Eye	16
Lighting — 2 Lamp	79
Lighting — 4 Lamp	76
Liners — Cylinder	6
Lines — Fuel	52
Lines — Fuel Bleed	50
Linkage — Governor Control	42

M

Magnetic Screen	116
Manifold — Exhaust	37
Motor — Air Conditioner	196 & 198
Mounting — ROPS	120
Muffler	39
Muffler Extension Pipe	40

N

Nozzle — Fuel 50

O

Oil Cooler — Torque Converter 37

Oil Filler — Engine 27

Oil Filler Cap Protection Cover —

Engine 28

Oil Filter — Engine 26

Oil Filter Base 26

Oil Level Gauge 23

Oil Lines 25

Oil Pan 22

Oil Pan Fastener 22

Oil Pump — Engine 23

P

Padlock and Key — Fuel Tank Cap ... 54

Padlock and Key — Hydraulic Tank

Cap Protection Cover 204

Padlock and Key — Instrument Panel..164

Padlock and Key — Oil Filler Cap

Protection Cover 28

Padlock and Key — Oil Level Gauge..164

Parking Brake Pawl103 & 105

Pedal — Brake102 & 104

Piston Ring 11

Plug — Main Bearing Holes 25

Plug — To Cylinder Block Oil Manifold 70

Plug — Transmission Oil Pump 99

Plugs — Final Drive Oil Drain95 & 97

Plunger — Bevel Gear

Compartment112 & 114

Power Train Arrangement 81

Precleaner — Air Cleaner 39

Precleaner Guard136

Precombustion Chamber 12

Prescreener 41

Protection Cover — Fuel Tank Cap ... 54

Protection Cover — Oil Filler Cap 28

Protection Cover — Oil Level Gauge ..164

Protection Cover — Instrument Panel ..164

Protective Screen180

Pulley — Alternator Drive70 & 71

Pulley — Fan Drive 19

Pump — Engine Oil 23

Pump — Fuel Priming 51

Pump — Transmission 99

Pump — Water 31

R

Radiator 32

Radiator Grill Hinged Plate135

Radiator Guard135

Radiator Guard — Hinged 35

Refrigerant Compressor194

Refrigerant Compressor Arrangement..193

Regulator — Water Temperature 34

Roll-over Protective Structure —

Enclosed169

Roll-over Protective Structure —

Open168

S

Sandblast Grid 35

Seal — Adapter to Cylinder Block 50

Seal — Flywheel Housing Cover100

Seal — Service Meter to Accessory

Drive Housing 53

Seal — Transmission Pump 99

Seals — Cylinder Liner 6

Seals — Filter — Air Conditioner196

Seat — Adjustable186

Seat Cushion187

Service Meter 53

Sound Suppression Cover Group —

Control Area165 through 167

Specifications208

Spring — Oil Filter By-Pass Valve 26

Starting Motor 60

Steering Clutch110

Steering Clutch Driving Drum110

Steering Clutch Hydraulic Control106

Steering Clutch Hydraulic

Mechanism Booster111

Strainer — Fuel Tank 54

Suction Fan 36

Support — Front 20

Sweep165

Switch — Battery Disconnect58 & 181

Switch — Cab Heater190

Switch — Electric Horn162A

Switch — Fan Speed — Air

Conditioner199

Switch — Heat-Start 56

Switch — Hour Meter162

Switch — Light 56

Name	Page
Switch — Solenoid — Starting Motor	59 & 69
Switches — Air Conditioner Mounting Modifications	201

T

Thermostat — Air Conditioner	199
Thermostat — Water Temperature	34
Timing Gear Housing	16
Timing Gear Housing Cover	16
Timing Gears — Front	18
Torque Control — Governor44 & 49H	
Torque Converter	83
Torque Converter Oil Cooler	37
Track Adjusting — Hydraulic	145
Track Carrier Roller	156
Track Guiding Guard	151
Track Link	157
Track Master Pin Replacement	157
Track Roller — Double Flange	155
Track Roller — Single Flange	154
Track Roller Dirt Guard	153
Track Roller Frame	149
Track Roller Frame Guard	152
Track Roller Guard	151
Track Shoes	157
Transfer Gear	92
Transfers	207
Transmission	88
Transmission — Planetary	86
Transmission — Powershift	82
Transmission Control Linkage	98
Transmission Filter	99
Transmission Hydraulic Control	89
Transmission Pump	99
Transmission and Steering Clutch Lubrication System	112
Trunnion	18
Tube — Flexible Drive Coupling to Main Frame	100
Tube — Fuel Filter to Governor Housing	50
Tube — Oil Cooler to Transmission	113 & 115

Name	Page
Tube — Oil Inlet & Outlet — Oil Filter Base to Block	25
Tube — Torque Converter to Oil Cooler	113 & 115
Tube — Transmission Control Valve to Steering Clutch Orifice and Check Valve	112 & 114
Tubes — Bevel Gear Case to Filter and Screen	112 & 114
Tubes — Fuel Tank to Primary Fuel Filter	52

V

Valve — Filter By-Pass and Steering Clutch Check	93
Valve — Fuel Injection	50
Valve — Intake and Exhaust Cylinder Head	12
Valve — Oil Filter By-pass	26
Valve — Pressure and Selector — Transmission Hydraulic Control	90
Valve — Relief — Transmission	90
Valve — Rocker Arm and Lifters	15
Valve Mechanism	15
Valve Mechanism Cover	15

W

Water Lines	29
Water Lines — Elbow	30
Water Lines — Pipe	30
Water Pump	31
Windshield Wiper	203
Wire-Cab Heater	188
Wiring — Cab	180
Wiring Diagram	55

Y

Yoke — Steering Clutch Hydraulic Control	107 & 109
--	-----------

INDEX ALPHABÉTIQUE

Moteur de base (Page 4)

Désignation	Page
Arbre à cames	11
Bielles et pistons	11
Bloc-cylindres	6
Bloc-cylindres (couvercles)	6
Bride de levage	16
Carter avant	16
Carter avant (boulonnerie)	17
Carter avant (couvercle)	17
Carter de volant	21
Coussinets et butée de vilebrequin (rechange)	9
Culasse	12
Culasse (boulonnerie)	14
Culasse (couvercle)	13
Damper	19
Engrenages de distribution	18
Ensemble moteur de base	4
Joint de vilebrequin	10
Pièces de fixation du moteur	14
Poulie	19
Soupapes (couvercle)	15
Soupapes et train de commande	15
Support	20
Tourillon	18
Ventilateur (entraînement)	20
Vilebrequin	8
Volant	21

Circuit de graissage (Page 22)

Bouchon de tubulure de remplissage d'huile	28
Canalisations de graissage	25
Carter inférieur	22
Filtre à huile	26
Fixation du carter inférieur	22
Jauge de niveau d'huile	23
Pompe à engrenages	24
Pompe à huile	23
Tubulure de remplissage d'huile	27

Circuit de refroidissement (Page 28)

Grille de protection contre les abrasifs	35
--	----

Désignation Page

Pompe à eau	31
Protège-radiateur (charnière)	35
Radiateur	32
Réchauffeur d'eau de cylindres	34
Refroidisseur d'huile du convertisseur de couple	37
Reniflard	28
Thermostat et boîtier	34
Tuyauterie d'eau	29
Tuyauterie d'eau (coude)	30
Tuyauterie d'eau (tuyau)	30
Tuyauterie d'évacuation de vapeurs	29
Ventilateur aspirant	36
Ventilateur soufflant et protecteur	36

Admission et échappement (Page 37)

Canalisations d'air	41
Collecteur d'échappement	37
Collecteur d'échappement (boulonnerie)	38
Filtre à air	39
Filtre à air (rallonge de prise d'air)	40
Silencieux d'échappement	39
Tamis de préfiltre à air	41
Tuyau d'échappement	38

Alimentation en carburant et régulateur (Page 42)

Bouchon de réservoir de carburant	54
Canalisations de carburant	52
Compteur d'entretien	53
Décélérateur (commande)	43
Filtre à carburant	51
Pompe d'amorçage	51
Régulateur (timonerie extérieure)	42
Régulateur et pompe d'injection	44
Réservoir de carburant	54
Tuyauterie d'injection de carburant	50

**Démarrage et
installation électrique
(Page 55)**

Désignation	Page
Alternateur	70
Batterie et câblage	56
Bougie de préchauffage	75
Démarreur	60
Éclairage	76

**Train de
transmission
(Page 81)**

Accouplement flexible (entraînement)	100
Convertisseur de couple	83
Engrenages de transfert	92
Filtre à huile de transmission	99
Mécanisme de transmission	81
Pompe de transmission	99
Protège-réducteurs latéraux	93
Réducteurs latéraux	94
Transmission (timonerie)	98
Transmission à trains planétaires	86
Transmission Power Shift	82
Vitesses (commande hydraulique)	89

**Embrayages de
direction et freins
(Page 101)**

Embrayages de direction	110
Embrayages de direction (servo-hydraulique)	106
Freins	102
Transmission et embrayages de direction (circuit de graissage)	112

**Bâti et train
de roulement
(Page 117)**

Barre d'attelage	137
Bâti AR et châssis	117
Chaînes de roulement	157
Châssis porteur	149
Châssis porteur (tôlerie de protection)	152
Crochet avant	144
Galets inférieurs	154
Galets supérieurs	156
Garde-boue	138
Grille de radiateur renforcée sur charnières	136

Désignation **Page**

Grille de radiateur sur charnières	135
Grilles pour compartiment moteur	158
Groupe de pose pour bâti de sécurité	120
Guide-protecteur de chaîne	151
Préfiltre (protecteur)	136
Protège-carter moteur	125
Protège-galets	151
Protège-galets renforcé	153
Protège-radiateur	135
Ressort transversal de suspension	146
Roue AV	142
Tendeurs de chaîne hydrauliques	145
Tôle pare-broussailles	133

**Cabine, instruments de
contrôle et accessoires
(Page 159)**

Avertisseur sonore électrique (marche AV)	162A
Barre pare-branches	165
Bâti de sécurité (clos)	169
Bâti de sécurité (ouvert)	168
Bouchon de réservoir hydraulique	204
Capot	160
Chauffage de cabine (au plafond)	188
Climatiseur	192
Coussin de siège et coffre à batterie	187
Couvercle	165
Dégivreur	191
Dispositifs anti-vandalisme	164
Essuie-glace	203
Grille AR	180
Horomètre électrique	162
Indicateur de colmatage du filtre à air	204
Instruments de contrôle du moteur	159
Manomètre d'eau	163
Manomètre du circuit de transmission	163
Porte de visite du condenseur	195
Siège réglable	186
Tablier	160

**Divers
(Page 205)**

Caractéristiques	211
Instructions sur décalcomanies	207
Jeux de joints	205
Outillage	206

INDICE

Motor básico (Página 4)	
Nombre	Página
Amortiguador de vibraciones	19
Arbol de levas.	11
Bielas y pistones	11
Bloque de motor.	6
Caja delantera.	16
Caja del volante.	21
Cáncamo	16
Cigüeñal	8
Cojinete de bancada y plancha de empuje de repuesto	9
Conjunto de motor básico.	4
Culata	12
Engranajes de sincronización	18
Herrajes de la caja delantera.	17
Herrajes de la culata.	14
Herrajes para el montaje del motor.	14
Mando del ventilador	20
Mecanismo de las válvulas	15
Muñón	18
Polea.	19
Sello del cigüeñal.	10
Soporte.	20
Tapa de la caja delantera.	17
Tapa de la culata.	13
Tapa del bloque de motor.	6
Tapa del mecanismo de las válvulas.	15
Volante.	21

Sistema de lubricación (Página 22)

Bomba de engranajes	24
Bomba del aceite.	23
Cárter	22
Filtro del aceite.	26
Herrajes del cárter	22
Tapa del tubo de llenado del aceite.	28
Tuberías del aceite.	25
Tubo de llenado del aceite.	27
Varilla indicadora de nivel del aceite	23

Sistema de enfriamiento (Página 28)

Bomba de agua	31
-------------------------	----

Nombre	Página
Caja y regulador	34
Calentador del agua de las camisas	34
Codo de tuberías de agua	30
Enfriador del aceite del convertidor de par	37
Protección engoznada del radiador	35
Radiador	32
Reja contra aspersión de arena.	35
Respiradero	28 y 29
Tuberías de agua	29
Tuberías de agua — tubo.	30
Ventilador de succión.	36
Ventilador insuflador y protección.	36

Sistema de admisión y escape (Página 37)

Antefiltro especial.	41
Extensión para la admisión del filtro de aire	40
Filtro de aire	39
Herrajes del múltiple de escape.	38
Múltiple de escape.	37
Silenciador.	39
Tuberías de aire	41
Tubo de escape.	38

Sistema del combustible y regulador (Página 42)

Bomba de cebado del combustible	51
Control de decelerador.	43
Control del regulador.	42
Filtro del combustible	51
Medidor de servicio	53
Regulador y bombas de inyección del combustible.	44
Tanque del combustible	54
Tapa del tanque del combustible	54
Tuberías de inyección del combustible.	50
Tuberías del combustible	52

Sistema de arranque eléctrico (Página 55)

Alternador.	70
---------------------	----

Nombre	Página
Batería y alambrado.	56
Bujías incandescentes.	75
Motor de arranque.	60
Sistema de luces	76

Tren de potencia — unidad de transmisión de fuerza (Página 81)

Bomba de la transmisión.	99
Control hidráulico de la transmisión.	89
Convertidor de par.	83
Engranajes de transferencia.	92
Filtro del aceite de la transmisión.	99
Mando de acoplamiento flexible.	100
Mando final.	94
Protección del mando final.	93
Servotransmisión.	82
Transmisión planetaria.	86
Tren de potencia.	81
Varillaje de control de la transmisión.	98

Embragues de dirección y frenos (Página 101)

Control hidráulico de los embragues de dirección.	106
Embragues de dirección.	110
Frenos.	102
Sistema de lubricación de la transmisión y de los embragues de dirección.	112

Chasis y tren de rodaje (Página 117)

Ajustador de carril hidráulico.	145
Barra de tiro.	137
Bastidor de los rodillos inferiores.	149
Bastidor y caja.	117
Carril.	157
Cubierta del motor.	158
Gancho delantero.	144
Montaje de la estructura protectora contra vuelcos.	120
Protección contra maleza.	133
Protección contra tierra de los rodillos.	153
Protección del antefiltro.	136
Protección del bastidor de los rodillos.	152

Nombre	Página
Protección del cárter.	125
Protección de los rodillos inferiores.	151
Protección del radiador.	135
Protección engoznada de reja del radiador.	135
Protección engoznada para trabajo pesado del radiador.	136
Protección guía de carril.	151
Resorte compensador.	146
Rodillos inferiores.	154
Rodillos superiores.	156
Rueda guía.	142
Tapabarros.	138

Cabina, instrumentos y accesorios (Página 159)

Acondicionador de aire.	192
Asiento ajustable.	186
Bocina eléctrica.	162A
Calentador montado en el techo de la cabina.	188
Capota y tablero.	160
Cojín del asiento y caja de la batería.	187
Estructura protectora contra vuelcos abierta.	168
Estructura protectora contra vuelcos cubierta.	169
Indicador de servicio del filtro de aire.	204
Instrumentos de la tornamesa.	163
Instrumentos del motor.	159
Limpiaparabrisas.	203
Manómetro del agua.	163
Medidor de servicio eléctrico.	162
Protección contra vandalismo.	164
Protección sobre el motor.	165
Puerta de servicio para el condensador.	195
Rejilla.	180
Tapa.	165
Tapa del tanque hidráulico.	204
Ventilador descongelador.	191

Materiales diversos (Página 205)

Calcomanías.	207
Especificaciones.	212
Herramientas.	206
Juegos de empaquetaduras.	205

ÍNDICE

Partes da máquina relativas ao motor (Página 4)

Designação	Página
Amortecedor da árvore de manivelas.	19
Arranjo básico do motor.	4
Árvore de comando das válvulas.	11
Árvore de manivelas.	8
Biela e pistão	20
Bloco do motor.	6
Cabeçote	12
Caixa das engrenagens de distribuição	17
Caixa do volante	21
Comando do ventilador	20
Engrenagens de distribuição.	18
Mancal principal e de encosto.	9
Mecanismo das válvulas.	15
Munhão.	18
Olhais de levantamento.	16
Peças diversas para a caixa das engrenagens de distribuição	17
Peças diversas para montagem do cabeçote.	14
Peças diversas para montagem do motor	14
Polia da árvore de manivelas	19
Suporte.	20
Tampa do bloco do motor.	6
Tampa do cabeçote	13
Tampa superior do motor.	15
Vedador da árvore de manivelas.	10
Volante do motor	21

Sistema de lubrificação (Página 22)

Bocal de enchimento de óleo do motor.	27
Bomba das engrenagens	24
Bomba de óleo do motor	23
Cárter de óleo do motor	22
Filtro de óleo do motor	26

Designação	Página
Peças diversas para montagem do cárter.	22
Tubulações de óleo	25
Vareta de nível do óleo do motor	23

Sistema de arrefecimento (Página 28)

Aquecedor d'água do motor	34
Arrefecedor de óleo do conversor de torque.	37
Bomba d'água.	31
Canos d'água	30
Cotovelo d'água	30
Dobradiças do protetor do radiador	35
Grelha contra erosão	35
Radiador	32
Respiro	28
Tampa do bocal de enchimento de óleo	28
Termostato	34
Tubos d'água	29
Ventilação do cárter.	29
Ventilador insuflador e protetor	36
Ventilador succionador.	36

Sistema de admissão e escape (Página 37)

Coletor de escape	37
Extensão da tomada de ar.	40
Peças diversas para montagem do coletor de escape.	38
Pré-purificador de ar	41
Purificador de ar	39
Silenciador.	39
Tubo de escape.	38
Tubos de ar	41

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS