



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Caterpillar

Operator's Manual

941 & 951

Traxcavator

S/n 16U1, 80H1, 70H1,

86J, 32F & 69H & up

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
CATERPILLAR OR IT'S SUCCESSORS. CATERPILLAR AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CT-O-941TX+

Operator's Manual

CLICK ANYWHERE FOR MORE DETAILS

TABLE OF CONTENTS

Safety	3
Symbols	4
Tractor	7
Walk-Around Inspection	9
Operator's Compartment	11
Starting the Engine	15
After Starting	18
Controls	19
Moving the Machine	26
Parking the Machine	28
Operating Adjustments	30
Operating Techniques	32
Shipping	41

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS



3. Gradual left turn - pull left lever back to release left steering clutch.



4. Sharp left turn - pull left lever back and depress left pedal to apply left brake.

Lever Steer (Steep Downgrade)



1. Gradual right turn - pull left lever back to release left clutch - do not apply brake.




2. Sharp right turn - pull right lever back to release right clutch and apply right brake.

JENSALES.COM

or Call 800-443-0625



3. Gradual left turn - pull right lever back to release right clutch - do not apply brake.

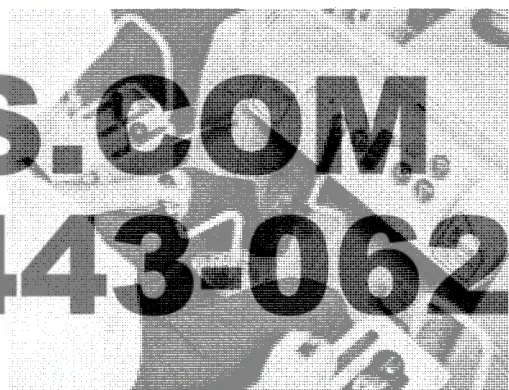

4. Sharp left turn - pull left lever back to release left clutch and apply left brake.

CLICK ANYWHERE FOR MORE DETAILS

OPERATING TECHNIQUES

Loading From a Stockpile



1. Shift speed selector to first speed forward.



2. Position bucket so that bottom is level with ground.



3. Drive forward to force bucket into material.



4. Tilt bucket back as machine moves forward.



5. Raise bucket against stockpile.



6. Maneuver into loading or travel position as soon as bucket is full.

Rock bucket back and forth with tilt control when material is hard to penetrate.

SHIPPING

CLICK ANYWHERE FOR MORE DETAILS



Always block trailer or rail car wheels before loading machine.



Apply brake lock, place transmission in NEUTRAL and apply transmission safety lock.



Install tie-downs at several locations.

Remove disconnect switch key.

Cover engine exhaust opening to keep rain, snow and foreign material out of engine.

WARNING
CHECK TRAVEL ROUTE FOR OVERPASS CLEARANCES. MAKE SURE THERE WILL BE ADEQUATE CLEARANCE IF VEHICLE BEING TRANSPORTED IS EQUIPPED WITH ROPS, CAB OR CANOPY.

JENSALES.COM

or Call 800-443-0625

Check state and local laws governing weight, width and length of load.

CLICK ANYWHERE FOR MORE DETAILS