



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Clark

Service Manual

+ Operators Manual

Pacer 300 & Super 300

Motor Graders

S/n H-100 & up

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
CLARK OR IT'S SUCCESSORS. CLARK AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

Service Manual

CL-S-300MG

- TO THE OPERATOR -

Your Grader is the result of a combination of advanced engineering and research, skilled manufacturing, and the latest developments in metallurgical science. The entire design and construction is such that it can withstand usage with a minimum of maintenance, and will operate smoothly and easily with maximum safety to the operator.

A fine mechanism such as this grader will always respond best to considerate treatment and care. Therefore, before operating it, we suggest that even the experienced operator review the entire contents of this booklet. While the material in this booklet has been prepared in sufficient detail to be of maximum assistance to inexperienced operators, the "Old Timers" will find much information and many of the illustrations of considerable help.

If you should need information not given in this booklet, or require the services of a trained mechanic, we urge you to use the extensive facilities offered by the Austin-Western Distributor in your locality. Distributors are kept informed on the best methods of servicing and are equipped to provide prompt, high class service in the field, or in an up-to-date service station.

When in need of parts always give the Austin-Western Distributor your grader and engine serial numbers. We suggest that you write these serial numbers in the spaces provided below for ready reference when parts are required.

Grader Serial No. _____

(Stamped on name plate, also on frame, on left hand side of grader above front axle)

Engine Serial No. _____

(Stamped on engine block)

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

INDEX

NOTE: HOW TO USE THIS INSTRUCTION MANUAL

This manual, No. 482 is composed of 6 Sections as follows:

SECTION - 1.....	SPECIFICATIONS
SECTION - 2.....	LUBRICATION
SECTION - 3...	UNLOADING AND GENERAL INSTRUCTIONS TO OPERATOR
SECTION - 4.....	GRADER OPERATION
SECTION - 5.....	POWER GRADER OVERHAULING AND ADJUSTMENTS
SECTION - 6.....	OPTIONAL EQUIPMENT AND ATTACHMENTS

DESCRIPTION	PARAGRAPH	PAGE
Section 1. Specifications		1-4
View of Grader - Pacer 300.....		1
View of Grader - Super 300.....		1A
General Specifications - Pacer 300.....		2
General Specifications - Super 300.....		2A
Engine - GMC Diesel - Generator Side (with Allison Converter).....		3
Engine - GMC Diesel - Generator Side (with Torcon Converter).....		3A
Engine - GMC Diesel - Generator Side (without Converter).....		3B
Engine - Cummins Diesel - Starting Motor Side (with Torcon Converter).....		3C
Engine - GMC Diesel - Blower Side (with Allison Converter).....		4
Engine - GMC Diesel - Blower Side (with Torcon Converter).....		4A
Engine - GMC Diesel - Blower Side (without Converter)		4B
Engine - Cummins Diesel - Governor Side (with Torcon Converter).....		4C
Section 2. Lubrication		1-4
Recommended Lubrication Specifications - Pacer 300.....		1
Recommended Lubrication Specifications - Super 300.....		1A
Lubrication Chart - Pacer 300.....		2
Lubrication Chart - Super 300.....		2A
Lubrication - Key to Chart - Pacer 300.....		3-4
Lubrication - Key to Chart - Super 300.....		3A-4A
Section 3. Unloading and General Instructions to Operator		1-26
Air Cleaner.....	8	5
Before starting Engine.....	2	1

INDEX

DESCRIPTION	PARAGRAPH	PAGE
Section 3. (Continued)		
Cooling System.....	11	8
Diesel Fuel Lines - GMC.....	21	20
Diesel Fuel Lines - Cummins.....	27	24
Electrical Equipment.....	9	6
Engine - Starting, Operating, Stopping and Maintenance....	7	4
Fuel System.....	12	9
Gear Shift Chart.....	6	3
Heater and Piping - GMC.....	22	21
Heater and Piping - Cummins.....	28	24
Heater Wiring.....	25	22
Hourmeter Wiring.....	23	21
Hydraulic Pipe Fitting, hose and piping.....	18	18
Hydraulic System.....	16	15
Inspection before Unloading Grader.....	1	1
Latch Mechanism, Circle (solenoid type)	30	26
Operating Controls.....	4	2
Piping Diagram for Tiller Bar Steer.....	17	17
Preparing Graders for Blade Operations.....	5	3
Storage Batteries.....	10	7
Tire Inflation Chart.....	19	19
Tire Maintenance.....	20	19
Torque Converter Operation.....	13	9
Torque Converter - Allison.....	14	9
Torque Converter A-W Torcon.....	15	11
Unloading Grader.....	3	1
Wiper Wiring, Windshield.....	24	22
Wiring Diagram - GMC.....	26	23
Wiring Diagram - Cummins.....	29	25
Section 4. Grader Operation		1-19
Backing Out.....	16	9
Conventional Maintenance.....	10	6
Cutting and Filling.....	17	10
Cutting Wet Ditch.....	6	4
Earth Road Construction.....	1	1
Flat Bottom Ditch.....	12	8
Grading Close to Immovable objects.....	15	9
Grading High Bank Slopes.....	20	12
Grading in Reverse.....	14	8
Grading in Reverse between Forms.....	13	8
Grading on Slope (3 to 1).....	2	1
Grading Outslope of a Low Banked Ditch.....	19	12
Grading Sharp Curves.....	18	11
Grading Slope Chart.....	3	2
Handling Oil-Mix (Heavy Maintenance).....	9	6
High Lift - Left Hand.....	22	14
High Lift - Right Hand.....	21	14
Placing Moldboard in Right Hand High Lift Position.....		
a. First Operation.....	23	15
b. Second Operation.....	24	16

DESCRIPTION	PARAGRAPH	PAGE
Section 4. (Continued)		
c. Third Operation.....	25	17
d. Fourth Operation.....	26	18
e. Fifth Operation.....	27	19
Second Pass (Cleaning Old Ditch).....	5	4
Starting a New Ditch.....	4	3
Third Pass (Windrow Move-over).....	7	5
Wide Reach (Resloping of Grade Shoulders).....	11	7
Windrow Move-over in Blow Sand.....	8	5
Section 5. Power Grader Overhauling		
		1-60
Auxiliary Brake.....	19	16
Bevel Gear and Pinion Adjustment.....	14	10
Brake (Clutch).....	27	26
Brake (Hand).....	17	16
Brake System (Hydraulic).....	16	14
Brake - Foot (Master Cylinder).....	18	16
Circle and Draw Bar.....	57	58
Circle and Draw Bar Illustration.....	56	57
Circle Latch (Hydraulic Type).....	58	59
Circle Latch (Solenoid Type).....	59	59
Allison Converter (Tail Shaft Governor).....	31	31
Converter - Torcon and Clutch Assembly.....	29	28
Converter - Torcon (Oil Flow).....	31A	31
Converter - Torcon (View removed from Engine).....	28	27
Converter - Torcon (Disassembly and Assembly of Element).....	30	28
Front Axle.....	3	1
Front Axle Assembly Removal.....	11	6
Front Axle Gear Carrier Disassembly.....	13	7
Front Axle Gear Carrier Reassembly.....	13	7
Front Axle Gear Carrier Removal.....	12	6
Front and Rear Steer.....	2	1
Hydraulic Control Valves.....	48	53
Hydraulic Motor - Circle Reverse.....	60	59
Hydraulic Pump (Single).....	45	39
Hydraulic Pump (Single) - Disassemble, Inspection and Repair (Vickers).....	46	46
Hydraulic Pump (Dual) - Overhaul - (Webster Electric).....	47	50
Hydraulic Ram Cylinders.....	49	53
Main Clutch Adjustment.....	26	23
Power Distribution (Engine to Wheels).....	1	1
Propeller Shafts.....	15	12
Propeller Shaft (Rear Axle)-(Pacer).....	32	33
Propeller Shaft (Rear Axle)-(Super).....	32A	33A
Ram - Blade Lift.....	50	54
Ram - Blade Side Shift.....	51	54
Ram - Front Steer.....	53	55
Ram - High Lift.....	52	55
Ram - Rear Steer.....	54	56
Ram - Scarifier.....	55	56
Rear Axle (Pacer).....	33	33