



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Clark

Parts Manual

BL700

Tractor, Loader & Backhoe

purchase full manual at

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
CLARK OR IT'S SUCCESSORS. **CLARK** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

CL-P-BL700TLB

BL700 DIESEL

INDEX

CLICK ANYWHERE FOR MORE DETAILS

Accelerator Linkage.....	13
Air Cleaner.....	9
Axle, Drive.....	51
Axle, Steer.....	73
Accumulator, Hydraulic Brake.....	167

Electrical Equipment.....	87
Electrical Wiring.....	87
Engine.....	3
Engine Mount.....	7

Backhoe.....	123
Backhoe Bucket Cylinder.....	135
Backhoe Lines.....	143 & 145
Backhoe Mounting.....	157
Battery.....	89
Boom Cylinder.....	129
Boom Swing Cylinder.....	131
Boom Swing and Stabilizer Lines.....	143
Brake Assembly.....	61
Brake Lines.....	71
Brake Master Cylinder.....	67
Brake Pedal and Linkage.....	63
Brake Valve.....	69

Flow Control Valve-Backhoe.....	141
Frame.....	157
Fuel Lines.....	19
Fuel Tank.....	17
Filter, Transmission.....	23
Filter, Hydraulic Oil.....	97

Cold Start Kit.....	5
Control Cover.....	43
Cylinder, Backhoe Bucket.....	135
Cylinder, Boom.....	129
Cylinder, Boom Swing.....	131
Cylinder, Dipper Arm.....	129
Cylinder, Loader Lift.....	111
Cylinder, Loader Tilt.....	113
Cylinder, Power Steering.....	81
Cylinder, Stabilizer.....	133

Gauges.....	147
Gear, Steering.....	77

Headlight.....	91
Horn.....	87
Hour Meter.....	147
Hydraulic Lines-Main.....	103
Hydraulic Lines-Loader.....	121
Hydraulic Lines-Backhoe.....	143
Hydraulic Pump.....	95
Hydraulic Pump Drive.....	93
Hydraulic Oil Filter.....	97
Hydraulic Sump Parts.....	157 & 161

Decals and Name Plates.....	161
Differential Assembly.....	57
Dipper Arm Cylinder.....	129
Directional Control Linkage.....	25
Drive Axle.....	51
Drive Shaft-Pump.....	93
Drive Shaft-Transmission to Axle.....	49

Ignition Switch.....	147
Inching Pedal & Linkage.....	63
Instrument Panel.....	147

Lamp.....	91
Levers, Loader Control.....	119
Lines, Backhoe.....	145

or Call 800-443-0625

A

X127A

CLICK ANYWHERE FOR MORE DETAILS

CLARK EQUIPMENT COMPANY, TECHNICAL SERVICE DEPARTMENT

BL700 DIESEL

INDEX (CONTINUED)

CLICK ANYWHERE FOR MORE DETAILS

Lines, Boom Swing & Stabilizer.....	143
Lines, Power Steering	103
Loader.....	109
Loader Cylinder Lift	111
Loader Cylinder Tilt	113
Loader Lines.....	121
Loader Valve.....	115
Loader Valve Linkage	119

M

Master Cylinder	67
Mount, Engine and Transmission	7
Muffler	11

N

Name Plates and Decals	161
Neutral Starting Switch.....	25

O

Oil Filter, Hydraulic	97
Oil Filter, Transmission	23

P

Parking Brake.....	45
Parking Brake Linkage	47
Piping, Boom Swing & Stabilizer	143
Power Steering Cylinder	81
Power Steering Lines	103
Pump, Hydraulic.....	95
Prop Shaft, Transmission to Axle.....	49
Prop Shaft, Pump Drive.....	93
Priority Valve	99

R

Radiator	21
Radiator Mounting	21
Regulator, Voltage	87
Relay, Horn	87
Relay, Starter	87
Reverse Unit	29

Seat Assembly.....	149
Selector Valve	101
Shaft, Pump Drive.....	93
Shaft, Transmission to Axle Prop.....	49
Sheet Metal	153
Shift Linkage - Forward & Reverse	25
Shift Linkage - 4 Speed	35
Stabilizer Cylinder.....	133
Steer Axle	73
Steering Gear	77
Steering Lines.....	103
Strainer-Sump.....	163
Sump Parts Hydraulic	157 & 161
Sump Strainer	163
Switch, Neutral Starting.....	25

T

Tires.....	83 & 85
Torque Converter	165
Tower, Boom and Dipper	125
Transmission - 4 Speed	37
Transmission, Forward & Reverse	29
Transmission Cooling Lines	21
Transmission Control Cover.....	43
Transmission Oil Filter.....	23

V

Valve, Backhoe Control	137
Valve, Brake	69
Valve Control Levers, Backhoe	139
Valve Control Levers, Loader	119
Valve-Flow Control	141
Valve Loader Control	115
Valve, Priority.....	99
Valve, Selector	101
Voltage Regulator	87

W

Wheels	83 & 85
Wiring	87

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CLARK EQUIPMENT COMPANY, SERVICE DIVISION

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

5357-P

JENSALES


purchase full manual at

AIR CLEANER AND HOSES®

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

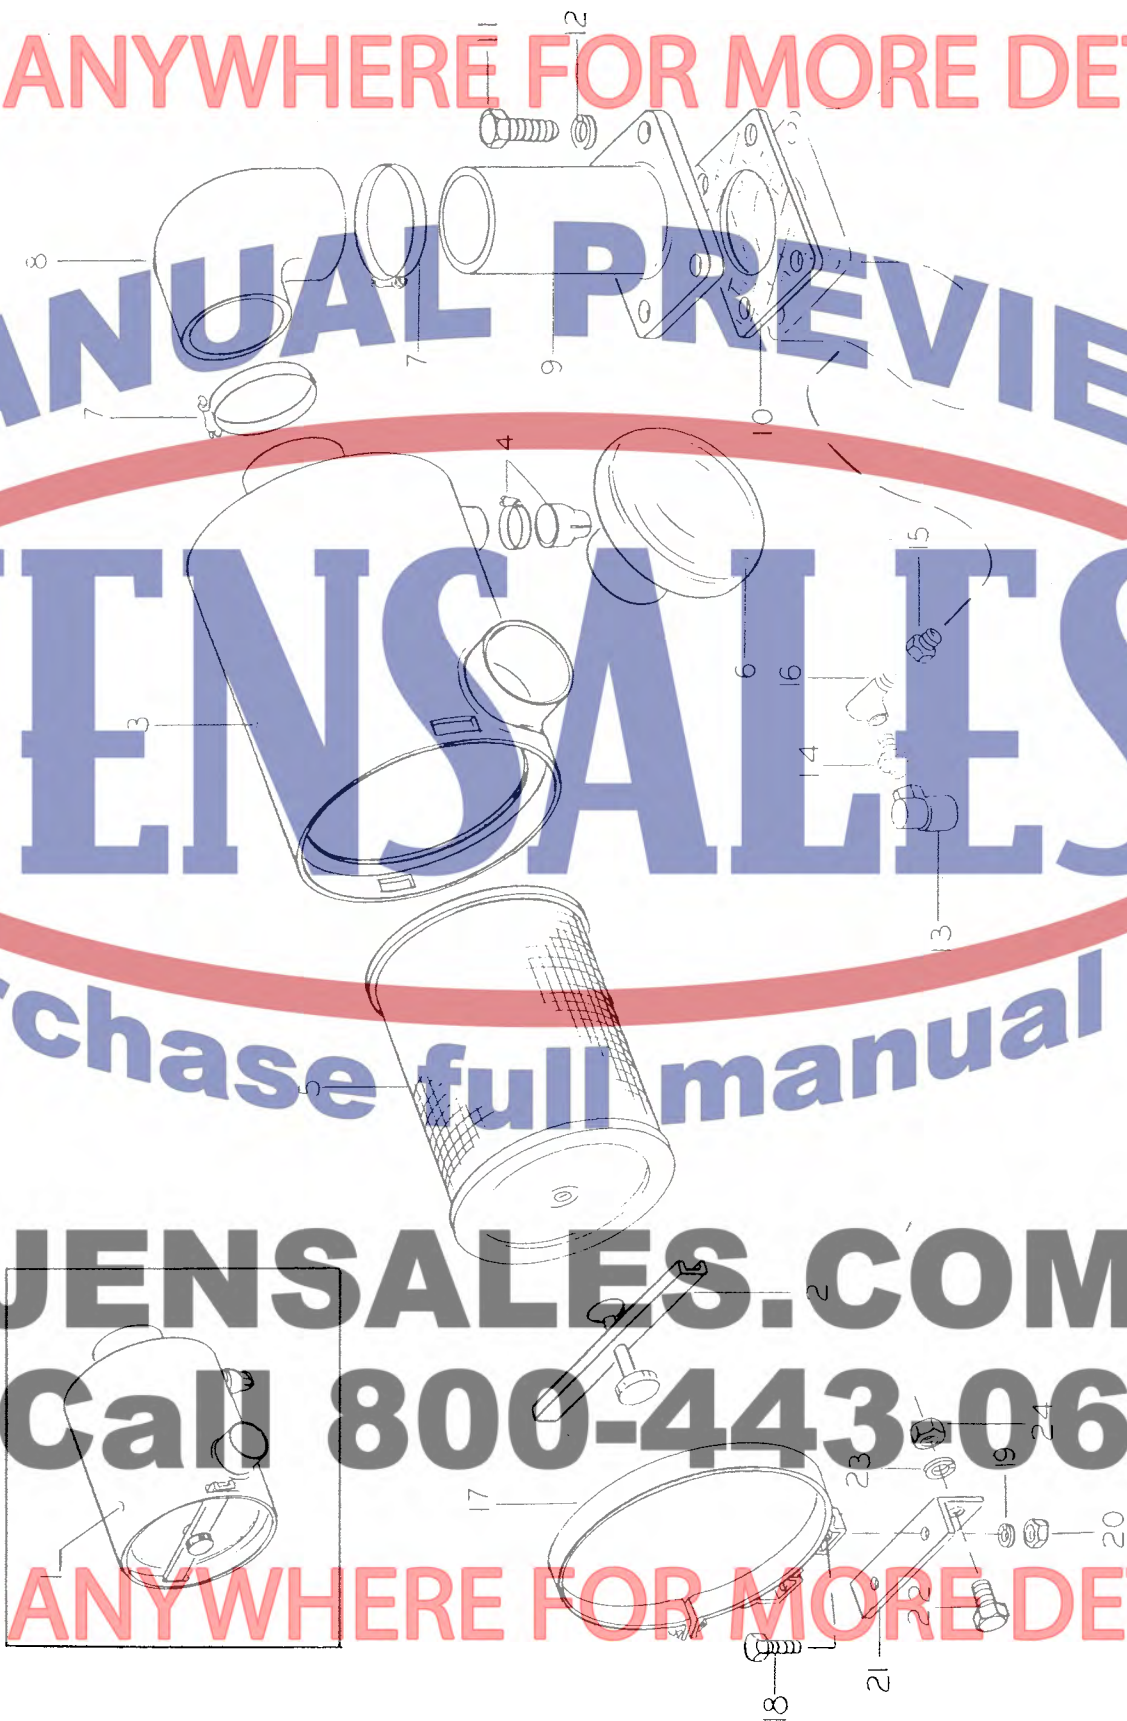

CLICK ANYWHERE FOR MORE DETAILS

Item	AIR CLEANER (Use Illustration 5357-P)	Req'd						Item
	Description							
1	Air Cleaner Assembly Complete (Includes Items 2 thru 5)	1	1643717					1
2	Retainer Bar Assembly	1	896000					2
3	Air Cleaner Body	1	N.S.S.					3
4	Dust Unloader W/Clamp	1	896001					4
5	Filter Element	1	896002					5
6	Air Cleaner Cap	1	1643720					6
7	Hose Clamp	2	517200					7
8	Hose Elbow	1	515425					8
9	Tube Assembly	1	1643721					9
10	Tube Gasket	1	1643722					10
11	Tube Attaching Bolt	4	1C-512					11
12	Tube Attaching Lockwasher	4	23E-05					12
13	Air Restriction Indicator	1	588993					13
14	Fitting	1	399469					14
15	Bushing	1	19F-1					15
16	Tee	1	626582					16
17	Mounting Band	1	1643718					17
18	Band to Angle Bolt	2	1C-612					18
19	Band to Angle Lockwasher	2	23E-06					19
20	Band to Angle Nut	2	1D-06					20
21	Air Cleaner Mounting Angle	1	1643719					21
22	Mounting Attaching Bolt	2	1C-612					22
23	Mounting Attaching Lockwasher	2	23E-06					23
24	Mounting Attaching Nut	2	1D-06					24

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLARK EQUIPMENT COMPANY, SERVICE DIVISION

X127A

CLARK EQUIPMENT COMPANY, SERVICE DIVISION

9

X127A

JENSALES.COM

or Call 800-443-0625

SEE SECOND PAGE OF THIS MANUAL FOR YOUR AUTHORIZED CLARK SALES AND SERVICE REPRESENTATIVE

CLICK ANYWHERE FOR MORE DETAILS