



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

International Harvester Operator's Manual 300 Utility

purchase full manual at

Operator's Manual

JENSALES.COM
or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
INTERNATIONAL HARVESTER OR IT'S SUCCESSORS. INTERNATIONAL HARVESTER AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

IH-O-300 UTIL

CLICK ANYWHERE FOR MORE DETAILS

I-300U

Starting Serial Numbers

1955.....	501
1956.....	20219

I-350

Starting Serial Numbers

1956.....	501
1957.....	1963
1958.....	15049

Paint Codes

Ag Farmall Antique Red (to 1981)

IH.....	99102R3 (Aerosol)
IH.....	991010R2 (Quart)
IH.....	B90882 (Gallon)

Silver (for Wheel rims)

IH.....	b17567 (Aerosol)
IH.....	b17565 (Quart)
IH.....	b17563 (Gallon)

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Operator's Manual

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW



purchase full manual at

FOR

INTERNATIONAL
JENSALES.COM

or Call 800-443-0625

TRACTOR

CLICK ANYWHERE FOR MORE DETAILS

INTERNATIONAL HARVESTER COMPANY

180 North Michigan Avenue

Chicago 1, Illinois, U.S.A.

CONTENTS

Description	Page No.	Description	Page No.
INTRODUCTION		MAINTENANCE	
Delivery report (to be filled in when tractor is delivered)	Inside Front Cover	Air cleaning system	42
General	2	Battery ignition unit	44 to 47
Serial numbers, engine and tractor	2	Brakes	62, 63
DESCRIPTION		Carburetor	36, 37
Before starting your new tractor	7	Clutches	63, 64
Instruments and controls	4 to 6	Cold weather operations	37, 38
Preparing your tractor for each day's work	8, 9	Cooling system	38 to 41
Views of the tractor	3	Front wheels	66 to 68
OPERATING YOUR TRACTOR		Fuel strainer	35
Driving the tractor	12 to 14	Hydra-Touch system	72, 73
Hitching the tractor to the implement	15, 16	Independent power take-off	65, 66
Operating the engine	10, 11	Magneto	49 to 51
Operating the Fast-Hitch system	21 to 23	Minor engine service operations	62
Operating the Hydra-Touch system	19, 20	Periodic inspections	34, 35
Operating the pneumatic tire pump	23	Pneumatic tires	68 to 72
Operating the torque amplifier	14, 15	Rear wheels	68
Operating the power take-off	17, 18	Spark plugs and cables	43
LUBRICATION		Starting and lighting equipment	
General engine lubrication	24	Tractors with battery ignition	52 to 58
Greasing the front wheels	26	Tractors with magneto	58
Lubrication guide	28 to 33	Starting engines that have been in storage	77 [®]
Lubricating oil and grease specifications	26, 27	Storage battery	59, 60
Oil filter	25	Storing and housing your tractor	78, 79
		Tachometer drive unit	48
		Trouble shooting	74 to 78
		Valve clearance adjustment	61
		SPECIAL EQUIPMENT	80 to 87
		SPECIFICATIONS	88, 89
		COMPREHENSIVE INDEX	90 to 93

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

INDEX

Description	Page No.	Description	Page No.
Adjustable front wheels	66 to 68	Cleaning the cooling system	39, 40
Adjusting the brakes	62	Cleaning the cranking motor commutator	54, 58
Adjusting the carburetor	36	Cleaning the generator commutator	54
Adjusting the clutch clearance	63, 64	Cleaning the spark plugs	43
Adjusting the de luxe cushion seat	12	Cleaning the storage battery	59
Adjusting the fan belt	40, 41	Clutch (engine)	31, 63, 64
Adjusting the generator belt	54	Clutch pedal (engine clutch)	4, 12, 64
Adjusting the power take-off bands	65	Clutch (torque amplifier)	63, 64
Adjusting the seat	12	Coil, ignition	45
Adjusting the tachometer drive unit	48	Cold weather operations	{ 37, 38, 60, 71
Adjusting the toe-in	67, 68	Combination rear light and tail light	53
Adjusting the tread widths	66 to 69	Commutator, cranking motor	54, 58
Adjusting the valve clearance	61	Commutator, generator	54
Adjusting the wheels	26, 66 to 69	Connecting the independent power take-off	18, 66
Air cleaning system	42	Contents, table of	1
Antifreeze solutions	38	Cooling system	7, 8, 38 to 41
Arm rest pads	83	Crankcase	9, 29, 31
Assembling the rear wheel rim	68	Crankcase breather	24
Assembling the tachometer drive unit	48	Crankcase water drain	39
Battery	37, 59, 60	Cranking motor	32, 54, 55
Battery ignition unit	44 to 47	Cranking the engine by hand	11
Battery testing	59, 60	Crankshaft bearings, piston, and rings	62
Battery-to-ground cable	7, 60	Cylinder head gasket	62
Before starting your new tractor	7	Cylinder, Hydra-Touch	19, 73, 84
Brake pedals	4	De luxe cushion seat	82
Brake pedal latch	4, 14	Description	3 to 9
Brake pedal lock	4, 14	Differential	27
Brakes	{ 4, 14, 62, 63, 77	Dimensions of tractor	89
Break-away connector socket	81	Disconnecting the independent power take-off	65, 66
Break-away coupling	9	Distributor cap, battery ignition	45
Breaker mechanism, battery ignition	44, 45	Distributor cap, magneto	50
Breaker mechanism, magneto	49, 50	Draining the cooling system	37, 39
Cables, electrical equipment	{ 43, 44, 55 to 58	Draining the crankcase	29, 31
Cables, spark plug	43	Draining the Hydra-Touch system	72, 73
Capacities, lubrication	27	Drain pipe, radiator	39
Capacity, cooling system	7	Drain plug, oil, engine crankcase	29
Capacity, fuel system	8	Drain plug, transmission	32
Capacity, Hydra-Touch system	72	Drawbars	16, 85
Carburetor	36, 37	Drive unit, tachometer	48
Carburetor fuel line screen	36	Driving the tractor	12 to 14
Care of tires	72	Electric lighting	81
Chains, tire	72	Electrical troubles	76, 77
Changing the oil filter element	25	Engine clutch	{ 4, 12, 18, 31, 63, 64
Charge indicator	6, 55 to 57	Engine cooling system	7
Choke control button	5		
Cigarette lighter	5, 81		
Cleaning the air cleaner	42		

INDEX

Description	Page No.	Description	Page No.
Engine hard to start	74	Idle adjustment (carburetor)	36
Engine oil	26	Ignition cables	43, 44, 49
Engine serial number	2	Ignition coil	45
Engine specifications	88	Ignition and starting switch	5
Engine speeds	5, 88	Ignition trouble	76, 77
Fan belt	40, 41	Independent power take-off	5, 17, 18, 24
Filler and breather cap (independent power take-off)	24	Independent power take-off handle	31, 65, 66 5, 18
Filler caps, gasoline and fuel tanks	8	Inflation, tire	68, 70
Filling the cooling system	37, 38, 39	Installing and timing the magneto to the engine	51
Filling the fuel tanks	8	Installing the battery ignition unit	45
Filling the Hydra-Touch system	72	Installing the carburetor	37
Filter elements	25, 32	Installing the cranking motor	58
Fluid level, Hydra-Touch system	73	Installing the fan belt	40, 41
Front wheels	26, 66 to 68	Installing the generator belt	54
Fuel system	7, 8, 10, 37	Installing the tachometer drive unit	48
Fuel screens	36	Instruments and controls	4 to 6, 7
Fuel strainer	35	Instrument lamp	53
Fuel system	10, 35 to 37	Introduction	2
Fuel tank	7	Irregular engine operation	74
Fuse	53	Knocking engine	74
Gaps, spark plug	43	Lack of power	75
Gauges (meters and indicators)	6	Latching the brake pedals	4, 14
Gear lubricant	26	Lighting switch	5, 53
Gearshift lever	5, 6	Liquid level in battery	59
Generator and regulator	31, 53	Liquid weight in tires	71
Generator belt	54	Locking the brakes	4, 14
Generator commutator	54	Low or high oil pressure	75, 76
Governor	5, 74, 75	Lubricating oil and grease specifications	26, 27
Grease specifications	26, 27	Lubrication, engine and chassis	7, 9, 24 to 33,
Greasing the front wheels	27	Lubrication fitting grease	37
Greasing the rotor bearings and the distributor gear (magneto)	50	Lubrication, front wheel	26
Hand-cranking the engine	11	Lubrication guide	28 to 33
Headlights (sealed beam)	53	Lubrication table	27
Heat indicator	6	Magneto impulse coupling and magneto drive chamber	49
High altitude pistons	82	Minor engine service operations	62
Hitch adjustments	22	Mounting tires on the rims	70, 71
Hitching the tractor	15, 16	Oil dilution	76
Hose connections, air cleaner to carburetor	42	Oil filter	24, 25, 31
Hose connections, Remote Control	8	Oil pressure indicator	6, 24
Hydraulic breather	24	Oil pump	24
Hydra-Touch cylinders	19, 20, 84	Operating the engine	10, 11
Hydraulic Remote Control system	8, 9	Operating the Fast-Hitch system	21 to 23
Hydra-Touch system	8, 19, 20		
Hydra-Touch system control handle	72, 73, 84 19		

INDEX

Description	Page No.	Description	Page No.
Operating the hitch	21 to 23	Removing the fan belt	41
Operating the brakes	4, 14	Removing the generator belt	54
Operating the Hydraulic Remote Control	8, 9	Removing the magneto	51
Operating the Hydra-Touch system	19, 20	Reservoir, Hydra-Touch	72
Operating the independent power take-off	18	Rust prevention	40
Operating the pneumatic tire pump	23, 70	Sandblasting the spark plugs	43
Operating the power take-off (transmission-driven)	17, 18	Seat, adjusting the	12
Operating the torque amplifier	14, 15	Seat, de luxe cushion	12, 82
Operating your tractor	10 to 23	Sediment bowl (fuel strainer)	35
Ordering parts	2	Serial numbers, engine and tractor	2
Overheated engine	75	Shipping oil	7
Overloading the tires	71	Shipping the tractor	70
		Shut-off valves, gasoline and fuel	11, 35, 37
Pads, arm rest	83	Spark arrester	35
Parts, replacement	2	Spark coil	45
Periodic inspections	34, 35	Spark plug pumps	23, 70, 87
Piston displacement	2	Spark plugs	43
Pistons (high altitude)	82	Special equipment index	80
Pneumatic tire pumps	23, 70, 87	Special equipment instructions	2, 80
Pneumatic tires	7, 68, 70 to 72, 78	Specifications, lubricant	26, 27
Points, ignition	44, 49, 50	Specifications, tractor	88, 89
Polarizing the generator	54	Specific gravity of battery	59
Power take-off (transmission-driven)	17, 18, 83	Specific gravity of liquid wheel weight	71
Power take-off (independent)	5, 17, 18, 24, 31, 65, 66, 83	Speeds, engine	5, 88
Power take-off shifter rod	5, 18	Speeds, tractor	15, 89
Power timing light	47	Starting the engine	10
Preparing your tractor for each day's work	8, 9	Starting and lighting equipment	
Pump, Hydra-Touch	19	Tractors with battery ignition	52 to 58
Pump, oil	24	Tractors with magneto	58
Putting liquid into tire tubes	71	Starting a stored engine	79
		Starting switch, ignition	5
Radiator	7, 40	Starting the tractor	12
Radiator drain	7, 39	Steering mechanism	78
Radiator filler cap	38, 39	Steering the tractor	13
Radiator, filling the	7, 39	Stopping the engine	11
Raising and lowering implements	21	Stopping the tractor	14
Rear light and tail light	53	Storage battery	37, 59, 60
Rear wheels	68, 69, 77	Storing and handling fuel	7, 8
Regulator, voltage	53	Storing and housing your tractor	78, 79
Relining the brakes	77	Storing tires	72
Remote Control system	8	Swinging drawbar	85
Removing the battery ignition unit	45	Table of contents	1
Removing the carburetor	37	Tachometer (special)	6, 48, 82
Removing the cranking motor	58	Tachometer drive unit	48
		Tail light, rear light	53
		Temperature gauge (heat indicator)	6
		Terms of location	2

INDEX

CLICK ANYWHERE FOR MORE DETAILS

Description	Page No.	Description	Page No.
Thermostat	40	Views of the tractor	3
Timing the distributor (battery ignition)	46, 47	Voltage regulator	52, 53, 55 to 58
Tire chains	72	Washing the air cleaner	42
Tire pressure table	70	Water for cooling system	7
Tire pumps, pneumatic	23, 70, 87	Water pump	28, 41
Tires, pneumatic	7, 68, 70 to 72	Wheels	26, 66 to 69
Tire traction	71	Wheels, front tread	66 to 68
Toe-in, front wheel	67, 68	Wheels, greasing the front	26
Torque amplifier	14, 15, 63, 64	Wheels, rear tread	68, 69
Torque amplifier operating handle	6, 15	Wheels, pneumatic tire	7, 26
Tractor serial number	2	Wheel weights	66 to 69, 77
Transmission	27, 32, 77	Wheel weights, liquid	71, 86
Trouble shooting	74 to 78	Wiring diagram (battery ignition)	55, 56, 57
Using too much fuel	76	Wiring diagram (magneto)	58
Using too much oil	76	Wiring, distributor (battery ignition)	43, 44, 47
Valve clearance adjustment	61	Wiring, distributor (magneto ignition)	49
Valve stem mounting cones	71	Wiring, electrical equipment	43, 44, 47, 49, 55 to 58

purchase full manual at

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS