



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

International Harvester Operator's Manual 460 Utility

purchase full manual at

Operator's Manual

JENSALES.COM
or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
INTERNATIONAL HARVESTER OR IT'S SUCCESSORS. INTERNATIONAL HARVESTER AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

IH-O-460 UTIL

MODEL 460 UTILITY

CLICK ANYWHERE FOR MORE DETAILS



MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or call 800-443-9625



CLICK ANYWHERE FOR MORE DETAILS

CONTENTS

Description	Page No.
DELIVERY REPORT	1
INTRODUCTION	3
DESCRIPTION	4
INSTRUMENTS AND CONTROLS	5 to 7
BEFORE STARTING YOUR NEW TRACTOR	8
PREPARING YOUR TRACTOR FOR EACH DAY'S WORK	9
OPERATING THE ENGINE	10, 11
DRIVING THE TRACTOR	12 to 14
OPERATING THE TORQUE AMPLIFIER	14
OPERATING THE HYDRA-TOUCH SYSTEM	15 to 18
HITCHING THE IMPLEMENT TO THE TRACTOR	19
OPERATING THE INDEPENDENT POWER TAKE-OFF	20, 21
OPERATING THE BELT PULLEY	22
WHEELS	23 to 32
WEIGHTS	32 to 35
PNEUMATIC TIRES	36 to 38
STARTING AND LIGHTING EQUIPMENT	39 to 41
COOLING SYSTEM	42, 43
COLD WEATHER PRECAUTIONS	43, 44
LUBRICATING OIL AND GREASE SPECIFICATIONS	45
LUBRICATION TABLE	46
LUBRICATION GUIDE	47 to 49
SPECIAL EQUIPMENT	50
SPECIFICATIONS	51 to 53
INDEX	54 to 56

A Careful Operator

IS THE BEST INSURANCE

AGAINST AN ACCIDENT

—National Safety Council.

WHEELS



Illustr. 31

Loosening rim from wheel.

To move the right wheel outward or the left wheel inward, operate the tractor in reverse gear.

Apply the brake to the wheel which is not being adjusted. Engage the clutch until the jack screw reaches the stop, then disengage the clutch and shift to neutral.

Loosen the screw in the other stop, then slide the stop over against the newly positioned jack screw, and tighten the stop screw. See Illustr. 31B.

Tighten the nuts on the three previously loosened jack screws to 250 foot-pounds torque so the rim will be properly centered. Recheck all jack screw nuts for proper tightness after the tractor has been operated a short time.



Illustr. 31A

Position of stop after power-adjusting rim.



Illustr. 31B

Jack screw in locked position.

Note: When the wheels are to be reversed from either the concave side in or the concave side out position, mount the right wheel on the left side of the tractor and the left wheel on the right side, so the tire tread will rotate in the correct directions as shown by the arrow on the tire.



Illustr. 31C

Jack screw locations for available power-adjusted rear wheel tread positions.

Illustration shows INTERMEDIATE position of right rear wheel with W12-38 rim. Variations from this setting will result in other tread widths. Refer to Illustr. 30.

INDEX

Description	Page No.	Description	Page No.
Accelerator pedal	6, 50	Draining the crankcase	48
Accessories and extra equip- ment	50	Draining the Hydra-Touch reservoir	49
Adjustable front wheels	23 to 25	Drain pipe, radiator	43
Adjustable wide-tread front axle	24, 50	Drain plug, transmission	49
Adjusting the seat	12	Drawbar extension plate	21, 52
Adjusting the toe-in	24, 25	Drawbars	19, 20
Adjusting the tread widths (wheels and axles)	23 to 31	Driving the tractor	12 to 14
Adjusting the working depth	16	Dual rear wheels	32
Air cleaning system	9, 48	Electric starter button	6
Antifreeze solutions	44	Electric wiring	41
Assembling rear wheel rims	26 to 31	Engine clutch	6, 12
Axles, front and rear	23 to 31	Engine oil	45, 46, 48
Battery	8, 39	Engine serial number	3
Battery-to-ground strap	8, 40	Engine specifications	51
Before starting your new trac- tor	8	Engine speed control lever	6
Belt pulley	22, 50	Engine speeds	51
Belt pulley operating handle	7	Exhaust muffler (vertical)	50
Belt speeds	51	Extension cable	50
Brake pedal latch	5, 13	Extra equipment and accessories	50
Brake pedal lock	5, 14	Filler and breather cap (IPTO rear unit)	49
Brakes	5	Filler caps, gasoline tanks	9
Break-away connector socket	40, 50	Filling the cooling system	8, 9, 39
Break-away hydraulic coupling	17	Filling the fuel tanks	9
Cables, electrical equipment	39 to 41	Filling the Hydra-Touch reservoir	49
Cables, spark plug	39	Fixed drawbar	19
Capacities, lubrication	46, 51	Fluid level, Hydra-Touch system	49
Capacity, cooling system	51	Front axle, adjustable wide tread	24, 25, 50
Capacity, fuel system	51	Front bolster weights	33, 50
Capacity, Hydra-Touch system	46, 51	Front wheels	23 to 25
Carburetor	51	Front wheel tread widths	23
Care of tires	38	Front wheel weights	32, 50
Chains, tire	38	Fuel	8, 9
Changing the oil filter element	48	Fuel gauge	6
Charge indicator	7	Fuel system	8, 9, 10, 11
Choke control button	6	Fuel tank	51
Cigarette lighter	6, 50	Fuse	40
Cleaning the air cleaner	9	Gaps, spark plug	51
Clutch	6, 12, 52	Gauges (meters and indicators)	5, 6, 7
Clutch pedal	6	Gear lubricant	45
Cold weather precautions	38, 43	Gearshift lever	6
Combination rear light and tail light	40, 50	Generator	40
Contents, table of	2	Generator belt	40
Control handles, Hydra-Touch	15, 17	Governor	6
Cooling system	8, 9, 42, 43, 52	Grease specifications	45
Coupling the implement	19	Greasing the front wheels	49
Crankcase	48	Ground speeds	53
Crankcase water drain cock	42	Hand-cranking the engine	10
Cranking motor	10	Headlights (sealed beam)	40
Cranking the engine by hand	10	Heat indicator	7
Cylinder, Hydra-Touch	15	High altitude pistons	50
Description	4	High speed low and reverse gears	50
Differential	45	Hitching the implement to the tractor	19
Dimensions of tractor	52		
Double valve system	15 to 18		
Draining the cooling system	43		

INDEX

Description	Page No.	Description	Page No.
Hose connections, Remote		Pre-Cleaner	50
Control	17	Preparing your tractor for	
Hydra-Touch pump	15	each day's work	9
Hydra-Touch system	7, 9, 15 to 18	Pre-Screener	50
Hydra-Touch system control		Pulley, belt	22, 50
handles	7	Pump, Hydra-Touch	15
Hydraulic power steering	50	Pump, oil	45
Hydraulic remote control	17	Putting liquid into tire tubes	38
Hydraulic self-sealing			
couplings	17, 18	Radiator drain	43
Ignition cables	41	Radiator filler cap	42
Ignition switch	6	Radiator, filling the	42
Independent power take-off	20, 21, 22, 50	Radiator shutter	10, 43
Independent power take-off		Raising and lowering	
operating handle	7	implements	16
Inflation, tire	36	Rear axle	30
Instrument lamp	40	Rear light and tail light	40, 50
Instruments and controls	5 to 7	Rear wheels	26 to 32
Introduction	3	Rear wheel weights	34, 35, 50
Junction ports, Hydra-Touch		Regulator, voltage	40
system	17, 18	Remote Control system	17, 18
Key, ignition switch	6	Reservoir, Hydra-Touch	49
Latching the brake pedals	5, 13	Safety light	50
Lever, seat position release	12	Seasonal disconnect (IPTO)	21
Lighting switch	6, 40	Seat, adjusting the	12
Lights	39, 40, 41, 50	Seat, de luxe cushion	50
Liquid weight in tires	38	Seat, low	50
Lubricating oil and grease		Seat position release lever	12
specifications	8, 45	Serial numbers, engine and	
Lubrication, engine and chassis	45 to 49	tractor	3
Lubrication fitting grease	45	Service meter	5, 7
Lubrication, front wheels	49	Shipping oil	8
Lubrication guide	47 to 49	Shipping the tractor	37
Lubrication table	46	Shut-off valves, gasoline and	
Mounting tires on the rims	37	fuel	10
Muffler, vertical exhaust	50	Single valve system	15 to 18
Oil filter	45	Slidable rear hub and axle	50
Oil pressure gauge	7, 45	Spark plug tire pump	37, 50
Oil pump	45	Specifications, lubricant	45
Operating the engine	10, 11	Specifications, power take-off	51
Operating the belt pulley	22	Specifications, tractor	52 to 57
Operating the brakes	5	Specific gravity of liquid	
Operating the Hydra-Touch		wheel weight	38
system	15 to 18	Speeds, belt	51
Operating the Hydraulic		Speeds, engine	51
Remote Control	17	Speeds, tractor	53
Operating the independent		Starter button, electric	6
power take-off	20, 21	Starting the engine	10
Operating the torque amplifier	7, 14	Starting and lighting equipment	39 to 41
Overloading the tires	37	Starting the tractor	12
Pistons (high altitude)	50	Static electricity	22
Pneumatic tire pump	37	Steering mechanism	12, 24, 25, 52
Pneumatic tires	36 to 38	Steering the tractor	12
Power-adjusted rear wheels	28 to 31, 50	Stopping the engine	11
Power take-off (independent)	20, 21	Stopping the tractor	13
		Storing and handling fuel	9
		Switch, ignition	6
		Table of contents	2
		Table of ground speeds	53
		Table of tire pressures	36
		Tachometer	7, 50

INDEX

Description	Page No.	Description	Page No.
Tail light, rear light	40, 50	Valve clearance, engine	51
Temperature gauge (heat indicator)	7	Valve stem mounting cones	38
Terms of location	3	Views of the tractor	4
Thermostat	44	Voltage regulator	39
Tire chains	38		
Tire pressure table	36	Water for cooling system	43
Tire pumps, pneumatic	37, 50	Wheels	23 to 32
Tires, pneumatic	27, 32, 36 to 38	Wheels, front	23 to 25
Toe-in, front wheel	24, 25	Wheels, greasing the front	49
Torque amplifier	14	Wheels, rear	26 to 32
Torque amplifier operating handle	7, 14	Wheel weights	32 to 35, 50
Touch-Control handle	15, 20	Wheel weights, liquid	38
Towing the tractor	13, 37	Wide-tread front and rear axles	23, 24, 30, 31
Tractor serial number	3	Wiring diagram	41
Triple valve system	15 to 18		

Play Safe

INSIST ON  PARTS

WHEN you bought your International Harvester tractor or machine, you made a good choice—you have a machine that deserves good care and good service. When wear and tear make new parts necessary, remember why you bought an International Harvester *Quality Product*. You bought quality to be sure of performance. Don't handicap your equipment by careless selection of replacement parts.

PLAY SAFE! Go to the International Harvester dealer for IH parts. The IH trademark is your guarantee of quality, your best assurance that your International Harvester equipment will continue to give you top-grade performance, no matter what you ask of it.