



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

International Harvester Operator's Manual

Super C

purchase full manual at

Operator's Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
INTERNATIONAL HARVESTER OR IT'S SUCCESSORS. INTERNATIONAL HARVESTER AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

IH-O-SUPC

Make: International Harvester	Model: Super C	Years Made: n/a
Factory: n/a	Chassis: 4x2 2WD	Wheelbase: 82.25 inches [208 cm]
Front tire: 5.00-15	Rear tire: 10-36	Weight: 3100 to 5039 pounds
Length: 123 inches [312 cm]	Width: n/a	Height: n/a
Elec. Grounding: n/a	Elec. Charging Amps: n/a	Elec. Volts: n/a
Hitch Rear Type: n/a	Hitch Rear Lift: n/a	Fuel Capacity: 11 gal [41.6 L]
Hydraulics Type: n/a	Hydraulics Capacity: n/a	Hydraulics Pressure: n/a
Hydraulics Valves: n/a	Hydraulics Total Flow: n/a	Hydraulics Valve Flow: n/a
Steering: manual	Brakes: differential mechanical disc	New Price: \$1,700 (1954)

Engine type: International Harvester C123	Cylinders: 4	Displacement: 122.7 ci [2.0 L]
Bore/Stroke: 3.125x4.00 inches [79 x 102 mm]	Compression: 6:1	RPM: 1400
Gross Power: n/a	Torque: n/a	Torque RPM: n/a
Net Power: n/a	PTO: n/a	Drawbar: n/a
Rear PTO: n/a	Rear RPM: 540	Clutch: n/a
Cooling: liquid	Coolant: 15 qts [14.2 L]	Air Cleaner Type: oil bath
Oil Capacity: 5 qts [4.7 L]	Oil Change: n/a	Fuel: gasoline ®
Transmission Type: sliding gear	Gears: 4 forward and 1 reverse	

Serial Number:	Year Made:	Plate Location:
100001	1951	Transmission housing, left side
131157	1952	Transmission housing, left side
159130	1953	Transmission housing, left side
187788	1954	Transmission housing, left side

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Operator's Manual

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW



MCCORMICK®

FARMALL®

Super C
Tractor

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

INTERNATIONAL HARVESTER COMPANY

180 North Michigan Ave.

Chicago 1, Illinois, U.S.A.

Compiled and Reproduced From Original by Jensales Inc.

CONTENTS

Description	Page No.
INTRODUCTION	
General.....	2
Serial numbers, engine and tractor.....	2
DESCRIPTION	
Before starting your new tractor.....	7
Instruments and controls.....	4 to 6
Preparing your tractor for each day's work.....	8, 9
Views of the tractor.....	3
OPERATING YOUR TRACTOR	
Driving the tractor.....	16 to 18
Hitching the tractor to the implement (without Fast-Hitch).....	29, 30
Operating a distillate engine on distillate.....	13 to 15
Operating a distillate engine on gasoline.....	15, 16
Operating a gasoline engine.....	10 to 12
Operating a kerosene engine.....	15
Operating the belt pulley.....	32
Operating the Farmall Touch-Control system.....	18, 19
Operating the Fast-Hitch System.....	21 to 29
Operating the Hydraulic Remote Control system.....	19 to 21
Operating the pneumatic tire pump.....	32
Operating the power take-off.....	30, 31
LUBRICATION	
General engine lubrication.....	33
Greasing the front wheels.....	35
Lubrication guide.....	37 to 41
Lubricating oil and grease specifications.....	35, 36
Oil filter.....	33, 34
MAINTENANCE	
Adjustable wide front axle.....	72, 73
Air cleaning system.....	49, 50
Battery ignition unit.....	51 to 54
Brakes.....	67, 68
Carburetor.....	43 to 45
Clutch.....	68, 69
Cold weather precautions.....	45, 46
Cooling system.....	46 to 49
Front wheels.....	70, 71
Fuel strainer.....	43
Magneto (tractors so equipped).....	54 to 57
Minor engine service operations.....	66
Periodic inspections.....	42, 43
Pneumatic tires.....	74 to 76
Rear wheels.....	74
Seat.....	78
Spark plugs and cables.....	51
Starting and lighting equipment.....	58 to 63
Starting engines that have been in storage.....	83
Storage battery.....	64, 65
Storing and housing your tractor.....	83
Touch-Control system and Hydraulic Remote Control system.....	76 to 78
Trouble shooting.....	79 to 82
Valve clearance adjustment.....	66
SPECIAL EQUIPMENT	84 to 93
SPECIFICATIONS	94, 95
COMPREHENSIVE INDEX	96 to 98

DESCRIPTION

CLICK ANYWHERE FOR MORE DETAILS



Illust. 3
Right side view of the tractor with Fast-Hitch.

purchase full manual at



Illust. 3A
Left side view of the tractor with Fast-Hitch.

INDEX

Description	Page No.	Description	Page No.
Adjustable front wheels.....	70, 71	Drain plug, transmission.....	41
Adjustable wide front axle.....	72, 73, 83	Drawbar.....	27, 29, 30
Air cleaning system.....	9, 38, 49	Drawbar (Fast-Hitch).....	27, 28
Air pipe extension.....	86	Driving the tractor.....	16, 17
Ammeter.....	5	Engine hard to start.....	79
Antifreeze solutions.....	46	Engine hour meter.....	88
Axles, rear.....	93	Engine serial number.....	2
Battery.....	7, 64, 65	Engine specifications.....	94
Battery ignition unit.....	51 to 54	Engine speed control lever.....	5, 11, 14, 16
Battery testing.....	64, 65	Engine speeds.....	5
Before starting your new tractor.....	7	Exhaust muffler.....	85
Belt pulley.....	5, 32, 41, 91	Exhaust valve rotators.....	86
Bracket, tilt-back seat.....	89	Fan.....	40, 48
Brake pedal latch.....	4, 16	Fan belt.....	48, 49
Brake pedals.....	4, 16, 18	Farmall Touch-Control system.....	6, 18, 39, 41, 76
Brakes.....	4, 18, 67	Fast-Hitch system.....	21 to 29
Brakes, locking the.....	4, 18	Filter element.....	34, 39
Cables, electrical equipment.....	51, 62, 63	Front axle, adjustable type.....	72, 73, 85
Cables, spark plug.....	51	Front wheel rims.....	92
Carburetor.....	43 to 45	Front wheels.....	70, 71
Carburetor fuel line screen.....	43	Fuel filler cap.....	8
Chains, tire.....	76	Fuel screens.....	43
Choke rod.....	4, 11, 12	Fuel strainer.....	43
Cleaning the radiator.....	47	Fuel system.....	7, 10, 11, 13, 15, 43 to 45, 81
Clutch.....	4, 16, 38, 68, 69	Fuel tank.....	7, 8
Clutch pedal.....	4, 16, 68	Fuse.....	59
Cold weather precautions.....	45, 65	Gearshift lever.....	6, 11, 14, 16, 18, 82
Cooling system.....	7, 8, 45 to 49	Generator.....	39, 60
Coupling Fast-Hitch implements.....	22, 23	Generator belt.....	48, 60
Crankcase.....	9, 33, 38, 66, 80	Governor.....	5
Crankcase breather.....	33	Grease specifications.....	35, 36
Cranking motor.....	40, 61	Greasing the front wheels.....	35
Cylinder head gasket.....	66	Hand-cranking the engine.....	12, 14
Distributor cap, battery ignition.....	40, 52	Headlights.....	59
Distributor cap, magneto.....	40, 56	Heat indicator (cooling system).....	6, 14
Drain pipe, radiator.....	47	Heat indicator (Touch-Control).....	6, 19
Drain plug, engine crankcase.....	39	High altitude pistons.....	85
Drain plug, steering gear housing.....	41	Hitching (without Fast-Hitch).....	29, 30
Drain plug, Touch-Control reservoir.....	41		