



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

International Harvester

Operator's Manual

IHC & Farmall

460 & 560

purchase full manual at

Operator's Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
INTERNATIONAL HARVESTER OR IT'S SUCCESSORS. INTERNATIONAL HARVESTER AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

IH-O-460,560

FARMALL 460

Serial Number:	Year Made:	Plate Location:
501 Farmall	1958	RIGHT SIDE OF CLUTCH HOUSING
4765 Farmall	1959	RIGHT SIDE OF CLUTCH HOUSING
16902 Farmall	1960	RIGHT SIDE OF CLUTCH HOUSING
22622 Farmall	1961	RIGHT SIDE OF CLUTCH HOUSING
28029 Farmall	1962	RIGHT SIDE OF CLUTCH HOUSING
31552 Farmall	1963	RIGHT SIDE OF CLUTCH HOUSING

FARMALL 560

Serial Number:	Year Made:	Plate Location:
501	1958	RIGHT SIDE OF CLUTCH HOUSING; INTERNATIONAL
501	1958	RIGHT SIDE OF CLUTCH HOUSING
7341	1959	RIGHT SIDE OF CLUTCH HOUSING
26914	1960	RIGHT SIDE OF CLUTCH HOUSING
36125	1961	RIGHT SIDE OF CLUTCH HOUSING
4032	1961	RIGHT SIDE OF CLUTCH HOUSING; INTERNATIONAL
47798	1962	RIGHT SIDE OF CLUTCH HOUSING
60278	1963	RIGHT SIDE OF CLUTCH HOUSING

Paint for Both Tractors

Color Application:	MFG Color Name:
BODY	ANTIQUE 2150 RED
TRIM	ANTIQUE WHITE
WHEELS	ALUMINUM

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENS SALES®

purchase manual at

JENS SALES.COM


or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Operator's Manual

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

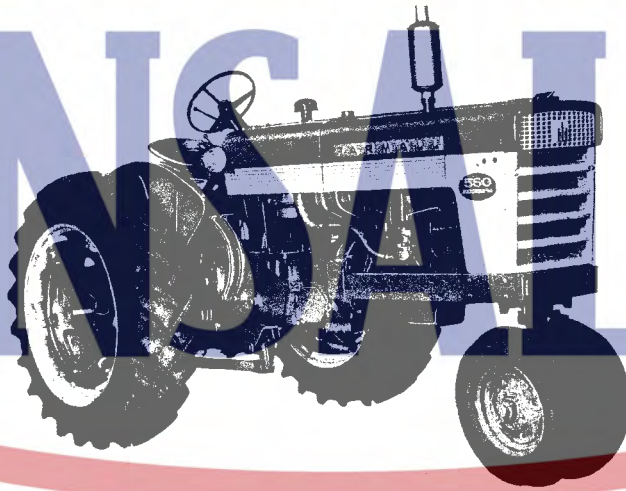

purchase for manual at

MCCORMICK AND FARMALL

or Call **1-800-450-625**

TRACTORS

CLICK ANYWHERE FOR MORE DETAILS

INTERNATIONAL HARVESTER COMPANY

180 North Michigan Avenue

Chicago 1, Illinois, U.S.A.

CONTENTS

Description	Page No.
DELIVERY REPORT.....	1
INTRODUCTION.....	3
DESCRIPTION.....	4, 5
INSTRUMENTS AND CONTROLS.....	5 to 9
BEFORE STARTING YOUR NEW TRACTOR.....	9, 10
PREPARING YOUR TRACTOR FOR EACH DAY'S WORK.....	11
OPERATING A GASOLINE ENGINE.....	12, 13
DRIVING THE TRACTOR.....	14 to 16
OPERATING THE TORQUE AMPLIFIER.....	17
OPERATING THE HYDRA-TOUCH SYSTEM.....	18 to 22
HITCHING THE IMPLEMENT TO THE TRACTOR.....	22, 23
OPERATING THE INDEPENDENT POWER TAKE-OFF.....	24, 25
OPERATING THE BELT PULLEY.....	25, 26
WHEELS.....	27 to 33
WEIGHTS.....	34 to 36
PNEUMATIC TIRES.....	37 to 39
STARTING AND LIGHTING EQUIPMENT.....	40 to 43
COOLING SYSTEM.....	44
COLD WEATHER PRECAUTIONS.....	45
LUBRICATING OIL AND GREASE SPECIFICATIONS.....	46, 47
LUBRICATION TABLE.....	47
LUBRICATION GUIDE.....	48 to 51
SPECIFICATIONS.....	52 to 57
INDEX.....	59 to 61


A Careful Operator

IS THE BEST INSURANCE

AGAINST AN ACCIDENT

—National Safety Council.


DESCRIPTION

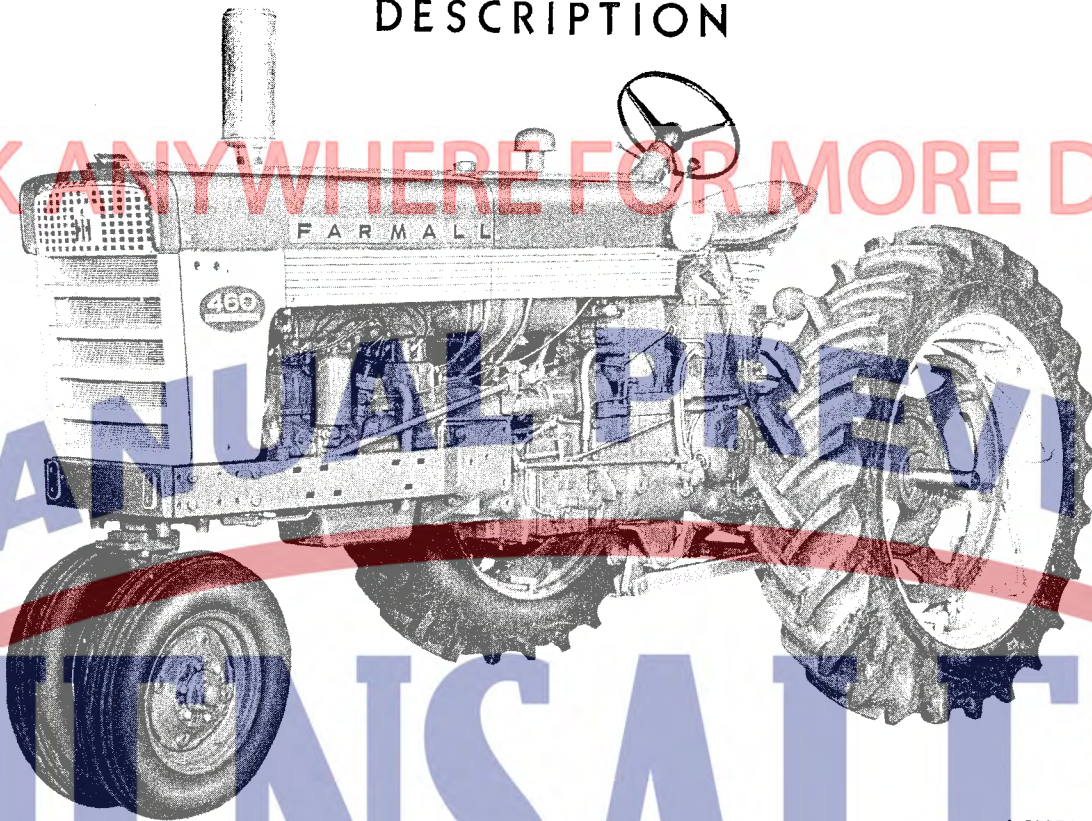

A-53374

Illust. 4

Left front view of the Farmall 460.

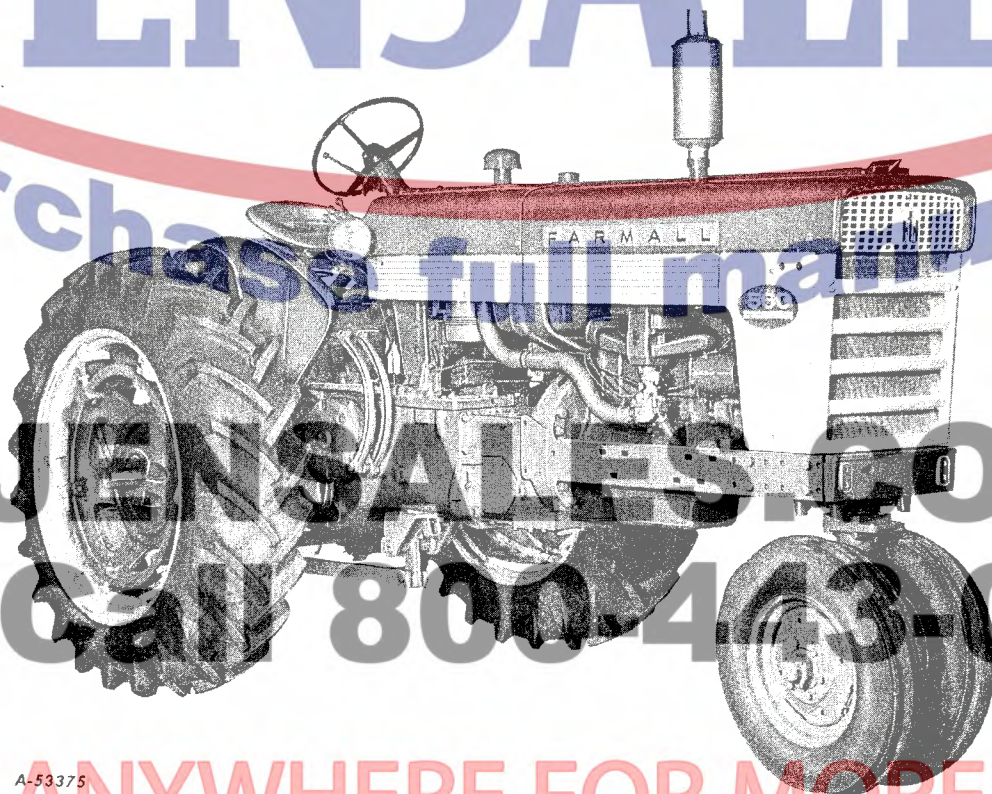

A-53375

Illust. 4A

Right front view of the Farmall 560.

INSTRUMENTS AND CONTROLS



Illustr. 7

Instruments and controls on the International 560 Tractor.

Lighting Switch

The switch has four positions: "OFF" position, "D"—dim lights, "B"—bright lights and "R"—rear light.

Cigarette Lighter

Push the lighter in to make electrical contact. When it pops back it is ready for use.

Engine Speed Control Lever

This lever controls the speed of the engine and, when set in a given position, will maintain a uniform engine speed even though the engine load may vary.

When the lever is set at the top indicator point (LO), the engine speed is fully retarded. When the lever is at the lower indicator point, the engine speed

is fully advanced.

Minimum idle speed (hand throttle) is 400 to 450 r.p.m. with the engine speed control lever fully retarded. Never operate the engine at more than the regular governed speed. Excessive speeds are harmful. For engine speeds, see "Specifications."

Governor

The governor is set at the factory and should require no adjustment. If the linkage needs adjustment for any reason, see the instructions in the tractor Preventive Maintenance Manual.

Seat Position Release Lever

This lever is used to hold the seat in the desired position. For additional information, see page 14.

INDEX

Description	Page No.	Description	Page No.
Accessories and extra equipment	58	Combination rear light and tail light	41
Adjustable front wheels	27, 28	Contents, table of	2
Adjustable wide-tread front axle	27, 28	Control handles, Hydra-Touch	19, 21
Adjusting the seat	14		10, 11,
Adjusting the toe-in	27, 28	Cooling system	44, 45, 52
Adjusting the tread widths (wheels and axles)	27 to 33	Coupling the implement	22, 23
Adjusting the working depth	22	Crankcase	52
Air cleaning system	11, 50	Crankcase water drain cock	45
Air pipe extension	58	Cranking motor	13
Antifreeze solutions	45	Cranking the engine by hand	13
Assembling rear wheel rims	29, 30	Cylinder, Hydra-Touch	18
Auxiliary stay rods	58		
Axle extension, rear	30, 32	Description	4, 5
Axles, front and rear	27 to 33	Detachable seat pads	58
		Differential	47
Battery	10, 40	Dimensions of tractor	54
Battery ignition unit	40	Double valve system	18 to 22
Battery-to-ground cable	10, 40	Draining the cooling system	45
Before starting your new tractor	9, 10	Draining the crankcase	50
Belt pulley	25, 26	Draining the Hydra-Touch reservoir	51
Belt Pulley control rod	8	Drain pipe, radiator	45
Belt speeds	53	Drain plug, transmission	51
Bracket, tilt-back seat	14	Drawbar extension plate	58
Brake pedal latch	5, 15	Drawbars	22, 23
Brake pedal lock	5, 16	Driving the tractor	14 to 16
Brakes	5		
Break-away connector socket	41	Electrall	58
Break-away hydraulic coupling	18, 19	Electric starter button	6
		Electric wiring	42, 43
Cables, electrical equipment	42, 43	Engine clutch	5, 15, 25
Cables, spark plug	42, 43	Engine oil	46, 47, 50
Capacities, lubrication	47, 52	Engine serial number	3
Capacity, cooling system	52	Engine specifications	52
Capacity, fuel system	52	Engine speed control lever	7
Capacity, Hydra-Touch system	47	Engine speeds	52
Carburetor	52	Exhaust muffler	58
Care of tires	38	Exhaust pipe extension	58
Chains, tire	38	Extension cable	58
Changing the oil filter element	50	Extension tires, rear steel wheel	58
Charge indicator	8	Extra equipment and accessories	58
Choke control button	5		
Cigarette lighter	7	Fenders, rear wheel	58
Cleaning the air cleaner	11	Fifth speed	16
	5, 15,	Filler and breather cap (IPTO rear unit)	51
Clutch (engine)	25, 53	Filler caps, gasoline and fuel tanks	11
Clutch pedal (engine clutch)	5	Filling the cooling system	10, 11, 44
Cold weather precautions	39, 45	Filling the fuel tank	11

INDEX

Description	Page No.	Description	Page No.
Filling the Hydra-Touch reservoir	47, 51	Junction ports, Hydra-Touch system	19, 20
Fixed drawbar	22, 23	Key, ignition switch	6
Fluid level, Hydra-Touch system	51	Latching the brake pedals	5, 15
Front axle, adjustable wide tread	27, 28	Lever, seat position release	7
Front bolster weights	34	Lighting switch	7
Front wheels	27, 28	Lights	40, 41, 58
Front wheel tread widths	27	Liquid weight in tires	39
Front wheel weights	34	Lubricating oil and grease specifications	47
Fuel	10	Lubrication, engine and chassis	46 to 51
Fuel gauge	6	Lubrication fitting grease	47
Fuel system	10, 11, 12	Lubrication, front wheels	51
Fuel tank	52	Lubrication guide	48 to 51
Fuse	41	Lubrication table	47
Gaps, spark plug	52	Lugs, spade, steel wheel	58
Gauges (meters and indicators)	6, 8, 9	Mounting tires on the rims	38
Gear lubricant	46	Muffler, exhaust	58
Gearshift lever	8	Oil filter	50
Generator	40	Oil pressure gauge	9, 46
Generator belt	40	Oil pump	46
Governor	7	Operating a gasoline engine	12, 13
Grease specifications	46, 47	Operating the belt pulley	25, 26
Greasing the front wheels	51	Operating the brakes	5
Ground speeds	56, 57	Operating the Hydra-Touch system	18 to 22
Hand-cranking the engine	13	Operating the Hydraulic Remote Control	19
Headlights (sealed beam)	41	Operating the independent power take-off	24, 25
Heat indicator	8	Operating the torque amplifier	17
High altitude pistons	58	Overloading the tires	39
Hitching the implement to the tractor	22, 23	Pads, seat	58
Hose connections, Remote Control	19	Pistons (high altitude)	58
Hydra-Touch pump	18	Pneumatic tire pump	37
Hydra-Touch system	11, 18 to 22	Pneumatic tires	37 to 39
Hydra-Touch system control handles	8	Power-adjusted rear wheels	30, 31, 32
Hydraulic power steering	58	Power take-off (independent)	24, 25, 26
Hydraulic remote control	19	Pre-Cleaners	58
Hydraulic self-sealing couplings	19, 20	Preparing your tractor for each day's work	11
Ignition cables	42, 43	Pre-Screener	58
Ignition switch	6	Pulley, belt	25, 26
Independent power take-off	24, 25, 26	Pump, Hydra-Touch	18
Independent power take-off operating handle	8	Pump, oil	46
Inflation, tire	38	Putting liquid into tire tubes	39
Instrument lamp	40	Radiator drain	45
Instruments and controls	5 to 9		
Introduction	3		