



International Harvester

Operator's Manual
for FARMALL

A & AV

JENSALES.COM

or Call 800-443-0625



THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
INTERNATIONAL HARVESTER OR IT'S SUCCESSORS. INTERNATIONAL HARVESTER AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

Operator's Manual

IH-O-A,AV

Serial Number:	Year Made:	Plate Location:
FARMALL A		
501	1939	PLATE ATTACHED TO LEFT SEAT SUPPORT
6744	1940	PLATE ATTACHED TO LEFT SEAT SUPPORT
41500	1941	PLATE ATTACHED TO LEFT SEAT SUPPORT
80739	1942	PLATE ATTACHED TO LEFT SEAT SUPPORT
96390	1944	PLATE ATTACHED TO LEFT SEAT SUPPORT
113218	1945	PLATE ATTACHED TO LEFT SEAT SUPPORT
146700	1946	PLATE ATTACHED TO LEFT SEAT SUPPORT
182964	1947	PLATE ATTACHED TO LEFT SEAT SUPPORT

PAINT

Color Application:	MFG Color Name:
BODY	ANTIQUE 2150 RED
TRIM	ANTIQUE WHITE
WHEELS	ALUMINUM

FARMALL AV

Serial Number:	Year Made:	Plate Location:
48652 1st built	1941	PLATE ATTACHED TO LEFT SEAT SUPPORT
80739	1942	PLATE ATTACHED TO LEFT SEAT SUPPORT
96390	1944	PLATE ATTACHED TO LEFT SEAT SUPPORT
113218	1945	PLATE ATTACHED TO LEFT SEAT SUPPORT
146700	1946	PLATE ATTACHED TO LEFT SEAT SUPPORT
182964	1947	PLATE ATTACHED TO LEFT SEAT SUPPORT

PAINT

Color Application:	MFG Color Name:
BODY	ANTIQUE 2150 RED
TRIM	ANTIQUE WHITE
WHEELS	ALUMINUM

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS

OWNER'S MANUAL

FARMALL



This manual contains information which will be valuable to you during the entire life of your tractor. Rely on your manual for operating and maintenance information . . . and rely on your International Harvester dealer when in need of skilled mechanical service or genuine IHC service parts. A complete list of parts for this tractor will be supplied on request.

INTERNATIONAL HARVESTER COMPANY

180 NORTH MICHIGAN AVE.

CHICAGO 1, ILLINOIS, U.S.A.

Compiled and Reproduced From Original by Jensales Inc.

CONTENTS

Description	Page No.
Introduction	
Engine serial number	2
Tractor serial number	2
Tractor specifications	3
Description	
Before starting your tractor	12, 13
Instruments and controls	8 to 11
Operating Your Tractor	
Driving the tractor	20 to 24
Operating a distillate-gasoline engine on distillate	17 to 19
Operating a distillate-gasoline engine on gasoline	19
Operating a gasoline engine	16, 17
Operating a kerosene engine	19
Preparing your tractor for each day's work	14, 15
Cold Weather Operation	
Anti-freeze solutions	25, 26
Cooling system	25
Lubrication	
Lubrication charts	30 to 35
General engine lubrication	26, 27
Greasing front wheels	29
Lubricating oil and grease specifications	36
Oil filter	27 to 29
Maintenance	
Adjusting Farmall-A rear wheel trucks	57
Adjusting Farmall-AV front and rear wheel treads	58, 59
Adjusting the drawbar	51
Air cleaning system	44
Brakes	50
Carburetor	39 to 41
Clutch	51
Cooling system	41 to 43
Fuel strainer	38
Magneto	46 to 49
Minor engine service operations	43
Periodic inspections	37, 38
Pneumatic tires	53 to 55
Seat	50
Spark plugs and cables	45
Trouble shooting chart	60 to 66
Valve clearance adjustment	49
Wheels	52, 56
Storing and Housing Your Tractor	67, 68
Special Attachments Index	69, 70

The instructions in this manual cover the operation of tractors on all types of fuel, except where otherwise specified.

FARMALLS A AND AV

CLICK ANYWHERE FOR MORE DETAILS


JENSALES
purchase full manual at
JENSALES.COM
or Call 800-443-0625

Farmall-AV high-clearance tractor with exhaust muffler attachment.

CLICK ANYWHERE FOR MORE DETAILS

DESCRIPTION

CLICK ANYWHERE FOR MORE DETAILS

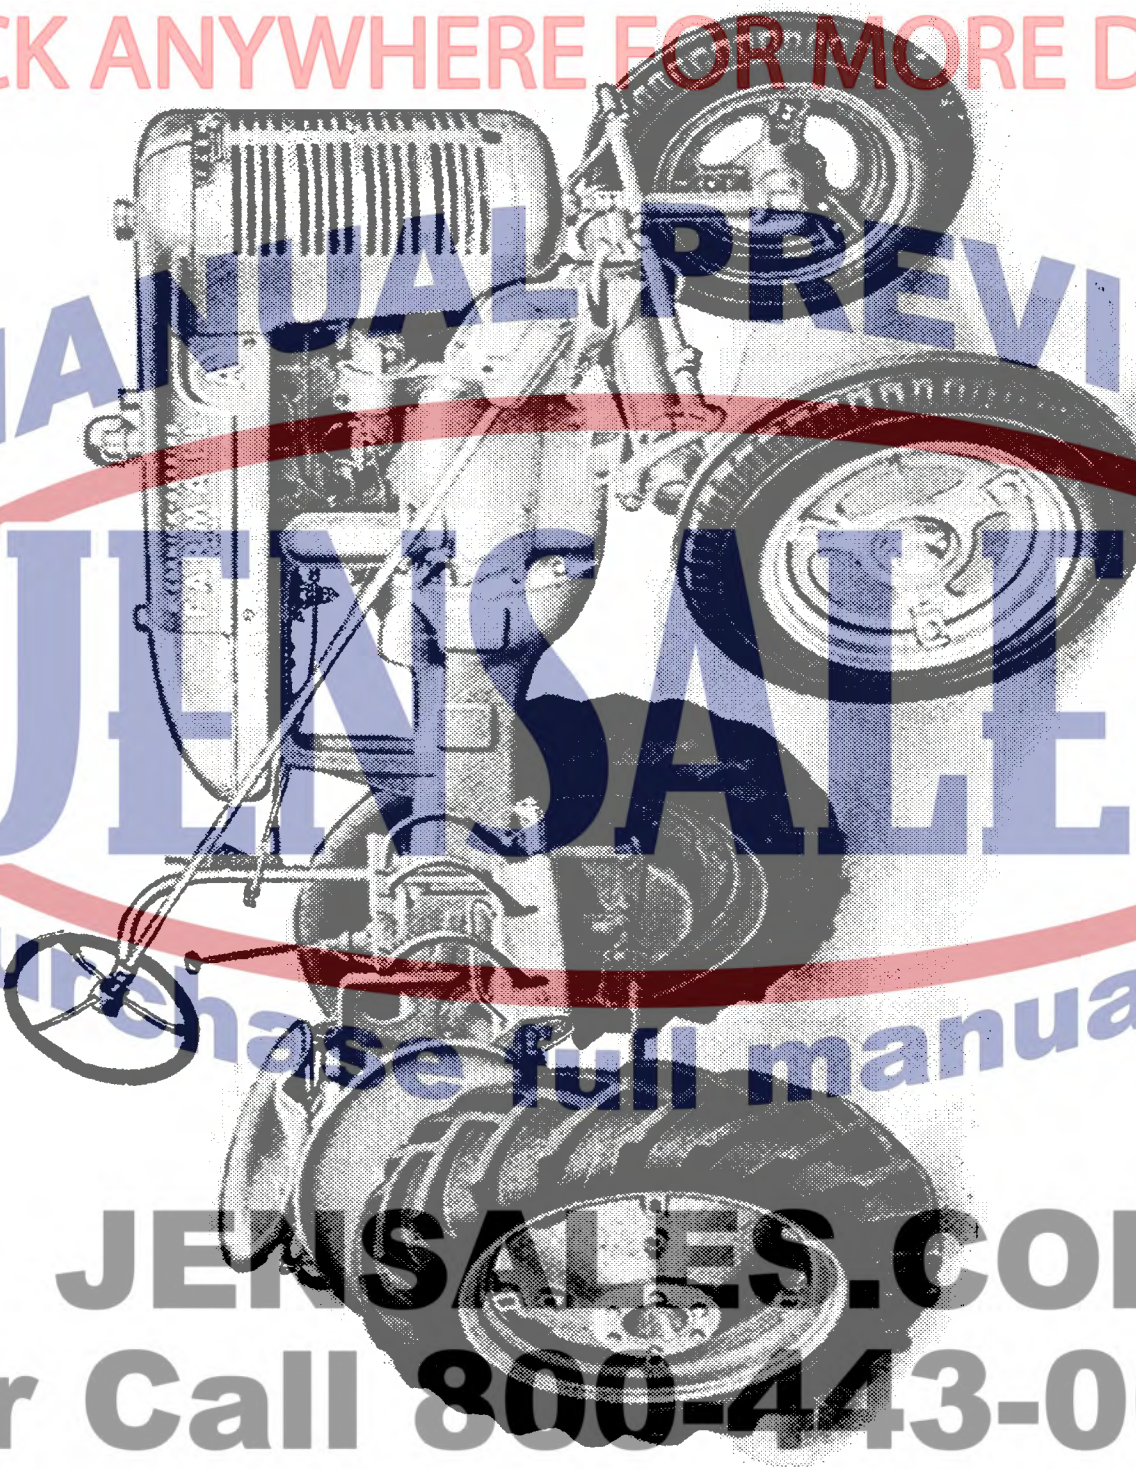

MANUAL REVIEW

JENSALES

purchase full manual at

JENSALES.COM

or Call 800-443-0625

Farmall-A with adjustable front axle.

CLICK ANYWHERE FOR MORE DETAILS

INDEX

Description	Page No.	Description	Page No.
Air cleaner.....	44	Magneto.....	46 to 49
Anti-freeze solutions.....	25	Magneto impulse coupling.....	25
Battery.....	89	Manifold heat control lever.....	8
Battery testing.....	93	Oil filter.....	27 to 29
Before starting your tractor.....	12, 13	Oil pressure indicator.....	11
Belt pulley (special).....	74 to 77	Oil pump.....	27
Brakes.....	50	Operating a distillate-gasoline engine on distillate.....	17 to 19
Brakes, locking.....	10	Operating a distillate-gasoline engine on gasoline.....	19
Brake pedals.....	10	Operating a gasoline engine.....	16, 17
Brake pedal latch.....	10	Operating a kerosene engine.....	19
Carburetor.....	39 to 41	Periodic inspections.....	37, 38
Carburetor choke lever.....	11	Pistons.....	43
Carburetor fuel line screen.....	40	Piston rings.....	43
Clutch.....	51	Pneumatic Lift-All.....	71 to 73
Clutch pedal.....	9	Pneumatic tires.....	53 to 55
Cold weather operation.....	25, 26	Power take-off (special).....	74 to 77
Cooling system.....	41 to 43	Radiator, filling.....	12
Crankcase breather cap.....	27	Radiator shutter.....	17
Crankshaft bearings.....	43	Radiator shutter control crank.....	11
Cylinder head gasket.....	43	Rear wheels.....	52
Distributor cap, magneto.....	48	Rear wheels, removing or changing positions.....	56
Drain plug, radiator.....	41	Seat.....	50
Drain plugs, differential and transmission.....	34	Spark plugs and cables.....	45
Drain plug, crankcase oil.....	31	Special attachments index.....	69, 70
Drawbar.....	51	Specifications, tractor.....	3
Engine speed control lever.....	9	Starting push rod.....	88
Fan belt.....	42, 43	Starting a distillate engine.....	18
Front wheels.....	52	Starting a gasoline engine.....	16
Fuel strainer.....	38	Starting the tractor.....	20
Fuel system (distillate-gasoline).....	13	Steering.....	20
Fuel tank.....	13, 14	Stopping a distillate engine.....	19
Gasoline tank.....	13, 14	Stopping a gasoline engine.....	17
Gearshift lever.....	20	Stopping the tractor.....	20
Generator.....	89, 90	Storing and housing your tractor..	67, 68
Governor.....	10	Tires, pneumatic.....	53 to 55
Heat indicator.....	10	Tire pressure chart.....	53
Hitching the tractor.....	20, 21	Trouble shooting chart.....	60 to 66
Ignition cables.....	45	Valve clearance adjustment.....	49
Ignition switch button.....	9	Wheels.....	52
Light switch.....	89	Wheels, front tread (Farmall-AV).....	59
Lubrication.....	26 to 35	Wheels, greasing, front.....	29
Lubrication charts.....	30 to 35	Wheels, rear tread.....	57, 58
Lubrication, front wheels.....	29	Wheel weights.....	54, 80
Lubricating oil and grease specifications.....	36	Wiring diagrams (electrical equipment).....	94 to 102
		Wiring diagram (magneto and spark plugs).....	45