



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Fiat

Operator's Manual

466 & 566

purchase full manual at

JENSALES.COM

or Call 800-443-0625

JENSALES

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
FIAT OR IT'S SUCCESSORS. FIAT AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

FI-O-466566

Operator's Manual

QUICK REFERENCE INDEX

	Page
Service	2
Contents	4
Identification data	5
Controls and instruments	11
Operation	16
Guide to lift operation	33
Maintenance	41
Servicing schedule	41
Electrical system	41
Wiring diagram	43
Specification	47
466DT - 566DT - Four-wheel drive version	53
20-speed version	58
Reverser version	60
Variants and optional accessories	62
Tractor storage	63
Servicing chart	Inside back cover

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

Fiat Trattori




466 - 566

CLICK ANYWHERE FOR MORE DETAILS

OPERATION

MAINTENANCE

SPECIFICATION

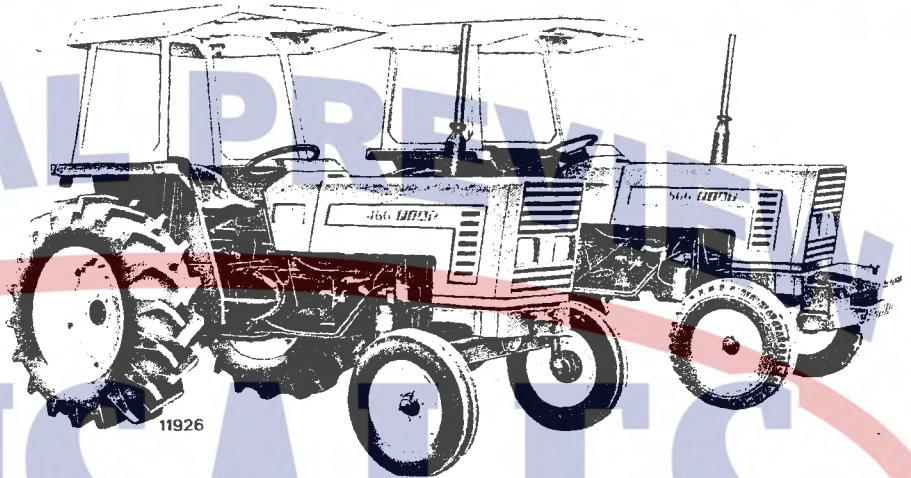

The 466 and 566 were designed with the owner in mind and an effort has been made to simplify maintenance.

The purpose of this handbook is to familiarise operators with the operation and regular servicing of the tractor.

Remember that the time spent on maintenance lengthens the life of your tractor.

Pay particular attention to the instructions covering fuel filtering, air cleaner maintenance and lubrication: remember that badly filtered fuel results in injection system deterioration and irregular air cleaner maintenance leads to premature engine wear. Reckon that a tractor oil change every 200 hours is equivalent to a truck oil change every 8,000 to 9,000 km.

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

TABLE OF CONTENTS

	Page		Page		Page
Service	2	Towing attachments	29	Fuel system bleeding	44
Spare parts	3	Remote control valves	32	Cooling system	46
Identification data	5	Guide to lift operations	33		
Safety precautions	6	Track adjustment	34	SPECIFICATION	47
		Ballasting	38		
CONTROLS AND INSTRUMENTS	11			466DT - 566DT TRACTORS ...	53
Instrument panel	12			Specification	54
Control board	14			Four-wheel drive	56
Transmission and splitter controls	15	MAINTENANCE	41	Front track adjustment	56
		Servicing schedule	41		
OPERATION	16	Electrical system	41	20-SPEED VERSION	58
Starting and stopping	17	— Battery	41	REVERSER VERSION	60
Power take-off	18	— Fuses	42		
Relative ground speed P.T.O. .	20	— Charging system	42	Variants and optional accessories ®	60
Hydraulic lift	22	— Wiring diagram	43	Tractor storage	63
Seat adjustment	25	— Headlamp adjustment	43		
Implement attachment	26				
Lower link positions	28				

4 purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CLICK ANYWHERE FOR MORE DETAILS


Identification Data




Frame Type and Number.



Tractor Data Plate.

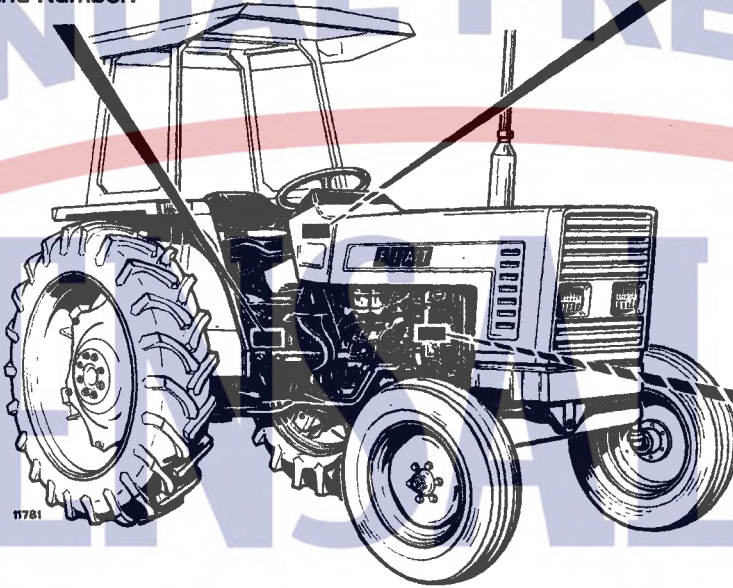

Engine Type and Number.

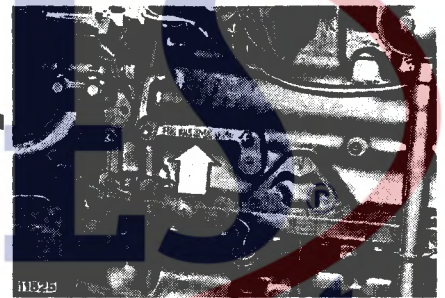

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS