



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Ford
Operator's Manual
2000 & 4000
Utility And
General Purpose

Operator's Manual

JENSALES.COM
or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
FORD OR IT'S SUCCESSORS. **FORD** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

Make: Ford	Model: 2000 SERIES	Years Made: 1962-1975
HP-PTO: 30.57	HP-Engine: 36	HP-Drawbar: 27.7
HP-Range: 31	Engine-Make: FORD	Engine-Fuel: GAS/
Engine-Cyl(s)-CID: 3/157.95	Transmission-STD:	Optional: OPT DIESEL ENG
Fwd/Rev Standard: 4/1	Fwd/Rev Optional:	Mfwd-Std/Opt:
Tires-Std Front: 5.50-16	Tires-Std Rear: 11.2-28	Wheelbase-Inch:
Pto Type:	Pto Speed:	CAT I-3pt Hitch: False
CAT II-3pt Hitch: False	CAT III-3pt Hitch: False	Hitch Lift:
Hydraulics-Type:	Hyd-Cap:	Hyd-Flow:
Hyd Std Outlets:	Cooling Capacity:	Fuel Tank Capacity:
Cab-Std/A/C; Rops:	Weight:	New Price: 0

Color Application:	MFG Color Name:
WHEELS & FENDERS	FORD GREY ENAMEL
TRIM	FORD WHITE ENAMEL
BODY	FORD BLUE ENAMEL

Serial Number:	Year Made:	Plate Location:
C100000	1965	UPPER RIGHT FRONT CORNER OF TRANS
C124200	1966	UPPER RIGHT FRONT CORNER OF TRANS
C161300	1967	UPPER RIGHT FRONT CORNER OF TRANS
C190200	1968	UPPER RIGHT FRONT CORNER OF TRANS
C226000	1969	UPPER RIGHT FRONT CORNER OF TRANS
C257600	1970	UPPER RIGHT FRONT CORNER OF TRANS
C292100	1971	UPPER RIGHT FRONT CORNER OF TRANS
C327200	1972	UPPER RIGHT FRONT CORNER OF TRANS
C367300	1973	UPPER RIGHT FRONT CORNER OF TRANS
C405200	1974	UPPER RIGHT FRONT CORNER OF TRANS
C450700	1975	UPPER RIGHT FRONT CORNER OF TRANS

Make: Ford	Model: 4000 SERIES	Years Made: N/A
HP-PTO:	HP-Engine:	HP-Drawbar:
HP-Range:	Engine-Make:	Engine-Fuel:
Engine-Cyl(s)-CID:	Transmission-STD:	Optional:
Fwd/Rev Standard:	Fwd/Rev Optional:	Mfwd-Std/Opt:
Tires-Std Front:	Tires-Std Rear:	Wheelbase-Inch:
Pto Type:	Pto Speed:	CAT I-3pt Hitch: False
CAT II-3pt Hitch: False	CAT III-3pt Hitch: False	Hitch Lift:
Hydraulics-Type:	Hyd-Cap:	Hyd-Flow:
Hyd Std Outlets:	Cooling Capacity:	Fuel Tank Capacity:
Cab-Std/A/C; Rops:	Weight:	New Price: 0

Color Application:	MFG Color Name:
BODY	FORD BLUE ENAMEL
TRIM	FORD WHITE ENAMEL
WHEELS & FENDERS	FORD GREY ENAMEL

Serial Number:	Year Made:	Plate Location:
11949	1963	UPPER RIGHT CORNER OF TRANS
38931	1964	UPPER RIGHT CORNER OF TRANS
C100000	1965	UPPER RIGHT CORNER OF TRANS
C124200	1966	UPPER RIGHT CORNER OF TRANS
C161300	1967	UPPER RIGHT CORNER OF TRANS
C190200	1968	UPPER RIGHT CORNER OF TRANS
C226000	1969	UPPER RIGHT CORNER OF TRANS
C257600	1970	UPPER RIGHT CORNER OF TRANS
C292100	1971	UPPER RIGHT CORNER OF TRANS
C327200	1972	UPPER RIGHT CORNER OF TRANS
C367300	1973	UPPER RIGHT CORNER OF TRANS
C405200	1974	UPPER RIGHT CORNER OF TRANS
C450700	1975	UPPER RIGHT CORNER OF TRANS

CLICK ANYWHERE FOR MORE DETAILS

FORD TRACTOR

All Purpose Model

SERIES 2000 AND 4000

OWNER'S MANUAL

JENSALES[®]
purchase full manual at

JENSALES.COM

or Call 800-443-0625

Prepared by

TRACTOR AND IMPLEMENT OPERATIONS (U.S.)

FORD TRACTOR DIVISION FORD MOTOR COMPANY

BIRMINGHAM, MICHIGAN

CONTROLS AND INSTRUMENTS

TRACTOR SEAT

Take your place in the tractor seat. If the seat is not in the most comfortable operating position, it may be moved forward or rearward as desired. The seat pan may be tilted back, permitting the operator to stand. Series 4000 All Purpose Tractors are equipped with a cushioned seat which may be adjusted to accommodate the weight of individual operators. The seat pan should always be tilted back when not in use to protect the cushion from dew and rain.

LIGHT SWITCH

The tractor lights are operated by means of a switch on the lower right side of the instrument panel, just below the side panel. Pull the switch out to turn the lights on.

KEY SWITCH

The Key Switch is located on the lower left side of the instrument panel, just below the side panel. Turn the key clockwise to turn the ignition "ON" for gas tractors, or to close the starting and charging circuit on diesel tractors. Turn the key counterclockwise for the "OFF" position.



Figure 1

Controls and Instruments

SPECIFICATIONS

SERIES 2000 AND 4000

ALL PURPOSE

GENERAL

Wheelbase @ 52" Tread Width	74.5 inches
Over-all Length @ 52" Tread Width	Series 2000 & 4000—120.83 inches
Over-all Width @ 52" Tread Width	65 inches
Front Tread Width	52 to 76 inches
Rear Tread Width	52 to 76 inches
Rear Tread Width	Power Adjusted Wheels—56 to 84 inches
Crop Clearance	21 inches (approx.)
Turning Space Diameter (with brakes)	18 feet 1 inch
Shipping Weight (Approx.)	
Series 2000 or 4000	3000 lbs.
Tire Size:	
Front-Standard	Series 2000—5.50-16-4 ply Series 4000—6.00-16-4 ply
Rear-Standard	Series 2000—12.4-28-4 ply Series 4000—13.6-28-4 ply
Rear-Optional	Series 2000—13.6-28-4 ply Series 4000—14.9-28-4 ply 14.9-28-6 ply 14.9-24-6 ply All models 14.9-24-4 ply 16.9-24-6 ply
Front Optional	Series 2000—5.50-16-4 ply 7.50-16-6 ply Series 4000—6.00-16-4 ply

CAPACITIES

Fuel Tank	Series 2000—13 U.S. gallons (10.83 Imperial gals.) Series 4000—17 U.S. gallons (14.16 Imperial gals.)
Cooling System	15 U.S. quarts (12.5 Imperial qts.)
Crankcase (including filter)	5 U.S. quarts (4.16 Imperial qts.)
Transmission	
4-speed	6 U.S. quarts (5.00 Imperial qts.)
5-speed	8 U.S. quarts (6.66 Imperial qts.)
Select-O-Speed	11½ U.S. quarts (9.58 Imperial qts.)
Hydraulic Reservoir	8 U.S. quarts (6.66 Imperial qts.)
Rear Axle	Series 2000—8 U.S. quarts (6.66 Imperial qts.) Series 4000—11 U.S. quarts (9.16 Imperial qts.)
Steering Gear Housing	11½ pounds

CLUTCH

Type	4-speed—Single plate, 10 inch 5-speed—Double plate, 9 inch
Pedal free travel	11½ inch

CONTENTS

	Page
SAFETY PRECAUTIONS	2
FOREWORD	3
TRACTOR MODEL AND SERIAL NUMBER	4
CONTROLS AND INSTRUMENTS	5
OPERATION	15
4-Speed and 5-Speed Transmission Tractors—Gasoline Engine	17
Select-O-Speed Transmission Tractor—Gasoline Engine	18
4-Speed and 5-Speed Transmission Tractors—Diesel Engine	19
Select-O-Speed Transmission Tractor—Diesel Engine	21
Operating the Select-O-Speed Transmission	22
The Hydraulic System	24
Attaching Implements	27
Swinging Drawbar	27
Power Take-Off Operation	27
Belt Pulley	32
Wheel Tread Adjustments	34
Wheel Weight	35
MAINTENANCE	39
Inspection	40
Lubrication	40
Service Daily or Every Ten Hours	40
Service Every 100 Hours	42
Service Every 200 Hours	44
Service Every 400 Hours (Diesel Engines)	45
Service Every 600 Hours	46
Service Every 1200 Hours	47
Mechanical Maintenance	47
Cooling System	47
Gasoline Engine Fuel System	51
Diesel Engine Fuel System	54
Diesel Fuel System Adjustments	55
Air Cleaner	61
Diesel Electrical System	61
Gasoline Electrical System	63
Engine	65
Clutch	67
Wheels, Brakes and Tires	68
Tractor Storage	68
ACCESSORIES	70
SPECIFICATIONS	71