



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Ford
Operator's Manual
CL30 & CL40
Skid Steer

Operator's Manual

purchase full manual at

JENSALES.COM
or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
FORD OR IT'S SUCCESSORS. **FORD** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

FO-O-CL30,CL40

FORD

**Compact
Loader**

**CL-30
CL-40[®]**



Operator's Manual

Reprinted

CLICK ANYWHERE FOR MORE DETAILS



CL-40

purchase full manual at



CL-30

Figure 1
Ford CL-30 and CL-40 Compact Loaders

- | | | | |
|-----------------------------|--------------------|----------------------------|----------------------|
| 1. Operator's Guard | 4. Lift Cylinder | 7. Self-Leveling Arms | 10. Fuel filler Caps |
| 2. Operating Control Levers | 5. Bucket Cylinder | 8. Lift Arm | 11. Counterweights |
| 3. Engine | 6. Air Cleaner | 9. Hydraulic Oil Reservoir | |

CLICK ANYWHERE **INDEX** FOR MORE DETAILS

	<i>Page</i>		<i>Page</i>
Air Cleaner	11	Key Switch	5
Air Cleaner Dump Valve	12	Lift Arms and Bucket Operation	7
Air Cleaner Restriction Indicator	6	Lights and Light Switch	5
Ammeter	5	Lubrication and Maintenance	8
Auxiliary Hydraulic Treadle (Optional)	6	Lubrication Chart	8
Battery	14	Mounting Attachments	8
Braking	7	Operation	6
Controls and Instruments	3	Operating the Loader	7
Control Levers	4	Operating Techniques	8
Cooling System	13	Periodic Service Inspections	8
Drive Chain Adjustment	14	Refueling the Loader	11
Drive Control Lever Adjustment	15	Reverse Movement	7
Engine Assembly	3	Safety Precautions	1
Engine Choke Control	6	Seat and Seat Adjustment	4 [®]
Engine Hourmeter	5	Seat Belt	4
Engine Oil Filter	13	Specifications	18
Engine Oil Level Check	12	Starter Button	5
Engine Oil Pressure Gauge (CL-40 only)	6	Starting the Engine	6
Float Detent Adjustment	15	Steering and Braking	3
Forward Movement	7	Stopping the Engine	7
Frame Assembly	3	Temperature Gauge (CL-40 only)	5
Fuel Gauge (Optional)	5	Transmission Indicator Light	6
Hand Throttle	6	Trouble Shooting	15
Hydraulic System	3	Turning	7
Hydraulic System Oil Breather	14	Wheels and Tires	3
Hydraulic System Oil Filter	13		
Hydraulic System Oil Level Check	13		
Hydraulic System Oil Strainer	14		
Hydrostatic Drive	3		

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS