




Gehl
Parts Manual
SL3510 & SL3610
Skid Steer

Parts Manual

JENSALES.COM
or Call 800-443-0625

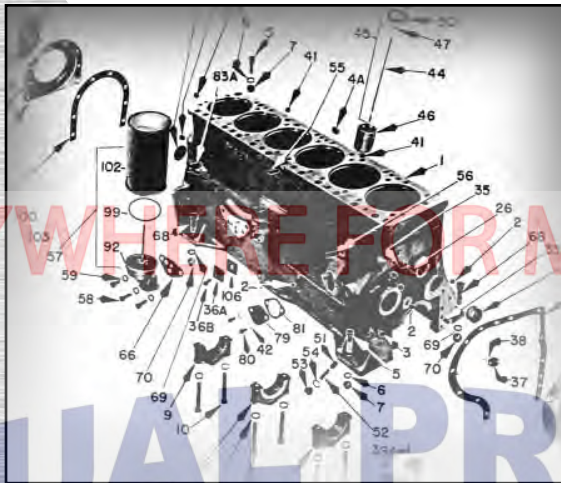

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
GEHL OR IT'S SUCCESSORS. GEHL AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

GE-P-SL3510+

SKID LOADER

Form No.
903677
Replaces
903463

3510/3610

SL3510 GASOLINE
SL3610 DIESEL



SERVICE PARTS MANUAL

TABLE OF CONTENTS

Introduction	Inside Front Cover	Radiator - SL3510 Only (After SN2419)	58-59
Table of Contents	1	Radiator - SL3610 Only (Before SN2801 & After SN2000)	60-61
Decal Locations	2-3	Radiator - SL3610 Only (After SN2800)	62-63
Chassis, Fuel Tank, Rear Grill & Access Covers	4-7	Hydraulic Pumps, Motors, Valves & Cylinders	64-69
Overhead Guard, Seat & Engine Access Cover (Before SN1922-3510 & 1655-3610)	8-9	Columbus Tilt Cylinder	64
Overhead Guard, Seat & Engine Access Cover (After SN1921-3510 & 1654-3610)	10-11	Columbus Lift Cylinder	64
Axles & Drive Chains	12-13	Webster Gear Pump	64
Instrument Panel, Wiring & Battery (Before SN1922-3510 & 1655-3610)	14-15	1000 PSI Relief Valve	65
Instrument Panel, Wiring & Battery (Before SN2420-3510 & 2001-3610 & After SN1921-3510 & 1654-3610) ..	16-17	1200 PSI Relief Valve	65
Instrument Panel, Wiring & Battery (After SN2419-3510 & 2000-3610)	18-19	Columbus Grapple Cylinder	65
Lift/Tilt Control Lever, Throttle & Linkages	20-21	Main Control Valve	66
Traction Control Lever & Linkages	22-23	Left Side Drive Piston Pump	67
Hand Brake & Motor Mounting Plates	24-25	Right Side Drive Piston Pump	68
Lift & Tilt Cylinders & Hydraulics	26-27	Hydrostatic Drive Motor	69
Lift Arm & Hydro-Lock Mechanism	28-29	Auxiliary Control Valve	69
Hydrostatic System (SL3510 - All & SL3610 Before SN1655)	30-31	Options & Accessories	70-79
Hydrostatic System - SL3610 Only (Before SN2531 & After SN1654)	32-33	Work & Warning Light Packages	70-71
Hydrostatic System - SL3610 Only (After SN2530) ..	34-35	Hydraulic Oil Heater Kit	71
Hydraulics System	36-39	Horn Kit	71
Gas Engine - SL3510 Only (Before SN1922)	40-41	Overhead Guard Enclosure	72
Gas Engine - SL3510 Only (Before SN2420 & After SN1921)	42-43	Grapple Fork	73
Gas Engine - SL3510 Only (After SN2419)	44-45	Buckets	74
Diesel Engine - SL3610 Only (Before SN2001)	46-47	Manure Fork (Late Style)	74
Diesel Engine - SL3610 Only (After SN2000)	48-49	Manure Fork (Early Style)	74
Muffler, Air Cleaner & Alternator (Before SN2420-3510 & 2001-3610)	50-51	Dirt & Rock Teeth Kit	75
Muffler, Air Cleaner & Alternator (After SN2419-3510 & 2000-3610)	52-53	Drawbar Kit	75
Radiators (Before SN1871-3510 & 1481-3610)	54-55	Spark Arrestor Muffler Kit	75
Radiators (Before SN2420-3510 & 2266-3610 & After SN1870-3510 & 1480-3610)	56-57	Backhoe Adapting Package	76
		Auxiliary Front Hydraulics Kits	76-77
		Sound Deadening Kits	78-79
		Pallet Fork	79
		Reweldable Bushings, Plug Nuts & Tie-downs	80
		Numerical Index	81-87
		Torque Specifications & Attaching Hardware Tables	Inside Back Cover

GENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

SL3510/3610 - OVERHEAD GUARD, SEAT & ENGINE ACCESS COVER _____
 (After SN1921-3510 & 1654-3610)



SL3510/3610 - OVERHEAD GUARD, SEAT & ENGINE ACCESS COVER
(After SN1921-3510 & 1654-3610)

REF. NO.	PART NO.	PART NAME	NO. REQ.	REF. NO.	PART NO.	PART NAME	NO. REQ.
01	067950a	RING/EXTERNAL RETAINING...	4	22	073157	STIFFENER/ROPS (3610 ONLY)	1
02	056937a	WASHER.....	4		650687	CB 5/16X3/4 (FLN).....	3
03	054925a	BUSHING/PIVOT.....	12	23	073044	TRIM/FLEXIBLE.....	1
04	078726a	BRACKET/RESTRAINT ASSY RT.	2	24	073675	PLUG/PLASTIC.....	2
		(4) 1/2NILN		25	R 13247	SPRING/HITCH PIN.....	1
05	078731a	SWITCH.....	1	26	073103	PIN/STOP.....	1
	650671	RHMS #10-24X1 (N,L).....	1			(2) 1/2P	
06	078730a	SHAFT/PIVOT.....	2	27	074090	PIN/ROLL 3/16X1-1/2.....	1
07	078728a	BRACKET/LEFT.....	2	28	072818	GUARD/OVERHEAD (ROPS-FOPS)	1
08	073043	BELT/SEAT (STANDARD).....	1		650354	CS 5/8X4-1/2 (NILN).....	2
08	054941	BELT/SEAT (CALIFORNIA)....	1		650644	CS 1/2X3 (NILN).....	2
09	078729a	BEARING/PIVOT UPPER.....	2	29	074860	STEM/RUBBER.....	2
10	078942a	SPRING/COMPRESSION.....	2	30	079074a	HINGE/ENGINE COVER ASSY...	2
11	078723a	ACTUATOR/SPRING ASSY.....	2		650419	CS 1/4X1-3/4 (NILN).....	2
	650551	PIN/COTTER 3/32X3/4.....	2	31	072838	WEATHERSTRIP/WINDOW SIDE..	2
12	078734a	COVER/PIVOT.....	2	32	072839	WEATHERSTRIP/WINDOW TOP... & BOTTOM	2
13	078733a	SPRING/BELT RETAINER.....	2	33	072837	WINDOW/CAB REAR.....	1
	650495	CS 1/2X1-1/4 (NILN).....	2	34	079076a	COVER/ENGINE ACCESS.....	1
14	078732a	SLEEVE/PLASTIC SEAT BELT..	2		650687	CB 5/16X3/4 (N,L).....	2
	650944	THMS 1/4X5/8 (NILN).....	2	34	076700b	COVER/ENGINE ACCESS.....	1
14	072864b	SLEEVE/SEAT BELT.....	2		650449	CS 1/4X2-1/2 (NILN).....	2
	650495	CS 1/2X1-1/4 (NILN).....	2	35	072490	ISOLATOR/ROPS REAR MTG....	2
15	078718a	BAR/SECONDARY RES ASSY....	1	36	073004c	BRACKET/ARM REST.....	2
16	072764	SEAT/ASSY.....	1			(4) 3/8FLN	
	650486	CS 5/16X3/4 (L,8P).....	4	37	072872c	ARM REST.....	2
17	057557	WASHER.....	6		072916	FLS 1/4X3/4.....	4
18	064543	MOUNTING/ISOLATION.....	2				
19	078581a	RIVET/BLIND.....	4				
20	078580a	POUCH/OPERATOR'S MANUAL...	1				
20	073120b	POUCH/OPERATOR'S MANUAL...	1				
	072916	FLS 1/4X3/4 (P).....	4				
21	072843	GUARD/CHANNEL ASSY.....	2				
	650945	THMS 1/4X3/4.....	8				

a) USED AFTER SN2419-3510 & 2265-3610 ONLY.

b) USED BEFORE SN2420-3510 & 2266-3610 ONLY.

c) USED BEFORE SN2120-3510 & 1685-3610 ONLY.

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

SL3510/3610 - AXLES & DRIVE CHAINS

