



Hough
Operator's Manual
E211

Hough Scraper

Operator's Manual

JENSALES.COM

or Call 800-443-0625



THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
HOUGH OR IT'S SUCCESSORS. **HOUGH** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

HO-O-E211



INTERNATIONAL[®]
AND
HOUGH[®]

CONSTRUCTION EQUIPMENT

JENSALES[®]

purchase full manual at

MODEL E211
ELEVATING PAY[®] SCRAPER

or Call **800-443-0625**
FORM
OM-E211-1

(Supersedes FORM OM-E211)



INTERNATIONAL HARVESTER COMPANY
401 NORTH MICHIGAN AVE. CHICAGO, ILLINOIS 60611, U.S.A.



CONTENTS

This manual covers the instructions for operation, lubrication, adjustments and maintenance for normal daily care. These instructions are divided into nine sections to simplify your reference to the information most important to you. This manual must be read completely prior to operating this machine, to gain a full knowledge of the machine and its correct normal maintenance and operation.

Refer to each specific section for a complete list of the subjects covered within the section.

SECTION 1 - INTRODUCTION

This section discusses generally the use of this manual, serial numbers and how to ship or store this machine.

1

SECTION 2 - BEFORE STARTING THE NEW MACHINE

This section outlines the special procedures necessary to insure proper "break-in" and care of a new machine.

2

SECTION 3 - INDICATORS AND CONTROLS

The text and illustrations on indicators and controls in this section are designed to tell you "where it is," "what it does," and "how to use it." Read this section carefully.

3

SECTION 4 - PREPARING FOR EACH DAY'S WORK

This illustrates the few simple preparations before each day's work to assure a "lost-time" free work day.

4

SECTION 5 - OPERATING THE MACHINE

This section outlines and illustrates the step-by-step procedures for starting, operating, and stopping the machine.

5

SECTION 6 - OPERATING TECHNIQUES

A few operating suggestions and techniques are discussed here - simple ideas to help ease the work and lengthen the useful life of your machine.

6

SECTION 7 - SCHEDULED MAINTENANCE

This section saves money! A complete scheduled maintenance procedure is outlined here - one that assures less down-time and expense, and more profit and work from your machine. Read and use this section - **INCREASE YOUR PROFIT** through increased machine reliability and availability.

7

SECTION 8 - MAINTENANCE

Much of the maintenance and adjustment procedures outlined in Section 7 need clear explanation. This section is devoted to explaining the "how to do" in an easy style to help you "do it yourself" and get it right.

8

SECTION 9 - SPECIFICATIONS AND CAPACITIES

This section covers the capacities, general dimensions and weights, speeds and torques.

9

INTRODUCTION

Section 1

Page 1

SECTION CONTENTS

	Page No.
GENERAL	1
SERIAL NUMBERS	2
SHIPPING INSTRUCTIONS	3
Truck	3
Railroad Flat Car	3
Towing	3
In-Transit Tire Inflation Pressures	3
MACHINE STORAGE	4
PREPARING STORED MACHINE FOR SERVICE	5

GENERAL



CE-92934

Illust. 1

MODEL E-211 ELEVATING PAY Scraper.