



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

Hough

Parts Manual

H-100

A Series

Parts Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY **JENSALES INC.** WITHOUT THE AUTHORIZATION OF
HOUGH OR IT'S SUCCESSORS. **HOUGH** AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

HO-P-100A

MAJOR SECTION INDEX

DIRECTORY TO

MODEL H-100A "PAYLOADER"

PARTS MANUAL

THIS MANUAL IS USED SPECIFICALLY FOR THE FOLLOWING SERIES OF

MODEL H-100A "PAYLOADER"

THE SERIAL NUMBER OF A "PAYLOADER" CONSISTS OF FOUR PARTS WHICH IDENTIFY IT:

OLD SERIAL NUMBER SYSTEM

	MODEL NO.	SERIES	POWER	UNIT NO.
UD-817	33	A	H	1001
NH-220-CI	33	A	C	1001
DET. DIESEL 6V-71	33	A	G	1001

NEW SERIAL NUMBER SYSTEM

	KIND	CODE	COUNTRY OF ORIGIN	UNIT NO.
UD-817	358	301	U	1001
NH-220-CI	358	302	U	1001
DET. DIESEL 6V-71	358	303	U	1001

IMPORTANT

Each part pictured in this manual is given an identification number which corresponds to the item number in the parts lists of the group. These item numbers are given to identify the part and name of the items wanted. Parts listed herein apply to machines beginning with serial number shown, unless otherwise specified in the serial number column or at the top of the page. Figures in the "Qty" column indicate the number of that part used in the group--not the total for the machine.

The bucket is always considered as the front end of the machine and right (R.H.) or left hand (L.H.) sides are determined by the operator's position when sitting in the seat and facing the bucket.

Always give the following information on all repair parts shown.

1. The Part Number, Name and Quantity of Items needed.
2. The Kind, Power and Unit No. of the machine.
3. When ordering parts for the Transmission, Drive Axle, Pump, Valve or Engine, be sure to give the Serial Number and Model Number of such units.
4. Give the Destination and Method of Shipment desired along with any special invoicing instructions.

The black tabs shown on the right-hand side of this page line up with the corresponding tabs in the catalog. Tabs are quickly located by bending the catalog.

CHASSIS

1

ENGINE

2

ACCESSORY DRIVE & TORQUE CONVERTER

3

TRANSMISSION

4

DRIVE SHAFT

5

SOLID AXLE

6

STEERING AXLE

7

STEERING GEAR

8

LINKAGE

9

HYDRAULIC LINES & FITTINGS

10

HYDRAULIC COMPONENTS

11

ELECTRICAL SYSTEM

12

BRAKE SYSTEM

13

ACCESSORIES & ATTACHMENTS

14

NUMERICAL

15

TABLE OF CONTENTS

SECTION	PAGE
● SECTION 1 CHASSIS	
Boom	1-3
Bucket	1-3
Compartment, Operator's	1-7
Cowling, Sheet	1-9
Frame, Main	1-5
Ladder	1-5
Seat	1-7
● SECTION 2 ENGINE	
Air Cleaner (UD-817)	2-2
Air Cleaner (NH-220-CI)	2-3
Air Cleaner (Detroit Diesel 6V-71)	2-4
Engine (UD-817)	2-7
Engine (NH-220-CI)	2-11
Engine (Detroit Diesel 6V-71)	2-9
Exhaust (UD-817)	2-7
Exhaust (NH-220-CI)	2-11
Exhaust (Detroit Diesel 6V-71)	2-9
Fuel Tank & Lines (UD-817)	2-17
Fuel Tank & Lines (NH-220-CI)	2-15
Fuel Tank & Lines (Detroit Diesel 6V-71)	2-13
Radiator (UD-817)	2-19
Radiator (NH-220-CI)	2-21
Radiator (Detroit Diesel 6V-71)	2-23
Starting Aid (UD-817)	2-7
Starting Aid (NH-220-CI)	2-11
Starting Aid (Detroit Diesel 6V-71)	2-5
● SECTION 3 ACCESSORY DRIVE & TORQUE CONVERTER	
Accessory Drive (33AH-1001-1623)	3-3
Torque Converter (33AH-1001-1623)	3-3
Torque Converter (33AH-1624 & Up)	3-7
Pump, Accessory Drive (33AH-1001-1623)	3-11
● SECTION 4 TRANSMISSION	
Axle Throwout	4-4
Brake, Parking	4-4
Clutch Pack - 1st & 3rd	4-9
Clutch Pack - 2nd & 4th	4-9
Clutch Pack - Forward & Reverse	4-7
Housing, Transmission	4-4
Shaft, Gathering	4-3
Shaft, Idler	4-3
Shaft, Output	4-4
Shaft, Reverse Idler	4-3
Valve, Forward & Reverse	4-12
Valve, Main Regulator	4-10
Valve, Neutral Knockdown	4-11
Valve, Range Selector	4-13
● SECTION 5 DRIVE SHAFT	
Shaft, Drive - Lower Front	5-2
Shaft, Drive - Lower Rear	5-2
Shaft, Drive - Upper Rear	5-3
Shaft, Drive - Upper Rear (Detroit Diesel 6V-71)	5-4

(Continued on following page)

TABLE OF CONTENTS

● SECTION 6 SOLID AXLE

Brake	6-5 & 6-6
Brake Chamber	6-11
Differential	6-9
Housing	6-2 & 6-3
Shaft & Hub	6-5 & 6-6
Slack Adjuster	6-7

● SECTION 7 STEERING AXLE

Brake	7-7 & 7-7B
Brake Chamber	7-5
Differential	7-11
Housing	7-3
Shaft & Hub	7-7 & 7-7B
Slack Adjuster	7-9

● SECTION 8 STEERING GEAR

Gear, Steering	8-3
Valve, Steering	8-3

● SECTION 9 LINKAGE

Accelerator Linkage (IH & Cummins)	9-3
Accelerator Linkage (Detroit Diesel)	9-5
Axle Throwout Linkage	9-7
Brake, Parking Linkage	9-8
Gearshift Linkage	9-11
Steering Linkage	9-12
Valve Control Linkage	9-9

● SECTION 10 HYDRAULIC SYSTEM

Boom and Bucket Lines	10-3
Converter Lines (33AH-1001-1623)	10-9
Converter Lines (33AH-1624 & Up)	10-13
Cooler Lines (33AH-1001-1623)	10-9
Cooler Lines (33AH-1624 & Up)	10-13
Steering Lines	10-17

● SECTION 11 HYDRAULIC COMPONENTS

Cylinder, Boom	11-3
Cylinder, Bucket	11-3
Cylinder, Steering	11-5
Pump, Main	11-7
Reservoir (33AH-1001-1316, 1318 thru 1325, 1328)	11-11
Reservoir (33AH-1317, 1326, 1327, 1329 & Up)	11-13
Valve, Control	11-9
Valve, Relief	11-14

(Continued on following page)

TABLE OF CONTENTS

SECTION	PAGE
SECTION 12 ELECTRICAL SYSTEM	
Wiring - (UD-817)	12-3
Wiring - (NH-220-CI)	12-7
Wiring - (Detroit Diesel 6V-71)	12-11
SECTION 13 BRAKE SYSTEM	
Compressor, Air (UD-817)	13-2
Compressor, Air (NH-220-CI) (See Engine Manual)	
Compressor, Air (Detroit Diesel 6V-71) (See Engine Manual)	
Connections, Brake - Air	13-5
Governor, Brake	13-12
Horn, Air	13-11
Valve, Emergency Control	13-15
Valve, Safety	13-14
Valve, Treadle	13-13
SECTION 14 ACCESSORIES & ATTACHMENTS	
Decal	14-2
Tool	14-2
Optional Accessories and Attachments	14-3
SECTION 15 NUMERICAL INDEX	15-1

JENSALES.COM

or Call 800-443-0625

SECTION 1

CHASSIS

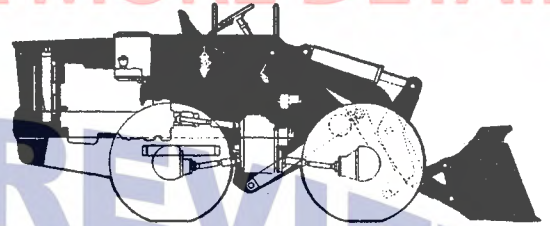


Table Of Contents

Group

Page

BOOM.....	1-3
BUCKET.....	1-3
COMPARTMENT, OPERATOR'S.....	1-7
COWLING, SHEET.....	1-9
FRAME, MAIN.....	1-5
LADDER.....	1-5
SEAT.....	1-7