

A MANUAL FOR HOUGH

Operator's Manual For Model H-400 Payloader



THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF **HOUGH** OR IT'S SUCCESSORS. **HOUGH** AND IT'S SUCCESSORS ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS, AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

HO-O-H-400

TABLE OF CONTENTS

TO THE OWNER Inside Front Cover

SAFETY PRECAUTIONS i

READERS GUIDE ii

SECTION I INTRODUCTION

General	1-1
Serial Numbers	1-2
Preliminary Checks	1-3
Safety Precautions	1-3
Specifications	1-5

SECTION II OPERATION

General	2-1
Operator's Compartment	2-1
Instrument Panel	2-2
Control Pedals	2-5
Control Levers	2-6
Automatic Boom Kick-out Control	2-9
Safety Bar and Pins	2-9
Starting	2-10
Operation Check	2-12
Working the "PAYLOADER"	2-12
Engine Shutdown	2-15
Storage	2-16
Alcohol Injector and Shift Modulator	2-17

SECTION III MAINTENANCE

General	3-1
10-Hour Maintenance Operations	3-1
100-Hour Maintenance Operations	3-10
200-Hour Maintenance Operations	3-14
500-Hour Maintenance Operations	3-21
1000-Hour Maintenance Operations	3-25
General Maintenance	3-28
Fuel and Oil Handling	3-28
Engine, Torque Converter and Transmission	3-29
Drive Line	3-38
Brake System	3-45
Steering System	3-49
Hydraulic System	3-52
Hydraulic System Relief Valves and Adjustments	3-63
Hydraulic System Component Maintenance	3-66
Electrical System	3-73
Frame, Linkage and Welding Maintenance	3-79

LIST OF TABLES

TABLE I	Normal Gauge Readings	1-8
TABLE II	Lubrication Chart	3-3
TABLE III	Specific Gravity Temperature Correction Chart.	3-13
TABLE IV	Drive Belt Tension	3-18
TABLE V	Exhaust Back Pressure (GM)	3-22
TABLE VI	Crankcase Pressure (GM)	3-23

LIST OF DIAGRAMS

Figure 1-5a	Dimension Diagram	1-5
Figure 3-20a	Air-Over-Hydraulic Brake System	3-20
Figure 3-30a	Torque Converter and Transmission-schematic	3-30
Figure 3-51a	Steering Control Valve Flow Diagram	3-51
Figure 3-53a	Model H-400, Boom and Bucket Circuits Flow Diagram	3-53
Figure 3-59a	Steering Circuit Flow Diagram	3-59
Figure 3-61a	Hydraulic System, Cooler Flow Diagram	3-61
Figure 3-66a	Automatic Kick-out Control System	3-66
Figure 3-74a	Wiring Diagram (Cummins)	3-74
Figure 3-75a	Wiring Diagram (GM)	3-75

LIST OF TROUBLESHOOTING CHARTS

TORQUE CONVERTER AND TRANSMISSION	3-35
DRIVE LINE	3-44
BRAKE SYSTEM	3-48
STEERING SYSTEM	3-51
TRACTOR LOADER HYDRAULIC SYSTEM	3-72
ELECTRICAL SYSTEM	3-76
TRACTOR FRAME AND LINKAGE	3-83

LIST OF ILLUSTRATIONS

GENERAL		
Figure 1-1ia	General arrangement	1-ii
Figure 1-2a	Tractor-shovel serial number plate	1-2
Figure 1-5a	Dimension diagram	1-5
Figure 2-1a	Operator's compartment	2-1
Figure 2-2a	Instrument panel	2-2
Figure 2-14a	Bulk material loading sequence	2-14
Figure 2-15a	Digging or excavating	2-15
Figure 2-15b	Backdragging or levelling	2-15
Figure 2-16a	Transporting a load	2-16
Figure 3-2a	Lubrication diagram	3-2

ENGINE, TRANSMISSION AND TORQUE CONVERTER

Figure 1-2b	Cummins engine serial number plate	1-2
Figure 1-2c	General Motors engine serial number plate	1-2
Figure 1-2d	Transmission serial number plate	1-2
Figure 1-2e	Torque converter serial number plate	1-2
Figure 2-4a	Tachometer installation	2-4
Figure 2-4b	GM shutdown controls	2-4
Figure 2-5a	GM emergency shutdown unit	2-5
Figure 2-5b	Cold weather starting aid (Cummins)	2-5
Figure 2-5c	Cold weather starting aid (GM)	2-5
Figure 2-7a	Transmission control levers	2-7
Figure 2-7b	Hand throttle lever	2-7
Figure 2-11a	Cold weather starting aid (GM)	2-11
Figure 3-6b	Engine drive support fitting	3-6
Figure 3-7a	Engine oil level check (Cummins)	3-7
Figure 3-7b	Engine dipstick (GM)	3-7
Figure 3-7c	Fuel tank filter	3-7
Figure 3-8a	Fuel filter and strainer (GM)	3-8
Figure 3-8b	Transmission filler tube	3-8
Figure 3-10a	Transmission accumulator	3-10
Figure 3-14a	Full-flow oil filter (Cummins)	3-14
Figure 3-15a	Assembling lubricating oil filter bag (Cummins)	3-15
Figure 3-16a	Engine oil filter installation (GM)	3-16
Figure 3-16b	Air cleaner assembly	3-16
Figure 3-17a	Air cleaner vacuum gauge	3-17
Figure 3-17b	Crankcase breather assembly (Cummins)	3-17
Figure 3-17c	Fuel pump filter screen (Cummins)	3-17
Figure 3-18a	Belt tension check	3-18
Figure 3-18b	Corrosion resistor filters (Cummins)	3-18
Figure 3-22a	Bypass filter element and case (Cummins)	3-22
Figure 3-22b	Bypass filter installation (Cummins)	3-22
Figure 3-22c	Air box drain tubes	3-22
Figure 3-23a	Top view of transmission filter	3-23
Figure 3-23b	Fuel filter installation (Cummins)	3-23
Figure 3-25a	Testing thermostat	3-25

Figure 3-26a	Installing thermostat (Cummins)	3-26
Figure 3-26b	Right-hand view of engine compartment (GM)	3-26
Figure 3-27a	Transmission installation	3-27
Figure 3-30a	Torque converter and transmission-schematic	3-30
Figure 3-32a	Regulator and control valve	3-32
Figure 3-33a	Lubrication pressure check point	3-33
Figure 3-46a	Compressor governor, exploded view	3-46

DRIVE LINE

Figure 2-13a	Tire patterns and their uses	2-13
Figure 3-5b	Rear axle bolster fitting	3-5
Figure 3-6d	Rear lower drive shaft fitting	3-6
Figure 3-11a	Intermediate drive block	3-11
Figure 3-11b	Wheel hub	3-11
Figure 3-11c	Rear differential installation	3-11
Figure 3-39a	Intermediate drive block, exploded view	3-39
Figure 3-40a	Wheel hub assembly, cross-sectional view	3-40
Figure 3-42a	Drive shafts, exploded view	3-42
Figure 3-43a	Valve stem and tube assembly	3-43

BRAKE SYSTEM

Figure 2-8b	Hand brake lever	2-8
Figure 2-17a	Alcohol injector system	2-17
Figure 2-20a	Air control system	2-20
Figure 2-21a	Flow regulator valve	2-21
Figure 3-9a	Air tank drain valve	3-9
Figure 3-20a	Air-over-hydraulic brake system	3-20

STEERING SYSTEM

Figure 3-5c	Steering cylinder fitting	3-5
Figure 3-5d	Lower articulation joint fitting	3-5
Figure 3-5e	Steering control rod fitting	3-5
Figure 3-6a	Upper articulation joint fitting	3-6
Figure 3-12a	Steering gear chuck lube plug	3-12
Figure 3-50a	Steering gear	3-50
Figure 3-51a	Steering control valve flow diagram	3-51
Figure 3-59a	Steering circuit flow diagram	3-59
Figure 3-60a	Steering gear assembly	3-60

HYDRAULIC SYSTEM

Figure 2-7c	Boom control lever	2-7
Figure 2-8a	Bucket control lever	2-8
Figure 2-9a	Automatic boom kick-out control	2-9
Figure 3-6c	Work cylinder fittings	3-6
Figure 3-9b	Hydraulic reservoir installation	3-9
Figure 3-53a	Model H-400, boom and bucket circuits flow diagram	3-53
Figure 3-54a	Old style main control valve	3-54
Figure 3-55a	Old style large relief adjustment	3-55
Figure 3-56a	New style main control valve	3-56
Figure 3-57a	Bucket circuit relief valve	3-57
Figure 3-58a	Hydraulic pump - vanetype	3-58
Figure 3-58b	Control valve installation	3-58
Figure 3-61a	Hydraulic system, cooler flow diagram	3-61
Figure 3-62a	Cooler circuit relief valve and back to pump delivery tube	3-62
Figure 3-63a	Hydraulic system reservoir	3-63
Figure 3-64a	Control valve panel removed	3-64
Figure 3-64b	Relief valve adjustment	3-64
Figure 3-66a	Automatic kick-out control system	3-66
Figure 3-69a	Loader hydraulic cylinders	3-69
Figure 3-70a	Seal replacement tools	3-70
Figure 3-70b	Control spool keeper installed	3-70
Figure 3-70c	"O" ring installation	3-70
Figure 3-71a	Spool cap end assembly	3-71
Figure 3-71b	Front "O" ring installation	3-71

ELECTRICAL SYSTEM


Figure 1-3a	Battery cable connections	1-3
Figure 2-19a	Shift modulator electrical sensing system	2-19
Figure 2-22a	Connecting jumper wire	2-22
Figure 2-22b	Switch test	2-22
Figure 2-23a	Switch test	2-23
Figure 2-23b	Positioning chassis for testing	2-23
Figure 2-24a	Pressure switch in directional valve	2-24
Figure 3-12b	Typical battery installation	3-12
Figure 3-13a	Battery state of charge	3-13
Figure 3-73a	Method of attaching booster cables	3-73
Figure 3-74a	Wiring diagram (Cummins)	3-74
Figure 3-75a	Wiring diagram (GM)	3-75

FRAME, LINKAGE AND WELDING MAINTENANCE

Figure 1-4a	Safety bar installed	1-4
Figure 2-9b	Safety bar and pins	2-9
Figure 2-10a	Safety bar in straight lock position	2-10
Figure 2-10b	Safety bar in full turn lock position	2-10
Figure 3-5a	Accelerator cross shaft fittings	3-5
Figure 3-80a	Center hinge pin adjustment	3-80
Figure 3-81a	Welding process	3-81
Figure 3-82a	Cutting edge tip replacement	3-82

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

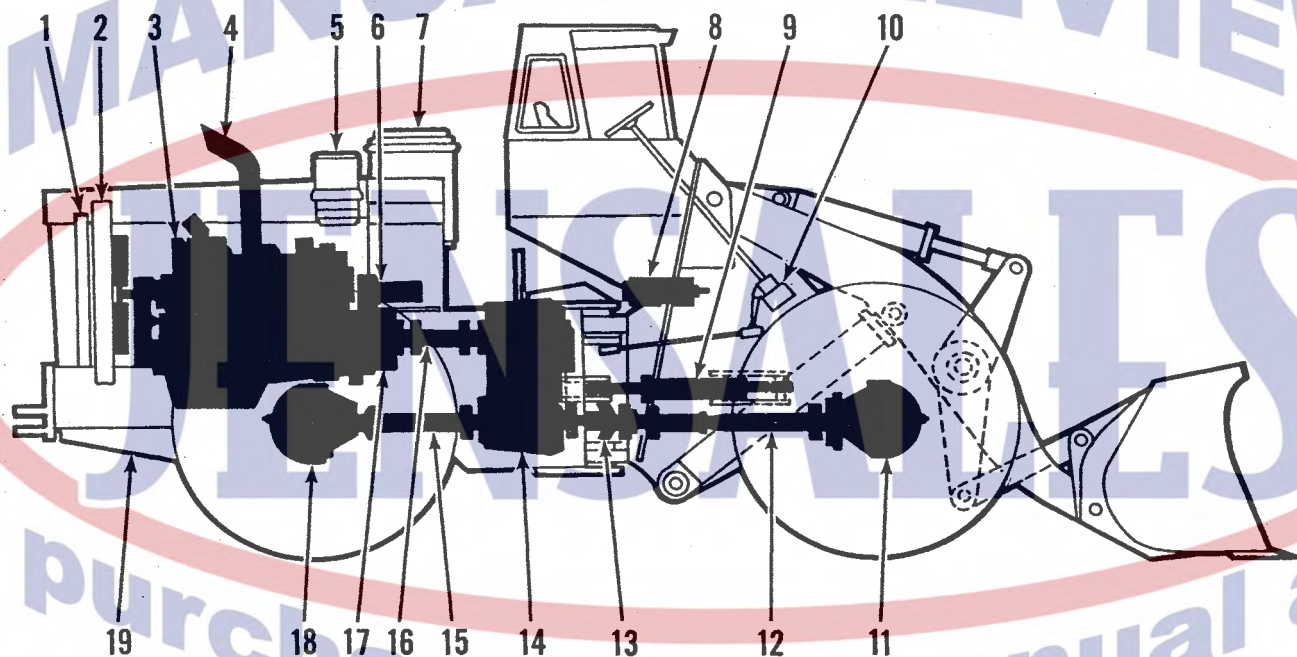

POWER TRAIN = [REDACTED]

CE-89715

- | | |
|----------------------------|----------------------------|
| 1. Oil cooler | 11. Front drive axle |
| 2. Radiator | 12. Front drive shaft |
| 3. Engine | 13. Parking brake |
| 4. Exhaust stack | 14. Transmission |
| 5. Air cleaner | 15. Rear lower drive shaft |
| 6. Hydraulic pumps | 16. Upper drive shaft |
| 7. Hydraulic reservoir | 17. Torque converter |
| 8. Hydraulic control valve | 18. Rear drive axle |
| 9. Steering cylinder | 19. Fuel tank |
| 10. Steering gear | |

Figure 1-ii.a. Model H-400 "PAYLOADER" General Arrangement