



International Harvester

Operator's Manual

250

Series C

Crawler Loader

Operator's Manual

JENSALES.COM

or Call 800-443-0625



THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
INTERNATIONAL HARVESTER OR IT'S SUCCESSORS. INTERNATIONAL HARVESTER AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

IH-O-250C

CLICK ANYWHERE FOR MORE DETAILS

INTERNATIONAL 250
SERIES C LOADER

FORM
OMA-L250C-3

APRIL, 1981

Serial Number 12201 and up

(Supersedes Form OMA-L250C-2)

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

It is the policy of International Harvester Company to improve its products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication and mailed automatically to distributors. It is recommended that customers contact their distributor for information on the latest revision.

CLICK ANYWHERE FOR MORE DETAILS

SECTION INDEX

This manual covers the instructions for operation, lubrication, adjustments and maintenance for normal daily care. These instructions are divided into ten sections to simplify your reference to the information most important to you. Refer to Table of Contents on next page for a complete list of the subjects covered within each section.

This manual has been prepared to help you operate and maintain your machine with utmost efficiency and safety. Read this manual thoroughly and learn your machine before you attempt to operate it.

SECTION 1 — INTRODUCTION

This section discusses generally the use of this manual, serial numbers and how to ship or store this machine.

SECTION 2 — BEFORE STARTING THE NEW MACHINE

This section outlines the special procedures necessary to insure proper "break-in" and care of a new machine.

SECTION 3 — INSTRUMENTS AND CONTROLS

The text and illustrations on instruments and controls in this section are designed to tell you "where it is," "what it does," and "how to use it." Read this section carefully.

SECTION 4 — PREPARING FOR EACH DAY'S WORK

This illustrates the few simple preparations *before* each day's work to assure a work day free of "down-time."

SECTION 5 — OPERATING THE BASIC MACHINE

This section outlines and illustrates the step-by-step procedures for starting, operating and stopping the basic machine.

SECTION 6 — OPERATING THE LOADER EQUIPMENT

This section describes the methods for operating and adjusting the various equipment available with this machine.

SECTION 7 — OPERATING TECHNIQUES

A few operating suggestions and techniques are discussed with simple ideas to help ease the work and lengthen the useful life of your machine.

SECTION 8 — SCHEDULED MAINTENANCE

A complete scheduled maintenance procedure is outlined here — one that assures less down-time and expense, and more profit and work from your machine. Read and use this section.

SECTION INDEX

SECTION 9 – MAINTENANCE

Many of the maintenance and adjustment procedures outlined in Section 8 need clear explanation. This section is devoted to explaining the “how to do” in an easy style to help you “do it yourself” and get it right.

SECTION 10 – SPECIFICATIONS AND CAPACITIES

This section covers the capacities, general dimensions and weights, speeds and torques.

MANUAL PREVIEW

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

TABLE OF CONTENTS

PAGE I

	Page
SECTION 1. INTRODUCTION	1
SAFETY PRECAUTIONS	1
BEFORE STARTING THE ENGINE	1
OPERATION	1
GENERAL	5
SERIAL NUMBERS	6
MACHINE TRANSPORT	6
SHIPPING INSTRUCTION	6
MOVING A DISABLED MACHINE	6
MACHINE STORAGE	7
PREPARING FOR STORAGE	7
SERVICING ENGINE DURING STORAGE	7
PREPARING FOR OPERATION	9
SECTION 2. BEFORE STARTING THE NEW MACHINE	1
INITIAL SERVICE PROCEDURE	1
LUBRICATION WHEN SHIPPED	2
SECTION 3. INSTRUMENTS AND CONTROLS	1
UNIVERSAL SYMBOLS FOR INSTRUMENTS AND CONTROLS	1
GENERAL	2
1. ENGINE COOLANT TEMPERATURE GAUGE	3
2. VOLTMETER	3
3. HORN BUTTON	3
4. TORQUE CONVERTER OIL TEMPERATURE GAUGE	3
5. TRANSMISSION CLUTCH OIL PRESSURE GAUGE	3
6. LIGHT SWITCH	3
7. HOURMETER	4
8. ENGINE OIL PRESSURE GAUGE	4
9. AIR CLEANER SERVICE INDICATOR	4
10. ETHER INJECTOR SWITCH BUTTON (IF EQUIPPED)	4
11. STARTING SWITCH BUTTON	4
12. TRANSMISSION PRESSURE FILTER SERVICE INDICATOR	4
14. STEERING PEDALS	5
15. BRAKE/DECELERATOR PEDAL	5
16. TRANSMISSION "HI-LOW" SHIFT LEVER	5
17. TRANSMISSION NEUTRAL LOCK LEVER	6
18. TRANSMISSION SHIFT LEVER	6
19. ENGINE SPEED CONTROL LEVER	6
20. ELECTRICAL SYSTEM MASTER SWITCH	6
21. SEAT ADJUSTMENT	6
22. BRAKE/DECELERATOR PEDAL LOCK	7
23. AIR CONDITIONING DIRECTION CONTROL	7
24. LOUVERS	7
25. AIR CONDITIONING TEMPERATURE CONTROL	7
26. FAN SPEED CONTROL KNOB	7
27. FRESH AIR CONTROL	7
SEAT BELT (IF EQUIPPED)	8
FOOT STEERING	8
HYDRAULIC VALVE CONTROL LEVERS	8
SINGLE LEVER CONTROL (STANDARD)	8
INDIVIDUAL CONTROL LEVERS (IF EQUIPPED)	8

TABLE OF CONTENTS

	Page
SECTION 4. PREPARING FOR EACH DAY'S WORK	1
1. PRE-CLEANER HOOD	1
2. COOLANT LEVEL	1
3. FUEL TANK DRAIN VALVE	1
4. FUEL SHUT-OFF VALVE	1
5. FUEL TANK	2
6. PRIMARY FUEL FILTER WATER SEPARATOR DRAIN VALVE	2
LUBRICATION	2
SECTION 5. OPERATING THE BASIC MACHINE	1
MACHINE PRECAUTIONS	1
STARTING THE ENGINE	3
DRIVING THE MACHINE	5
SHIFTING THE TRANSMISSION	5
SHIFTING THE "HI-LO" SHIFT LEVER	6
STEERING THE MACHINE	7
STEERING LEVERS (IF EQUIPPED)	7
FOOT STEERING	7
DOWNGRADE OPERATION	8
OPERATING OVER AN OBSTRUCTION	8
STOPPING THE MACHINE	8
PARKING	9
STOPPING THE ENGINE	10
SECTION 6. OPERATING THE LOADER EQUIPMENT	1
GENERAL	1
CONTROL LEVER OPERATION	1
SINGLE LEVER CONTROL (STANDARD)	1
CLAM CONTROL LEVER (IF EQUIPPED)	2
RIPPER CONTROL LEVER (IF EQUIPPED)	2
INDIVIDUAL LEVERS (IF EQUIPPED)	3
BUCKET LIFT CONTROL LEVER	3
BUCKET DUMP CONTROL LEVER (IF EQUIPPED)	4
POSITION INDICATOR	5
LOADERS EQUIPPED WITH STANDARD BUCKET	5
LOADERS EQUIPPED WITH MULTI-PURPOSE BUCKET	5
DEPTH-OF-CUT INDICATOR	7
SELF-LEVELING AND AUTOMATIC KICK-OUT	7
AUTOMATIC KICK-OUT ADJUSTMENT	7
SELF-LEVELING ADJUSTMENT	8
SECTION 7. OPERATING TECHNIQUES	1
GENERAL	1
TRANSPORTING, LOADING OR PILING	2
DIGGING AND CLEARING	4
SPREADING AND LEVELING	6
IMPROPER USE OF THE MULTI-PURPOSE BUCKET	8
SECTION 8. SCHEDULED MAINTENANCE	1
SCHEDULED MAINTENANCE GUIDE	1
LUBRICATION WHEN SERVICED	5
SELECTION OF LUBRICANTS	5
LUBRICANT SPECIFICATIONS AND CAPACITIES	6
LOADER AND LOADER EQUIPMENT SERVICE GUIDE	8

TABLE OF CONTENTS

PAGE III

	Page
LOADER AND LOADER EQUIPMENT SERVICE POINTS	10
ITEM 1 — RADIATOR COOLANT LEVEL	10
ITEM 2 — ENGINE LUBRICATING OIL FILTERS	10
ITEM 3 — AIR CLEANER ELEMENT	10
ITEM 4 — BRAKE CONTROL LINKAGE	10
ITEM 5 — UNIVERSAL JOINT	10
ITEM 5A — STEERING BRAKE SHAFT	10
ITEM 6 — PRIMARY FUEL FILTER (WATER)	11
ITEM 7 — SPROCKET DRIVE HOUSING OIL LEVEL	11
ITEM 8 — FUEL TANK SEDIMENT	11
ITEM 9 — FUEL TANK STRAINER	11
ITEM 10 — TRANSMISSION SYSTEM OIL	12
ITEM 11 — SPROCKET DRIVE HOUSING OIL	12
ITEM 12 — TRANSMISSION SYSTEM OIL LEVEL	12
ITEM 13 — TRANSMISSION SYSTEM SUCTION FILTER ELEMENT	13
ITEM 14 — TRANSMISSION SYSTEM PRESSURE FILTER ELEMENTS	13
ITEM 15 — GOVERNOR CONTROL LINKAGE	13
ITEM 16 — FUEL OIL FILTER ELEMENTS	13
ITEM 17 — CRANKCASE OIL	13
ITEM 18 — CRANKCASE OIL LEVEL	13
ITEM 19 — HYDRAULIC RESERVOIR BREATHER FILTER	13
ITEM 20 — HYDRAULIC OIL LEVEL	14
ITEM 21 — HYDRAULIC FILLER STRAINER	14
ITEM 22 — HYDRAULIC SYSTEM OIL	14
ITEM 23 — HYDRAULIC RESERVOIR SUCTION STRAINER	14
ITEM 24 — HYDRAULIC RETURN FILTER	14
ITEM 25 — EQUIPMENT CONTROLS	14
ITEM 26 — STEERING BRAKE SHAFT	14
ITEM 27 — LOADER LINKAGE	14
ITEM 28 — TRANSMISSION SYSTEM BREATHER	15
ITEM 29 — FAN DRIVE IDLER BEARING	15
ITEM 30 — RIPPER (IF EQUIPPED)	15
ITEM 31 — COOLANT FILTER	15
ITEM 32 — ENGINE COOLANT	15
MULTI-PURPOSE BUCKET	15
SCARIFIER FRAME CONNECTING PIN	15
SCARIFIER CYLINDER CONNECTING PIN	15
 SECTION 9. MAINTENANCE	 1
SEASONAL PREPARATION	1
FUEL SYSTEM	1
LUBRICATION	1
COOLING SYSTEM	1
ELECTRICAL SYSTEM	1
AIR CLEANING SYSTEM	2
AIR CLEANER	2
PRECAUTIONS	2
AIR CLEANER SERVICE INDICATOR	2
SERVICE INDICATOR ORIFICE FITTING	2
OUTER FILTER ELEMENT	2
INNER FILTER ELEMENT	5
PRE-CLEANER HOOD	5
CRANKCASE BREATHER	5
TRANSMISSION SYSTEM BREATHER	6

TABLE OF CONTENTS

	Page
BELTS	6
GENERAL	6
CHECKING TENSION	7
ADJUSTMENT	9
REPLACEMENT	10
CAB WITH AIR CONDITIONING	11
INITIAL COOLING	11
STALE AIR AND SMOKE	11
AIR CONDITIONER	11
AIR CONDITIONER FILTERS	12
COOLING SYSTEM	13
GENERAL	13
CARE OF THE SYSTEM	13
COOLANT SELECTION	13
ANTI-FREEZE	13
COOLING CONDITIONERS	14
MAINTENANCE OF COOLING SYSTEM INHIBITORS	14
CHECKING COOLANT LEVEL	15
DRAINING THE SYSTEM	15
FILLING THE SYSTEM	16
CLEANING THE SYSTEM	16
CHANGING THE COOLANT FILTER	16
CLEANING THE RADIATOR	17
RADIATOR CAP	17
THERMOSTATS	17
ENGINE OIL COOLER	20
TRANSMISSION COOLER	20
WATER PUMP	20
REVERSIBLE FAN (IF EQUIPPED)	21
DECELERATOR AND GOVERNOR CONTROL ADJUSTMENT (FOR MACHINES WITH FOOT STEERING)	21
GENERAL	21
GOVERNOR CONTROL ADJUSTMENT	21
DECELERATOR ADJUSTMENT	23
DECELERATOR (USED WITH STEERING LEVERS) (IF EQUIPPED)	23
CHECKING OPERATION	23
ELECTRICAL SYSTEM	24
PRECAUTIONS	24
ALTERNATOR WITH INTEGRAL REGULATOR	24
VOLTAGE ADJUSTMENT	25
CRANKING MOTOR	25
CIRCUIT BREAKER	25
STORAGE BATTERIES	25
ENGINE LUBRICATING OIL FILTERS	27
REPLACEMENT	27
ENGINE LUBRICATING OIL	27
CHANGING CRANKCASE OIL	27
ENGINE VALVE CLEARANCE ADJUSTMENT	28
HAND CRANKING	29
ETHER INJECTOR (IF EQUIPPED)	29
INSPECTION AND CLEANING	29

TABLE OF CONTENTS

PAGE V

	Page
CHANGING THE ETHER FLUID CONTAINER	30
FUEL SYSTEM	30
GENERAL	30
DIESEL FUEL SPECIFICATION	31
FUEL INJECTION PUMP	31
FUEL STRAINER	31
FUEL FILTERS	32
DRAINING THE FUEL TANK	33
HYDRAULIC SYSTEM (LOADER EQUIPMENT)	33
CHECKING OIL LEVEL	33
DRAINING THE SYSTEM	33
FILLING THE SYSTEM	34
VENTING THE SYSTEM	35
SERVICING THE RETURN FILTER	35
SERVICING THE SUCTION STRAINER	36
SERVICING THE BREATHER FILTER	36
SERVICING THE FILLER STRAINER	37
LOADER EQUIPMENT	38
HYDRAULIC CYLINDER PACKINGS	38
BUCKET TEETH	38
SEAT BELT (IF EQUIPPED)	39
ADJUSTING THE BELT	39
STEERING PLANETARY CLUTCH AND PIVOT BRAKE ADJUSTMENT	39
GENERAL	39
PIVOT BRAKE ADJUSTMENT	40
STEERING LEVERS (IF EQUIPPED)	40
STEERING PEDALS	40
STEERING PLANETARY CLUTCH ADJUSTMENT	44
STEERING HAND LEVER OR FOOT PEDAL LINKAGE ADJUSTMENT	45
TRACKS	45
GENERAL	45
TRACK SHOE BOLTS	45
PROPER ADJUSTMENT	46
CHECKING TENSION	46
ADJUSTING THE TENSION	46
TRACK ADJUSTER MECHANICAL LOCK (STEEL MILL ONLY)	48
GENERAL	48
ADJUSTMENT	48
TRANSMISSION SYSTEM FILTERS	48
GENERAL	48
PRESSURE FILTER	49
SUCTION FILTER	50
TURBOCHARGER	51
PRECAUTIONS	51
PRIMING THE TURBOCHARGER	51
SECTION 10. SPECIFICATIONS AND CAPACITIES	1
DIMENSIONS	1
REFILL CAPACITIES (APPROXIMATE)	3
SPECIFICATIONS	3
TORQUE VALUES FOR STANDARD FASTENERS	5
TORQUE VALUES FOR HOSE CLAMPS	6
TORQUE VALUES FOR SPLIT FLANGE CONNECTIONS	6
TORQUE VALUES FOR HYDRAULIC TUBES AND FITTINGS	7