



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

International Harvester

Operator's Manual
for FARMALL

4366

Turbo Diesel

Operator's Manual

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
INTERNATIONAL HARVESTER OR IT'S SUCCESSORS. INTERNATIONAL HARVESTER AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

IH-O-4366

INTERNATIONAL

4366

TRACTOR

MANUAL PREVIEW

JENSALES[®]

INTERNATIONAL[®]

purchase full manual at

OPERATOR'S MANUAL

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS



D-466

1 - Front axle serial number



1 - Tractor serial number

2 - Transfer case serial number

1 - Rear axle serial number

2 - Transfer case serial number

INTRODUCTION

CLICK ANYWHERE FOR MORE DETAILS



International 4366 Articulated Turbo Diesel Tractor.



1 - Right

2 - Rear

3 - Left

4 - Front

Terms of location.

CAB EQUIPMENT PREVENTIVE MAINTENANCE

CAB AIR FILTERS



- 1 - Wing nut and flat washer
- 2 - Cover

Cover shown on right side of cab.
Left side is similar.


The cab is equipped with fresh air intake filters located in the front upper corners of the cab on the left and right sides. They are removed from the outside.



CAUTION! The cab air filters are not designed to filter out harmful chemicals. When using agricultural chemicals, follow the instructions given by the chemical manufacturer.

The filters must be cleaned frequently as required by operating conditions, in order to insure full flow of fresh air.

Remove the wing nut, flat washer, and cover.

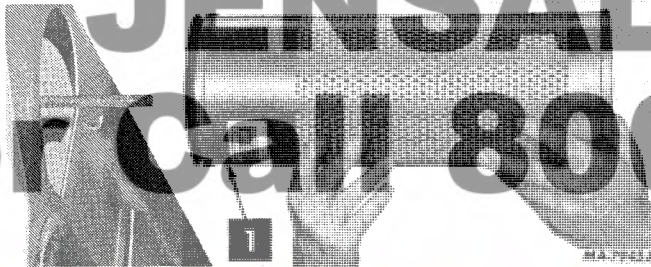

- 1 - Cab air filter

Left side shown. Right side is identical

Remove the inner wing nut. Then, remove the element by pulling it straight out.

After removing the filters, they may be cleaned by directing clean dry compressed air up and down the pleats on the "Clean Side" (inside) of the element. Continue this until the element is clean.

NOTE: The paper element must be handled with care. It will not stand the abuse of rapping on a tire or hard surface.

An element cleaning tool (No. 407 073 R1) for use with compressed air, available from your International Harvester dealer, will do a faster and more efficient job of removing dust than a regular air gun or nozzle.

NOTE: Air pressure at the nozzle must not exceed 100 pounds per square inch.

When cleaning, carefully inspect the element for any evidence of damage (such as small holes or tears) and immediately replace a damaged filter.

Reinstall the filter carefully. Tighten the wing nut securely.

Reinstall and secure cover.

AIR CONDITIONER CONDENSER



- 1 - Sight glass
- 2 - Air conditioner condenser
- 3 - Speed transmission oil cooler
- 4 - Engine radiator

Grille removed to show parts.

The condenser is located in front of the radiator.