



CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

International Harvester

Operator's Manual

56

4 Row Planter

purchase full manual at

JENSALES.COM

or Call 800-443-0625



CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
INTERNATIONAL HARVESTER OR IT'S SUCCESSORS. INTERNATIONAL HARVESTER AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

Operator's Manual

IH-O-56 PLT

OPERATOR'S MANUAL

SETTING UP INSTRUCTIONS

CLICK ANYWHERE FOR MORE DETAILS

MANUAL PREVIEW

JENSALES

purchase full manual at

JENSALES.COM

or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

CONTENTS

The instructions contained in this manual

also cover the 455 and 456 planters

Description	Page	Description	Page
Adjusting and Operating.	4 to 41	Rotary Valve (Hill-Drop Planter)	10
Beet Planting Equipment	27	Rotor Lug Arrangements	11
Beet Seed Plates	27	Row Widths	5 to 9
Distribution Tables	18	Fertilizer Unit Settings	7 to 9
Grain Sorghum or Maize	18	Marker Settings	6
Soybeans	18	Seeds per Hill (Hill-Drop Planter)	11
Drilling Distances	15	Accumulator Plate	11
Drilling Seed (Hill-Drop Planter)	13	Seed Plates	30 to 41
Replacing Hill-Drop Equipment	12	Edge Drop Plates	30 to 34
Fertilizer Unit	19 to 23	Flat Drop Plates	35, 36
Cleaning the Hoppers	19 to 21	Hill Drop Plates	37
Disengaging Fertilizer Drive	23	Timing the Seed Plate and Rotor (Hill-Drop Planter)	12
Operation	19	Lubrication	61 to 63
Range of Distribution	21, 22	Setting Up	42 to 49
Hill Spacings for (Hill-Drop Planter)	16, 17	Special Equipment	49 to 58
Hopper Bottom Equipment	25 to 29	Blade and Disk Covering Attachments	51
Beet Planting	27	Chain Shield	60
Beet Seed Plates	27	Covering Blade (Double-Disk Fertilizer Opener)	56
Blank Seed Plates	28	Depth Band Attachment	50
Bottom Plate-Corn	25	Disk Furrowing Attachment	50
Pointed Knock-out Pawl	26	Double Disk Opener	49
Roller Knock-out Pawl	26	Fertilizer Unit	53 to 55
Seasonal Check-Up	28, 29	Hoppers and Openers	53 to 55
Types of Seed Plates	28	Intermediate Drive	53
Lift Rods and Pressure Springs	10	Gauge Shoe Attachment	59
Marker Operation	24	Hitch Extension Attachment	59
Connecting Lift Chain	24	Hitch Plate Attachment	56
Transporting	24	Jack Attachment	60
Hopper Bottom Plate	25	Outside Scrapers for Double Disk Fertilizer Opener	56
Pointed Knock-out Pawl	26	Press Wheel Scrapers	51
Roller Knock-out Pawl	26	Rotary Hoe Strip Tillage Attachment	58
Operation	4, 5	Rubber Press Wheel Tires	57
Beginning to Plant	4	Runner Fertilizer Opener	52
Drawbar Extension Plate (Special)	4	Safety Equipment Bracket	57
General	4	Seed Firming Wheel Attachment	52
Hydraulic Cylinder	4	Spring Tooth Tillage Attachment	58
Leveling the Planter	4	Specifications	64
Tractor Wheel Tread	4		
Transport Links	5		
Planting Depth	9		
Power Drilling (Hill-Drop Planter)	13		
Range of Distribution and Planting Distances	14, 15		

CLICK ANYWHERE FOR MORE DETAILS



56 Hill-Drop Planter - 28-Inch Rows.

B-12913 B

purchase full manual at




56 Hill-Drop Planter - 40-Inch Rows.


A-77363 B

CLICK ANYWHERE FOR MORE DETAILS

SETTING UP

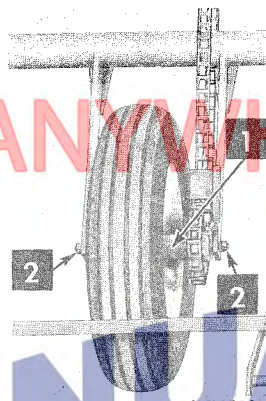

Illustr. 43

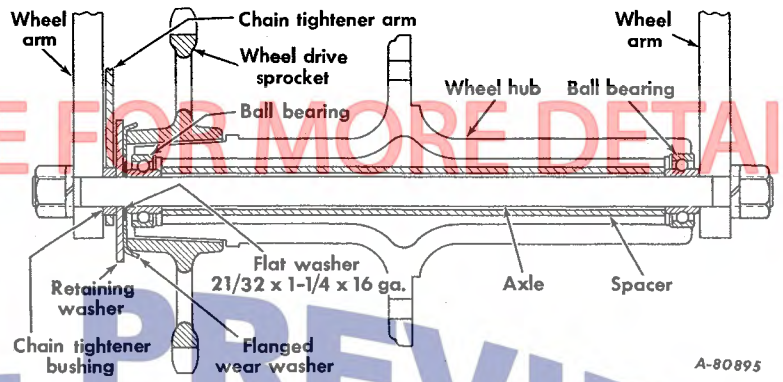

Illustr. 43A

A-80895



Illustr. 43B

A-74529E



Illustr. 43C

4. Slide the cylinder support clip over the end of the support and bolt the cylinder support to the wheel frame center bearing, using two bolts.

5. Bolt the cylinder support clip to the main frame front pipe.

6. Collapse the hydraulic cylinder and install it as shown in Illustr. 43B.

7. For storage purposes lay the transport links over the hitch side sheet lower spreader plate and secure the ends with the pin in the cylinder support. This pin will also secure the cylinder retaining clip "A".

8. Bolt the hose support to the hitch clevis.

9. Hang the hoses in the hook at the top of the support.