

John Deere

CLICK ANYWHERE FOR MORE DETAILS

MODEL:

146 Farm Loader

MANUAL PREVIEW

**OPERATOR'S
MANUAL**



purchase full manual

JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. JOHN DEERE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-O-OMW37920

CLICK ANYWHERE FOR MORE DETAILS

146

Farm Loader

MANUAL PREVIEW

OPERATORS MANUAL

146

Farm Loader

OMW37920 Issue B6 English

JENSALES®

purchase full manual at

JENSALES.COM

or Call 800-443-0625

**John Deere Welland Works
OMW37920 Issue B6**

CLICK ANYWHERE FOR MORE DETAILS

**LITHO IN U.S.A.
ENGLISH**

Contents

	Page		Page
Safety	05-1	Operating the Loader	
Preparing the Tractor		Preoperating Checks	35-1
Approved Tractors	10-1	Understanding Round Bale Handling Hazards	35-1
Using Roll-Over Protective Structure (ROPS)	10-1	Avoid Tractor Roll-Over When Handling	
Approved Front Tires	10-2	Round Bales	35-2
Checking Front Wheel Hardware	10-3	Picking Up a Round Bale	35-2
Selecting Front Tread	10-3	Handling Round Bales on a Slope	35-3
Selecting Rear Tread	10-3	Transporting Round Bales	35-3
Adding Rear Ballast	10-4	Storing Round Bales	35-3
Locking Out PTO Clutch	10-5	Removing Material From a Pile	35-4
Operating With Remote Cylinder		Removing Material From a Pile With	
Control Valve (RCCV)	10-5	Silage Grapple	35-4
Setting Hydraulic Speed	10-5	Carrying Material	35-5
Using RCCV Lockout Stops	10-6	Loading Operations	35-5
Operating with Independent		Leveling and Scraping Forward	35-5
Control Valve (ICV)	10-6	Leveling in Reverse	35-6
Controls		Digging	35-6
Using Float	15-1	Backfilling	35-6
Using RCCV Lockouts	15-1	Attachments	
Operating Loader With RCCV	15-2	Materials Buckets	40-1
Operating Loader with ICV	15-2	Cutting Edges	40-1
Operating Grapple Cylinder ICV	15-3	Bucket Tines	40-2
Using Regenerative Dump Position ICV	15-3	Extensions for 1524 mm (60 in.) Bucket	40-2
Relieving Hydraulic Pressure ICV		Bucket Level Indicator	40-3
Loader Attached	15-4	Forklift	40-3
Loader Not Attached	15-4	Round Bale Grapple	40-4
Detaching the Loader		Silage Grapple	40-4
Relieving Hydraulic Pressure RCCV	20-1	Lubrication and Maintenance	
Relieving Hydraulic Pressure ICV	20-2	Selecting Grease	45-1
Disconnecting Hoses RCCV	20-1	Lubricating Loader	45-2
Disconnecting Hose ICV	20-3	Checking Transmission/Hydraulic Oil Level	45-3
Detaching the Loader	20-3	Tightening Mounting Frame Hardware	45-3
Attaching the Loader		Troubleshooting	50-1
Attaching the Loader	25-1	Service	
Relieving Hydraulic Pressure RCCV	25-2	Checking Bolt Torque	55-2
Relieving Hydraulic Pressure ICV	25-3	Tightening Hydraulic Fittings	55-3
Connecting Hoses RCCV	25-3	Installing Packing Correctly	55-5
Connecting Hoses ICV	25-4	Installing Rod Seals Correctly	55-5
Check Hydraulic Connections	25-4	Cylinder Components	55-6
Transporting	30-1	Changing Control Lever Position	55-7
		Storage	60-1
		Crime Prevention	65-1
		Specifications	70-1
		Alpha Index	75-1