

John Deere

CLICK ANYWHERE FOR MORE DETAILS

MODEL:

214 Series Balers

MANUAL PREVIEW

PARTS
MANUAL



purchase full manual


JENSALES.COM
or Call 800-443-0625

CLICK ANYWHERE FOR MORE DETAILS

THIS IS A MANUAL PRODUCED BY JENSALES INC. WITHOUT THE AUTHORIZATION OF
JOHN DEERE OR IT'S SUCCESSORS. JOHN DEERE AND IT'S SUCCESSORS
ARE NOT RESPONSIBLE FOR THE QUALITY OR ACCURACY OF THIS MANUAL.

TRADE MARKS AND TRADE NAMES CONTAINED AND USED HEREIN ARE THOSE OF OTHERS,
AND ARE USED HERE IN A DESCRIPTIVE SENSE TO REFER TO THE PRODUCTS OF OTHERS.

JD-P-PC551

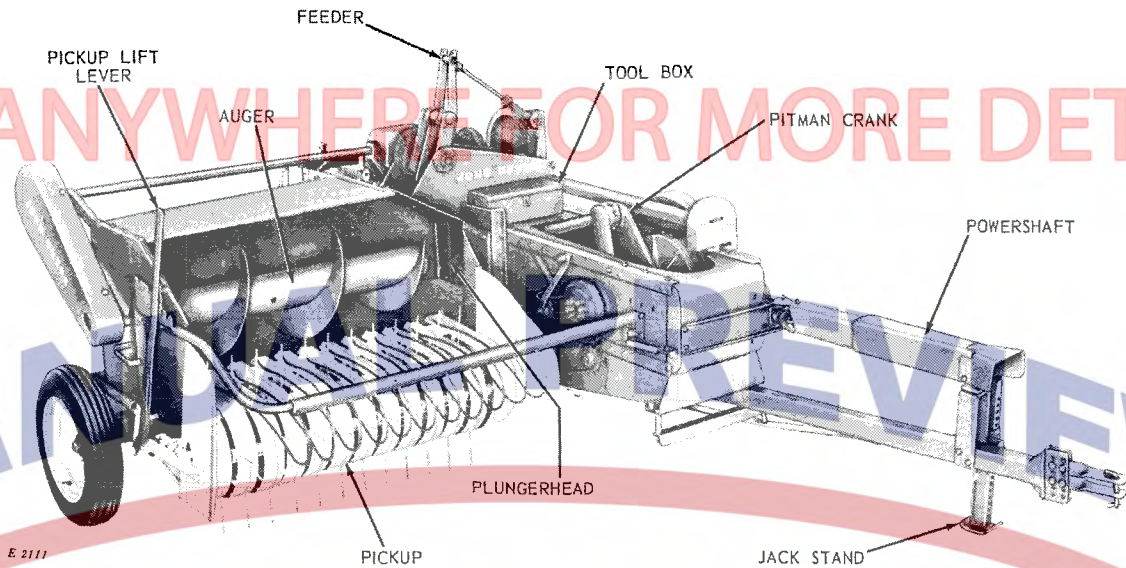

John Deere 214T Automatic Baler with Power Take-Off

214T Automatic Baler Manufactured (1957-)
 214W Automatic Baler Manufactured (1957-1959)
 214WS Automatic Baler Manufactured (1958-)


INDEX

	Page		Page
Auger	41	Needle guards	9
Auger housing	40	Needle lift shaft (214W only)	20
Auger slip clutch	25	Needle lift shaft and supports (214T only) ..	14-15
Bale case	7	Needle lift shaft and supports (214WS only) ..	18-19
Bevel gear case	4-5	Needle stop (214W only)	17
Chain box (1000 rpm)	48	Operator's manual	76
Compressors	66	Overrunning and slip clutch (PTO)	47
Counter	55	Pickup cylinder	50
Crank, drive gear, and housing	6	Pickup gauge wheel	57
Decalcomania set	68	Pickup idlers	52
Dual wheels	68	Pickup lift lever and compressors	51
Electric starting equipment (engine)	69	Pickup slip clutch	13
Engine .. See VH4D Engine Catalog PC-561		Pickup strippers	49
Engine drive	62-63	Plungerhead (steel slide type)	10-11
Engine mounting	61	Plungerhead (roller type)	12-13
Extension bale case	36	Plungerhead guides	8
Feeder	37	Plungerhead pitman	5
Hay ramp	65	Plungerhead safety stop	11
Feeder drive	38-39	Powershaft, shields, and support (PTO) ..	56-57
Feeder supports	35	Power take-off shields	53
Flywheel	3	Side drop bale chute (1963-)	39
Gripper and shear assembly (214WS only) ..	24-25	Tool box	52
Hook-up universal joints (Rockwell-Standard) ..	59	Tongue	53
Hook-up universal joints (Mechanics)	58	Tongue jack	54
Hook-up universal joints (with integral shield) ..	60	Trip dog (214T and 214WS only)	33
Hydraulic bale tension unit	70-71	Tucker fingers (214T only)	27
Hydraulic cylinder hose supports	55	Twine box (214T only)	42
Hydraulic pump	72-73	Tying mechanism mounting (214W only) ..	16-17
Hydraulic cylinder, bale tension unit	71	Upper hay dogs (214T and 214WS only) ..	28
Hydraulic wagon hitch	67	Upper hay dogs (214W only)	23
Knotter (214T only)	21	Wagon hitch	64
Left-hand wheel extension	76	Wire alarm	65
Lower hay dog	31	Wire boxes (214W only)	43
Main frame and wheels	2-3	Wire boxes (214WS only)	44-45
Measuring wheel	29	Wire guides (214W only)	46
Multi-Luber pump and harness	74-75	Wire guides (214WS only)	26
Needles and frame (214T only)	30-31	Wire twister (214W only)	22-23
Needles and frame (214W only)	32-33		
Needles and frame (214WS only)	34-35		

EXPLANATION OF SUBSTITUTION INFORMATION


Part substitution information given on any page is applicable only to parts listed and illustrated on that page.

MAIN FRAME AND WHEELS

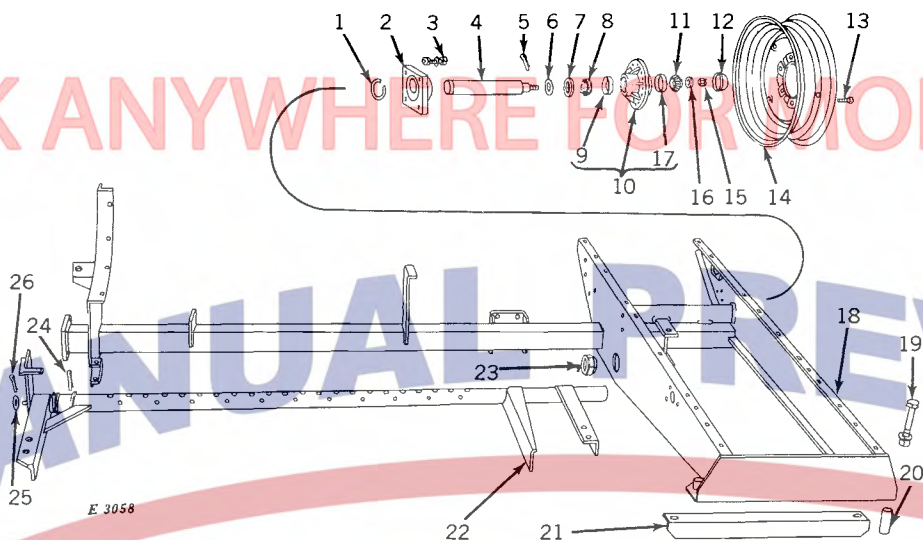

Key	Part No.	Serial No.	Description
1	BP 13616 E	(-11075)	Ring, snap, L.H. (packed 2 in a pkg.)
	C 3938 E	(11076-)	Ring, snap, L.H. (packed 2 in a pkg.)
	C 3938 E	(-)	Ring, snap, R.H. (packed 2 in a pkg.)
2	BP 1741 E	(-11075)	Plate, spindle, L.H.
	E 12681 E	(11076-)	Plate, spindle, L.H.
	BP 1686 E	(-11075)	Plate, spindle, R.H.
	E 12684 E	(11076-)	Plate, spindle, R.H.
3	19H 1734	(-)	Screw, cap, 5/8" x 2" (8 used)
	14H 760	(-)	Nut, hex., 5/8" (8 used)
	12H 294	(-)	Washer, lock, 5/8" (8 used)
4	AM 3509 E	(-)	Spindle and nut, L.H. (sub. for BP14181E)
	AM 3496 E	(-11075)	Spindle and nut, R.H. (sub. for BP14227E)
	AE 14599 E	(11076-16800)	Spindle and nut, R.H. (sub. for E11584E or AE13075E)
	AE 13785 E	(16801-)	Spindle and nut, R.H.
5	11H 239	(-)	Pin, cotter, 5/32" x 1" (2 used)
6	E 18995 E	(-)	Spacer, bearing, L.H. (sub. for BP14183E)
	E 17937 E	(-)	Spacer, bearing, R.H. (sub. for E11583E)
7	BP 13829 E	(-)	Closure, felt, L.H.
	BP 13713 E	(-11075)	Closure, felt, R.H. (packed 4 in a pkg.)
	E 18979 E	(11076-)	Closure, felt, R.H. (sub. for E12292E) (packed 2 in a pkg.)
8	JD 8144	(-)	Cone, bearing, L.H.
	JD 7362	(-11075)	Cone, bearing, R.H.
	JD 8194	(11076-)	Cone, bearing, R.H.
9	JD 8205	(-)	Cup, bearing, L.H.
	JD 7409	(-11075)	Cup, bearing, R.H.
	JD 8230	(11076-)	Cup, bearing, R.H.
10	AM 3463 E	(-)	Hub, L.H. (sub. for BP1743E)
	AM 3462 E	(-11075)	Hub, R.H. (sub. for BP1683E)
	AE 12061 E	(11076-16800)	Hub, R.H. (sub. for E11582E)
	AE 14546 E	(16801-)	Hub, R.H. (sub. for E19124E)
11	JD 8187	(-)	Cone, bearing, L.H.
	JD 7372	(-11075)	Cone, bearing, R.H.
	JD 8188	(11076-16800)	Cone, bearing, R.H.
	JD 8935	(16801-)	Cone, bearing, R.H.
12	BP 13226 E	(-11075)	Cap, hub (2 used)
	BP 13226 E	(11076-)	Cap, hub, L.H.
	T 14685 T	(11076-16800)	Cap, hub, R.H.
	N 52048 N	(16801-)	Cap, hub, R.H.
13	JD 19	(-)	Bolt, wheel (10 used)
14	JD 681	(-)	Wheel, L.H. (for 7:50 x 16 tire)
	JD 686	(-)	Wheel, R.H. (sub. for JD1384 or JD455) (for 5:00 x 15 tire)
15	14H 534	(-)	Nut, hex., slotted, fine thread, 3/4" (2 used)
16	BP 12720 E	(-11075)	Washer, bearing retainer (2 used) (packed 4 in a pkg.)
	BP 12720 E	(11076-)	Washer, bearing retainer, L.H. (packed 4 in a pkg.)
	C 2214 E	(11076-)	Washer, bearing retainer, R.H.
17	JD 8225	(-)	Cup, bearing, L.H.
	JD 7409	(-11075)	Cup, bearing, R.H.
	JD 8226	(11076-16800)	Cup, bearing, R.H.
	JD 8253	(16801-)	Cup, bearing, R.H.

BEVEL GEAR CASE

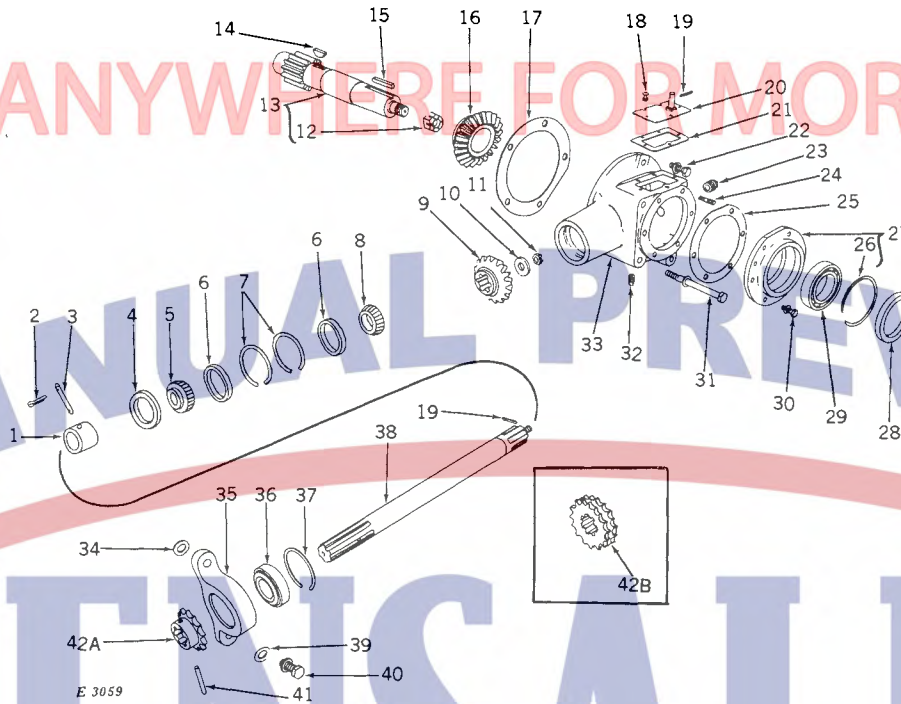


Key	Part No.	Serial No.	Description
1	BP 13896 E	(-)	Retainer, bearing (packed 2 in a pkg.)
2	11H 211	(-)	Pin, cotter, 1/8" x 3/4" (2 used)
3	BP 13752 E	(-)	Pin, bearing retainer (packed 4 in a pkg.)
4	BP 13899 E	(-)	Seal, bevel gear shaft (packed 2 in a pkg.)
5	JD 7362	(-)	Cone, bearing, bevel gear shaft, front
6	JD 7409	(-)	Cup, bearing, bevel gear shaft (2 used)
7	BP 13618 E	(-)	Ring, retaining, bevel gear case (2 used) (packed 2 in a pkg.)
8	JD 7372	(-)	Cone, bearing, bevel gear shaft, rear
9	BP 14119 E	(-)	Gear, bevel, 16-tooth
10	BP 14099 E	(-)	Washer, retaining, shaft
11	14H 522	(-)	Nut, hex., slotted, fine thread, 1/2"
12	14H 540	(-)	Nut, hex., slotted, 1"
13	AM 3512 E	(-)	Pinion, crank, and nut (sub. for BP14121E)
14	26H 100	(-)	Key, Woodruff, no. 25, 5/16" x 1-1/2"
15	BP 13895 E	(-)	Key, shear pin arm, flywheel (packed 4 in a pkg.)
16	BP 14526 E	(-)	Gear, bevel, 22-tooth (sub. for BP14122E)
17	BP 13611 E	(-)	Gasket, housing, bevel gear (packed 2 in a pkg.)
18	21H 1016	(-)	Screw, mach., 1/4" x 1/2" (5 used)
	12H 302	(-)	Washer, lock, 1/4" (5 used)
19	11H 234	(-)	Pin, cotter, 3/32" x 1" (2 used)
20	AM 3107 E	(-)	Cover, housing, bevel gear
21	BP 13610 E	(-)	Gasket, cover, housing, bevel gear (packed 5 a in pkg.)
22	19H 1831	(-)	Screw, cap, 1/2" x 2" (2 used)
	12H 301	(-)	Washer, lock, 1/2" (2 used)
23	15H 237	(-)	Plug, pipe, 1/2"
24	BP 13686 E	(-)	Stud, end cap (3 used) (packed 3 in a pkg.)
25	BP 14117 E	(-)	Shim, end cap (use quantity required) (packed 10 in a pkg.)
26	BP 13620 E	(-)	Ring, retaining, bearing (2 used) (packed 2 in a pkg.)
27	AE 11682 E	(-)	Cap, end, with retaining rings (sub. for BP1721E or E12840E)
28	BP 14368 E	(-)	Seal, bearing
29	JD 7123	(-)	Bearing, ball
30	19H 1731	(-)	Screw, cap, 3/8" x 1" (3 used)
	12H 304	(-)	Washer, lock, 3/8" (3 used)
31	19H 1993	(-)	Screw, cap, 1/2" x 5-1/4" (3 used)
32	15H 254	(-)	Plug, pipe, 1/4"
33	E 10075 E	(-)	Housing, bevel gear (sub. for BP1724E)
34	BP 14115 E	(-)	Shim, support, bevel gear (use quantity required) (packed 10 in a pkg.)

BEVEL GEAR CASE -- Continued


Key	Part No.	Serial No.	Description
35	BP 1723 E	(-)	Support, shaft, bevel gear
36	JD 9301	(-)	Bearing, ball (sub. for JD9225)
37	BP 14118 E	(-)	Ring, retaining, bearing (packed 2 in a pkg.)
38	E 10074 E	(-)	Shaft, bevel gear (sub. for BP14100E or AM3494E)
39	24H 1341	(-)	Washer, 17/32" x 1" x .060"
40	19H 1721	(-)	Screw, cap, 1/2" x 1-1/2" (2 used)
	12H 301	(-)	Washer, lock, 1/2" (2 used)
41	25H 775	(-)	Pin, groove, type 5, 1/4" x 1-3/4"
42A	BP 14109 E	(-)	Sprocket, main drive, 13-tooth
42B	E 19843 E	(9577-)	Sprocket, double drive, 13-tooth

PLUNGERHEAD PITMAN

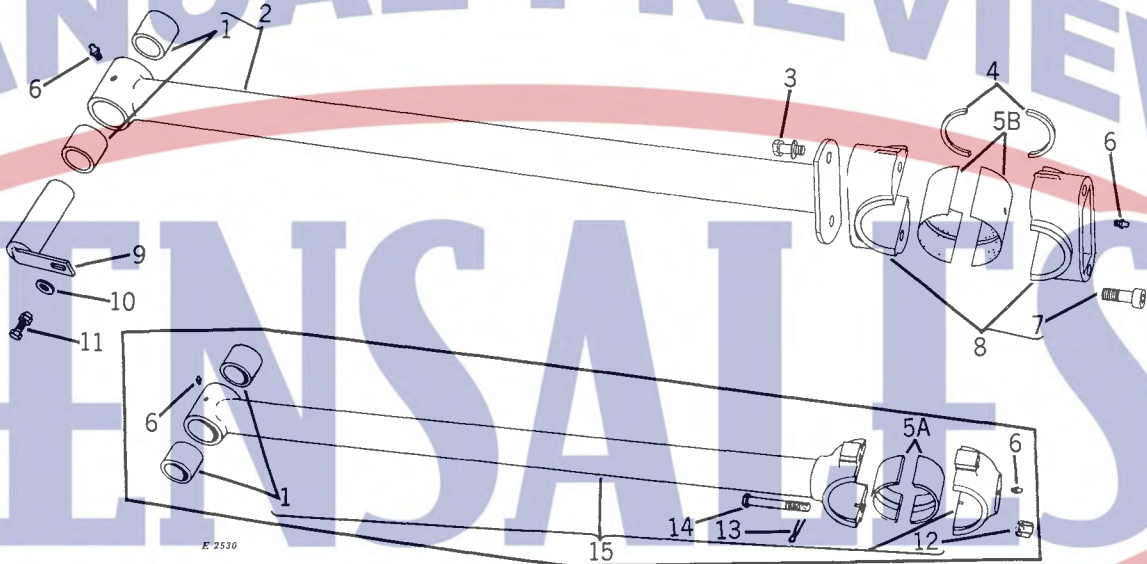


Key	Part No.	Serial No.	Description
1	BP 14284 E	(-)	Bushing (2 used) (packed 5 in a pkg.)
2	AE 13789 E	(15801-)	Pitman with bushings
3	19H 1822	(15801-)	Screw, cap, 7/16" x 1" (2 used)
	12H 293	(-)	Washer, lock, 7/16" (2 used)
4	E 17228 E	(15801-)	Seal (4 used)
5A	AM 3149 E	(-15800)	Inserts, bearing, two-halves (sub. for BP13319E)
	AE 14321 E	(-15800)	Inserts, bearing, two-halves (use with E14943E crank) (sub. for E14942E)
5B	AE 14265 E	(15801-)	Inserts, bearing, two-halves
6	JD 7797	(-)	Fitting, grease, straight, 1/4" (2 used)
7	19H 2219	(15801-)	Screw, socket, 7/16" x 1-1/2" (2 used)
8	AE 13788 E	(15801-)	End cap assembly (sub. for E17209E or E17210E)
9	AM 3280 E	(-)	Pin, wrist
10	24H 1307	(-)	Washer, 13/32" x 1" x .060"
11	19H 1731	(-)	Screw, cap, 3/8" x 1"
	BP 12233 E	(-)	Nut, elastic stop, 3/8" (packed 5 in a pkg.)
12	14H 566	(-15800)	Nut, slotted, fine thrd., 1/2" (2 used)
13	11H 234	(-15800)	Pin, cotter, 3/32" x 1" (2 used)
14	BP 13299 E	(-15800)	Bolt, pitman cap (2 used) (packed 2 in a pkg.)
15	AM 3285 E	(-15800)	Pitman assembly

BALE CASE

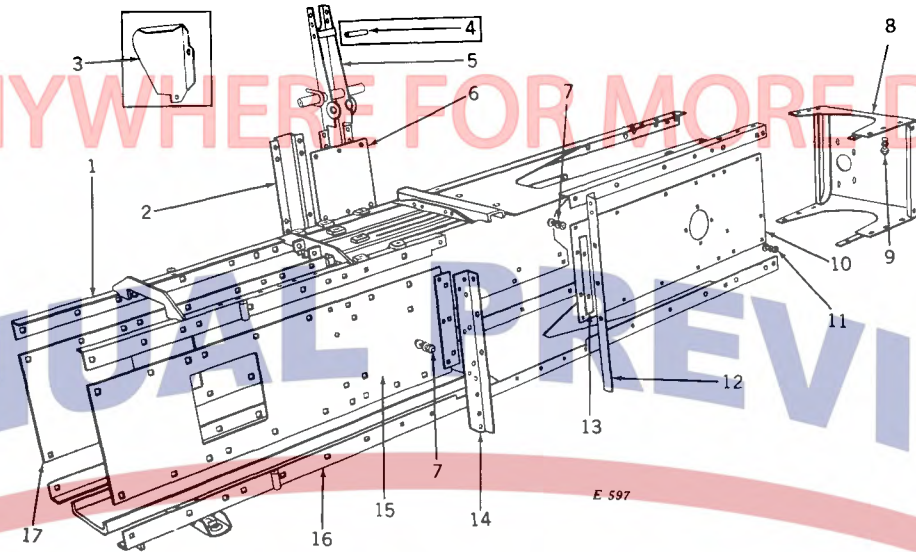

Key	Part No.	Serial No	Description
1	AE 10747 E	(-)	Top, bale case (214W only) (sub. for AM3266E)
	AE 10747 E	(-6605)	Top, bale case (214T only)
	AE 10866 E	(6606-9576)	Top, bale case (214T and 214WS only)
	AE 14943 E	(9577-)	Top, bale case (214T and 214WS only) (sub. for AE11543E or AE12261E)
2	BP 14377 E	(-)	Support, bale case
3	BP 13757 E	(-3373)	Shield, needle lift arm (214T only)
4	BP 13260 E	(-9576)	Sleeve, feeder pivot
5	AM 3243 E	(-6605)	Support, feeder pivot
	AE 10084 E	(6606-9576)	Support, feeder pivot
	AE 11560 E	(9577-)	Support, feeder pivot (214T and 214WS only)
6	BP 13461 E	(-)	Spacer, support
7	9H 34	(-)	Bolt, plow, no. 3, 5/16" x 1-3/8" (4 used)
	14H 785	(-)	Nut, hex., 5/16" (4 used)
	12H 303	(-)	Washer, lock, 5/16" (4 used)
8	AE 14946 E	(-)	Cap, bale case (sub. for AM3244E)
9	3H 1519	(-)	Bolt, cge., 3/8" x 1" (12 used)
	14H 812	(-)	Nut, hex., 3/8" (12 used)
	12H 304	(-)	Washer, lock, 3/8" (12 used)
10	E 12948 E	(-)	Section, side, front, R.H. (sub. for BP14258E)
11	3H 1524	(-)	Bolt, cge., 5/16" x 1" (15 used)
	14H 785	(-)	Nut, hex., 5/16" (15 used)
	12H 303	(-)	Washer, lock, 5/16" (15 used)
12	BP 14235 E	(-9576)	Angle, feeder, front
	E 12867 E	(9577-)	Angle, feeder front (214T and 214WS only)
13	BP 13445 E	(-)	Spacer, angle
14	BP 14229 E	(-9576)	Angle, mounting, stationary knife
15	AM 3262 E	(-)	Section, side, rear, R.H. (214W only)
	AM 3262 E	(-6605)	Section, side, rear, R.H. (214T only)
	AE 11526 E	(6606-)	Section, side, rear, R.H. (214T and 214WS only) (sub. for AE10862E)
16	AM 3265 E	(-)	Bottom, bale case (214W only)
	AM 3265 E	(-6605)	Bottom, bale case (214T only)
	AE 10867 E	(6606-9576)	Bottom, bale case (214T and 214WS only) (sub. AE14329E, AE13833E, E17286E, E12872E and E12873E)
	AE 11535 E	(9577-14850)	Bottom, bale case (214T and 214WS only) (sub. AE14329E, AE13833E, and E17286E)
17	AE 14329 E	(14851-)	Bottom, bale case (214T and 214WS only) (sub. for AE13835E)
	BP 14259 E	(-)	Side, bale case, L.H. (214W only)
	BP 14259 E	(-6605)	Side, bale case, L.H. (214T only)
	E 11653 E	(6606-9576)	Side, bale case, L.H. (214T and 214WS only)
	E 12893 E	(9577-)	Side, bale case, L.H. (214T and 214WS only)


PLUNGERHEAD GUIDES

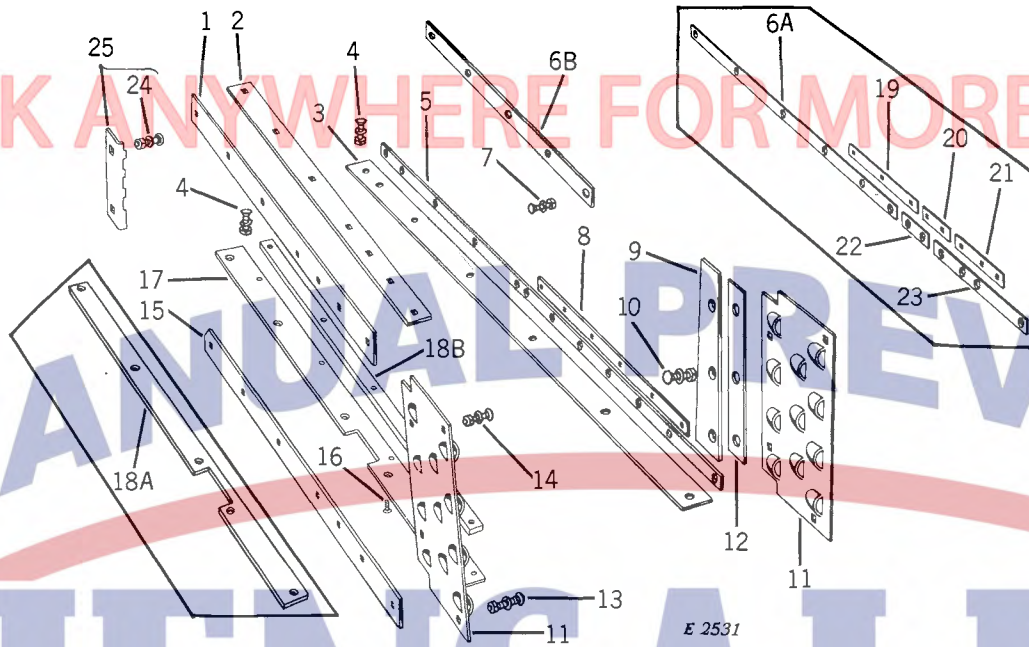

E 2531

Key	Part No.	Serial No.	Description
1	BP 13455 E	(-)	Guide, upper, L.H.
2	E 12875 E	(9577-)	Guide, top, L.H. (214T and 214WS only)
3	BP 14288 E	(-)	Guide, bottom, R.H.
4	9H 8	(-)	Bolt, plow, no. 3, 5/16" x 3/4" (13 used)
	14H 785	(-)	Nut, hex., 5/16" (13 used)
	12H 303	(-)	Washer, lock, 5/16" (13 used)
5	BP 13924 E	(-)	Guide, lower, R.H.
6A	BP 13920 E	(-9576)	Guide, front, upper, R.H.
6B	E 12874 E	(9577-)	Guide, front, upper, R.H. (214T and 214WS only)
7	9H 34	(-)	Bolt, plow, no. 3, 5/16" x 1-1/2" (19 used)
	14H 785	(-)	Nut, hex., 5/16" (19 used)
	12H 303	(-)	Washer, lock, 5/16" (19 used)
8	BP 14275 E	(-)	Spacer, lower guide
9	BP 14289 E	(-9576)	Knife, stationary (packed 2 in a pkg.)
	E 13832 E	(9577-)	Knife, stationary (214T and 214WS only)
10	9H 647	(-)	Bolt, plow, no. 3, 1/2" x 1-3/4" (3 used)
	14H 809	(-)	Nut, hex., 1/2" (3 used)
	12H 301	(-)	Washer, lock, 1/2" (3 used)
11	BP 14267 E	(-)	Resistor, hay, side (2 used)
12	BP 14276 E	(-)	Shim, stationary knife, .024" (use quantity required) (packed 5 in a pkg.)
	BP 14272 E	(-)	Shim, stationary knife, .010" (use quantity required) (packed 5 in a pkg.)
13	3H 1524	(-)	Bolt, cge., 5/16" x 1" (4 used)
	14H 785	(-)	Nut, hex., 5/16" (4 used)
	12H 303	(-)	Washer, lock, 5/16" (4 used)
14	3H 1268	(-)	Bolt, cge., 5/16" x 3/4" (4 used)
	14H 785	(-)	Nut, hex., 5/16" (4 used)
	12H 303	(-)	Washer, lock, 5/16" (4 used)
15	BP 13457 E	(-)	Guide, lower, L.H.
16	21H 1649	(15801-)	Screw, mach., 1/4" x 3/8" (5 used)
17	E 17273 E	(15801-)	Spacer, guide, bottom, L.H.
18A	BP 14287 E	(-15800)	Guide, bottom, L.H.
18B	E 16549 E	(15801-)	Guide, bottom, L.H.
19	BP 13444 E	(-9576)	Spacer, guide, upper front, R.H.
20	BP 13740 E	(-9576)	Spacer, upper center guide, R.H.
	BP 13741 E	(-9576)	Shim, upper center guide, R.H. (use quantity required)
21	BP 14270 E	(-9576)	Spacer, upper rear guide, R.H.
22	BP 13921 E	(-9576)	Guide, upper center, R.H.
23	BP 13922 E	(-9576)	Guide, upper rear, R.H.
24	3H 1463	(-)	Bolt, cge., 3/8" x 3/4" (2 used)
	14H 812	(-)	Nut, hex., 3/8" (2 used)
	12H 304	(-)	Washer, lock, 3/8" (2 used)
25	AE 14609 E	(-)	Scraper, plungerhead

NEEDLE GUARDS

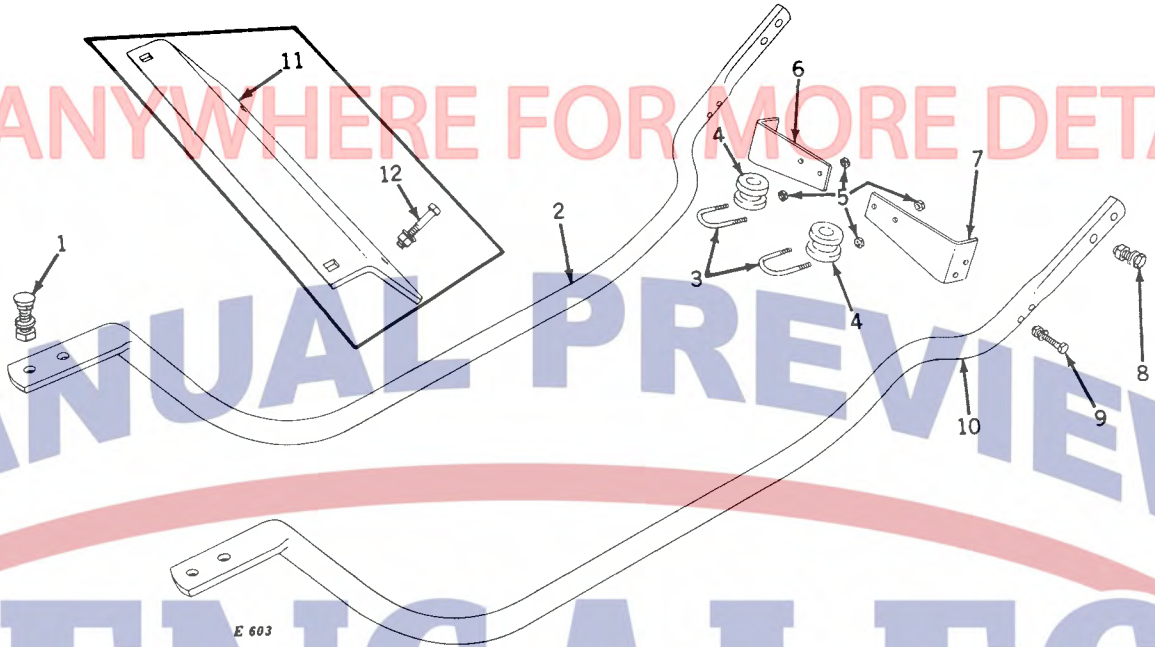


Key	Part No.	Serial No.	Description
1	9H 159	(-)	Bolt, plow, no. 3, 3/8" x 1-1/4" (4 used)
	14H 812	(-)	Nut, hex., 3/8" (4 used)
	12H 304	(-)	Washer, lock, 3/8" (4 used)
2	BP 14037 E	(-9576)	Guard, needle, L.H.
	E 12873 E	(9577-)	Guard, needle, L.H.
3	E 12362 E	(-)	U-bolt (sub. for BP13224E) (214T only) (packed 4 in a pkg.)
4	BP 13227 E	(-)	Guide, twine (2 used) (214T only) (packed 2 in a pkg.)
5	14H 786	(-)	Nut, hex., 1/4" (4 used) (214T only)
6	BP 14307 E	(-)	Bracket, twine guide, L.H. (214T only)
7	BP 14306 E	(-)	Bracket, twine guide, R.H. (214T only)
8	19H 1815	(-)	Screw, cap, 1/2" x 1-1/4" (4 used)
	14H 809	(-)	Nut, hex., 1/2" (4 used)
	12H 301	(-)	Washer, lock, 1/2" (4 used)
9	19H 1875	(-)	Screw, cap, 5/16" x 1-3/4" (4 used) (214T)
	14H 785	(-)	Nut, hex., 5/16" (4 used) (214T only)
	12H 303	(-)	Washer, lock, 5/16" (4 used) (214T only)
10	BP 14036 E	(-9576)	Guard, needle, R.H.
	E 12872 E	(9577-)	Guard, needle, R.H.
11	BP 14034 E	(-9576)	Support, needle guard, rear
12	3H 1525	(-9576)	Bolt, cge., 3/8" x 2" (2 used)
	14H 812	(-9576)	Nut, hex., 3/8" (2 used)
	12H 304	(-9576)	Washer, lock, 3/8" (2 used)

JENSALES.COM

or Call 800-443-0625

PLUNGERHEAD (Steel Slide Type)

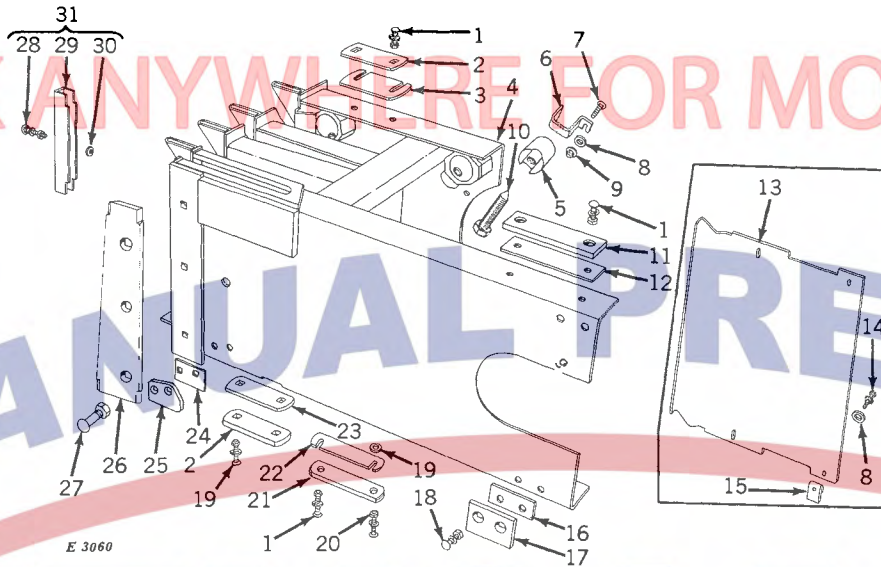

Key	Part No.	Serial No.	Description
1	9H 180	(-)	Bolt, plow, no. 3, 3/8" x 1-1/2" (5 used)
	14H 812	(-)	Nut, hex., 3/8" (5 used)
	12H 304	(-)	Washer, lock, 3/8" (5 used)
2	BP 13875 E	(-)	Plate, wear (3 used)
	E 17295 E	(-)	Plate, wear, bottom, rear, R.H. (heavy duty)
	E 17296 E	(-)	Plate, wear, bottom, front, R.H. (heavy duty)
3	E 11740 E	(-)	Shim, wear plate, .036" (use as required) (packed 4 in a pkg.)
	E 11741 E	(-)	Shim, wear plate, .060" (use as required) (packed 4 in a pkg.)
4	AM 3287 E	(-)	Plungerhead (214W only)
	AE 13836 E	(-)	Plungerhead (sub. for AM3287E, AE11536E or AE12602E) (214T and 214WS)
5	E 12289 E	(-)	Plug, wear (4 used) (sub. for BP13314E)
6	BP 14016 E	(-)	Lock, bolt (4 used)
7	3H 1544	(-)	Bolt, cge., 5/16" x 1-1/4" (4 used)
8	24H 1136	(-)	Washer, 11/32" x 3/4" x .060" (4 used)
9	BP 14019 E	(-)	Nut, lock (4 used) (packed 10 in a pkg.)
10	BP 14018 E	(-)	Bolt, adjusting (4 used) (packed 2 in a pkg.)
11	BP 13782 E	(-)	Plate, wear, upper, R.H.
12	BP 14271 E	(-)	Spacer, wear plate
	BP 13801 E	(-)	Shim, wear plate, .060" (use as required) (packed 10 in a pkg.)
	BP 14015 E	(-)	Shim, wear plate, .030" (use as required)
13	E 13464 E	(-14300)	Shield, R.H. (sub. for AE11880E)
14	19H 1900	(-14300)	Screw, cap, 5/16" x 3/4" (4 used)
	12H 303	(-14300)	Washer, lock, 5/16" (4 used)
15	E 13462 E	(-14300)	Clamp, shield (4 used)
16	BP 13788 E	(-)	Shim, wear plate, .036" (use as required) (packed 5 in a pkg.)
17	BP 14278 E	(-)	Plate, wear, front, R.H. (2 used) (sub. for E17294E)
18	9H 159	(-)	Bolt, plow, no. 3, 3/8" x 1-1/4" (8 used)
	14H 812	(-)	Nut, hex., 3/8" (8 used)
	12H 304	(-)	Washer, lock, 3/8" (8 used)
19	24H 1310	(-)	Washer, 13/32" x 1-1/8" x .105"
20	10H 222	(-)	Bolt, plow, no. 3, 3/8" x 3"
	14H 812	(-)	Nut, hex., 3/8"
	12H 304	(-)	Washer, lock, 3/8"
21	BP 14273 E	(-)	Plate, wear, lower, L.H.
	E 17295 E	(-)	Plate, wear, lower, L.H. (heavy duty)
22	BP 14279 E	(-)	Shim, wear plate, lower, L.H., .060" (use as required) (packed 5 in a pkg.)
	E 10506 E	(-)	Shim, wear plate, lower, L.H., .036" (use as required)
23	BP 14274 E	(-)	Spacer, wear plate, lower, R.H.
	E 17282 E	(-)	Spacer, wear plate, lower, R.H. (heavy duty)
24	BP 13743 E	(14851-)	Shim, wear plate, rear, R.H., .007" (use as required) (packed 5 in a pkg.)
	BP 13744 E	(14851-)	Shim, wear plate, rear, R.H., .024" (use as required) (packed 5 in a pkg.)
25	E 17298 E	(14851-)	Plate, wear, rear, R.H.
26	E 17299 E	(-)	Knife, plungerhead (sub. for BP13321E)